

Index

A

- Accelerator cable** — 53, 141
- Air conditioning**
 - check and maintenance — 123
 - compressor — 124
 - condenser — 124
 - control assembly — 121
 - general information — 123
- Air filter** — 46
- Air flow meter** — 135
- Air inlet tubes** — 134
- Air regulator** — 141
- Alternator**
 - general information — 151
 - removal and installation — 152
 - testing — 151
- Antenna** — 260
- Antifreeze** — 117
- Automatic temperature control system** — 125
- Automatic transmission**
 - fluid and filter change — 59
 - general information — 179
 - inhibitor switch — 180
 - kickdown switch — 181
 - overdrive switch — 184
 - power pattern switch — 184
- Auxiliary air control valve** — 141
- Axles**
 - assembly — 199, 201
 - boot replacement — 196
 - disassembly — 199, 201
 - general information — 196
 - removal and installation — 196

B

- Back up light switch** — 176
- Balljoints** — 222
- Battery**
 - electrolyte — 36
 - replacement — 42, 233
 - servicing — 42, 233
- Block**
 - cleaning — 103
 - inspection — 104
- Blower motor** — 121
- Body**
 - front apron — 244
 - general information — 235
 - maintenance — 235
 - repair — 236, 237
 - vinyl trim — 235
- Booster battery starting** — 18

Brake

- bleeding — 213
- caliper — 209
- checking — 54
- general information — 204
- light switch — 215
- lines — 213
- master cylinder — 211
- pads — 205
- pedal — 215
- power booster — 212, 213
- rotor — 210
- Break-in** — 115
- Bumpers** — 246
- Buying parts** — 11

C

- Camshaft**
 - bearings — 105
 - inspection — 105
- Carrier assembly**
 - front oil seal — 195
 - mount — 203
 - removal and installation — 195
 - side oil seal — 196
- Charging system**
 - general information — 151
 - testing — 151
- Chassis lubrication** — 53
- Chemicals** — 21
- Clutch**
 - bleeding — 191
 - damper — 191
 - diagnosis — 186
 - fluid level — 38
 - general information — 186
 - hydraulic system bleeding — 191
 - inspection — 187
 - master cylinder — 190
 - operating cylinder — 191
 - pedal — 192
 - pilot bearing — 190
 - release bearing — 188
 - removal and installation — 186
 - safety switch — 192
 - slave cylinder — 191
 - throw out bearing — 188
- Coil** — 149
- Compression check** — 48
- Connecting rod**
 - inspection — 107
 - installation — 113
 - removal — 102

Console — 249
Console switches — 265
Conversion factors — 22
Coolant — 117
Coolant level — 36
Cooling system
 checking — 51
 coolant level — 36
 servicing — 52
 temperature sending unit — 120
Crank angle sensor — 148
Crankshaft
 bearing clearance — 109
 damper — 76
 inspection — 108
 installation — 111
 oil seals — 79, 83, 111
 pilot bearing — 190
 removal — 103
Cruise control — 264
Cylinder head
 assembly — 98
 cleaning — 95
 disassembly — 93
 inspection — 95
 removal and installation — 80
 temperature sensor — 135

D

Damper — 76
Detonation sensor — 137
Differential
 carrier — 195
 front oil seal — 195
 general information — 192
 mount — 203
 oil change — 60
 removal and installation — 195
 side oil seal — 196
Dimensions — 8
Distributor
 checking — 44
 removal and installation — 147
Door
 electric lock solenoid — 244, 266
 latch — 240
 lock cylinder — 241
 mirror — 265
 striker — 240
 trim panel — 239
Driveaxle
 assembly — 199, 201
 boot replacement — 196
 disassembly — 199, 201
 general information — 196
 removal and installation — 196
Drivebelts — 45
Drivetrain
 general information — 192
 inspection — 55
 insulators — 58
Driveshaft — 193

E

ECCS
 general description — 130
 self diagnosis — 154
EFI system general information — 129
EGR valve
 checking — 56
 control solenoid — 155
 removal and installation — 155

Electric cooling fan — 119, 122
Electric door lock solenoid — 244, 266
Electrical charging system
 general information — 151
 testing — 151
Electrical relays — 254
Electrical troubleshooting — 253
Electronic Fuel Injection general information — 129
Emergency brake adjustment — 214
Emergency jump starting — 18
Emergency relief valve — 156
Emission control systems — 153
Energy absorbers — 246
Engine
 block cleaning — 103
 block inspection — 104
 general information — 66
 mounts — 83
 oil and filter change — 41
 oil level — 35
 oil seals — 79, 83
 overhaul — 90, 91
 rebuilding alternatives — 90
 removal and installation — 84
Evaporative emissions control canister — 157
Exhaust Gas Recirculation (EGR) valve
 checking — 56
 control solenoid — 155
 removal and installation — 155
Exhaust gas sensor — 57, 136
Exhaust system
 checking — 55
 manifolds — 74
 removal and installation — 145

F

Fan — 119, 122
Fast idle control device — 139
Fluid level checks — 35
Flywheel — 188
Front apron — 244
Front oil seal — 79
Fuel filter replacement — 51
Fuel injection — 69, 129, 134, 135, 137, 139, 141, 143
Fuel injector — 137
Fuel injector cooling fan — 143
Fuel pressure regulator — 139
Fuel pressure relief — 50
Fuel pump — 141
Fuel system checking — 50
Fuel tank — 141
Fuel temperature sensor — 136
Fuses — 253
Fusible links — 253

G

General dimensions — 8

H

Hatch
 adjustment — 246
 latch — 247
 removal and installation — 246
Hazard flasher — 253
Head
 assembly — 98
 cleaning and inspection — 95
 disassembly — 93
 removal and installation — 80
 temperature sensor — 135

H

- Headlight**
 - adjustment — 256
 - bulb — 253
 - case — 245
 - motor — 256
 - replacement — 254
- Heater**
 - blower motor — 121
 - control assembly — 121
- Hinges and locks** — 237
- Hood**
 - raising — 237
 - release cable — 237
 - removal and installation — 237
- Hoses** — 56
- Hydraulic clutch fluid level** — 38
- Hydraulic system bleeding** — 213

I

- Identification numbers** — 8
- Idle speed** — 47
- Ignition**
 - coil — 149
 - general information — 146
 - switch — 265
 - timing — 47
- Instrument panel**
 - removal and installation — 261
 - switches — 261
- Intake collector** — 69
- Intake manifold** — 73
- Interior trim** — 250
- Introduction** — 5
- Initial start-up** — 115
- Injector cooling fan** — 143

J

- Jacking** — 19
- Jumpstarting** — 18

K

- Kickdown switch** — 181

L

- Lifters**
 - inspection — 105
 - removal and installation — 72
- Light bulbs** — 257
- Lenses** — 257
- Lubricants** — 21
- Lubrication** — 53

M

- Main bearing**
 - clearance — 109
 - inspection — 108
- Main oil seals** — 79, 83, 111
- Maintenance schedule** — 34
- Maintenance techniques** — 11
- Manual transmission oil change** — 59
- Master cylinder** — 211
- Metric conversion table** — 22
- Motor mounts** — 83

N

- Neutral safety switch** — 180, 192

O

- Oil and filter change** — 41
- Oil level** — 35
- Oil pan** — 99
- Oil pump** — 100
- Oil seals** — 79, 83, 111
- Overdrive switch** — 184
- Overhaul** — 90, 91
- Oxygen sensor** — 57, 136

P

- Parking brake adjustment** — 214
- PCV valve** — 51
- Pilot bearing** — 190
- Piston**
 - inspection — 107
 - installation — 113
 - removal — 102
- Piston ring installation** — 108
- Positive Crankcase Ventilation valve** — 51
- Power brake booster** — 212, 213
- Power pattern switch** — 184
- Power steering**
 - adjustment — 229
 - bleeding — 231
 - fluid level — 38
 - maintenance — 229
 - pump — 229
- Power transistor** — 139
- Power window switch** — 266
- Pressure regulator control solenoid valve** — 156

R

- Rack and pinion** — 232
- Radiator** — 119
- Radio**
 - antenna — 260
 - removal and installation — 259
 - speakers — 260
- Rear oil seal** — 83, 111
- Relays** — 254
- Remote control mirror** — 265
- Rings** — 108
- Rocker arm cover** — 71
- Rocker arms** — 72
- Rod**
 - bearing clearance — 113
 - bearing inspection — 108
 - inspection — 107
 - installation — 113
 - removal — 102
- Roof, T-top** — 249

S

- Safety** — 20
- Seat belts** — 60
- Shift linkage** — 179
- Shock absorbers**
 - adjustable — 233
 - rear — 223
- Spark plug wires** — 44
- Spark plugs** — 43, 49
- Speakers** — 260
- Speedometer** — 262

Speedometer pinion gear and seal — 162

Springs

front — 220

rear — 224

Stabilizer bar

front — 221

rear — 223

Starter motor — 150

Starter solenoid — 151

Starting system

general information — 149

testing — 150

Steering

adjustment — 229

general information — 226

lock — 229

maintenance — 229

play — 233

power system bleeding — 231

pump — 229

rack and pinion — 232

tie rod — 231

wheel — 228

Steering column switches — 264

Stop light switch — 215

Struts — 220

Suspension

arm — 225

general information — 217

tension rod — 221

Suspension and steering check — 55

Switches — 261

T

T-top — 249

Temperature sending unit — 120

Tension rod — 5

Theft warning system — 266

Thermostat — 117

Throttle chamber — 134

Throttle linkage — 53, 141

Throttle valve switch — 136, 156

Throw out bearing — 188

Tie rod — 231

Timing — 47

Timing belt — 76

Tire changing — 233

Tires — 38

Tools — 14

Top dead center — 68

Towing — 19

Transmission

extension housing oil seal — 161, 182

fluid level — 37

general information — 160, 179

inhibitor switch — 180

kickdown switch — 184

mounts — 58, 160

neutral start switch — 180

oil change — 59

oil level — 37

overdrive switch — 184

overhaul — 163, 171

power pattern control switch — 184

removal and installation — 161, 182

shift linkage — 179

Transverse link — 222

Troubleshooting — 23

Tune up — 34

Turbocharger

auxiliary air control valve — 141

detonation sensor — 137

emergency relief valve — 156

general information — 142

inspection — 143

precautions — 143

pressure regulator control solenoid valve — 156

removal and installation — 143

Turn signal

flasher — 253

switch — 264

U

Underhood hose checking — 56

Upholstery — 236

V

V6 engine general information — 66

V-belts — 45

Vacuum servo unit — 212, 213

Valve servicing — 97

Vehicle Identification Numbers — 8

Vibration damper — 76

Vinyl trim — 235

W

Warning lights — 61

Water pump

checking — 119

removal and installation — 120

Wheel bearings — 53, 219

Wheels — 38

Wheelbase — 8

Windshield washer fluid — 36

Wiper blades — 41

Wiper arm — 262

Wiper intermittent amplifier — 266

Wiper motor

front — 263

rear — 263

Wiring diagrams — 267

Working facilities — 17