



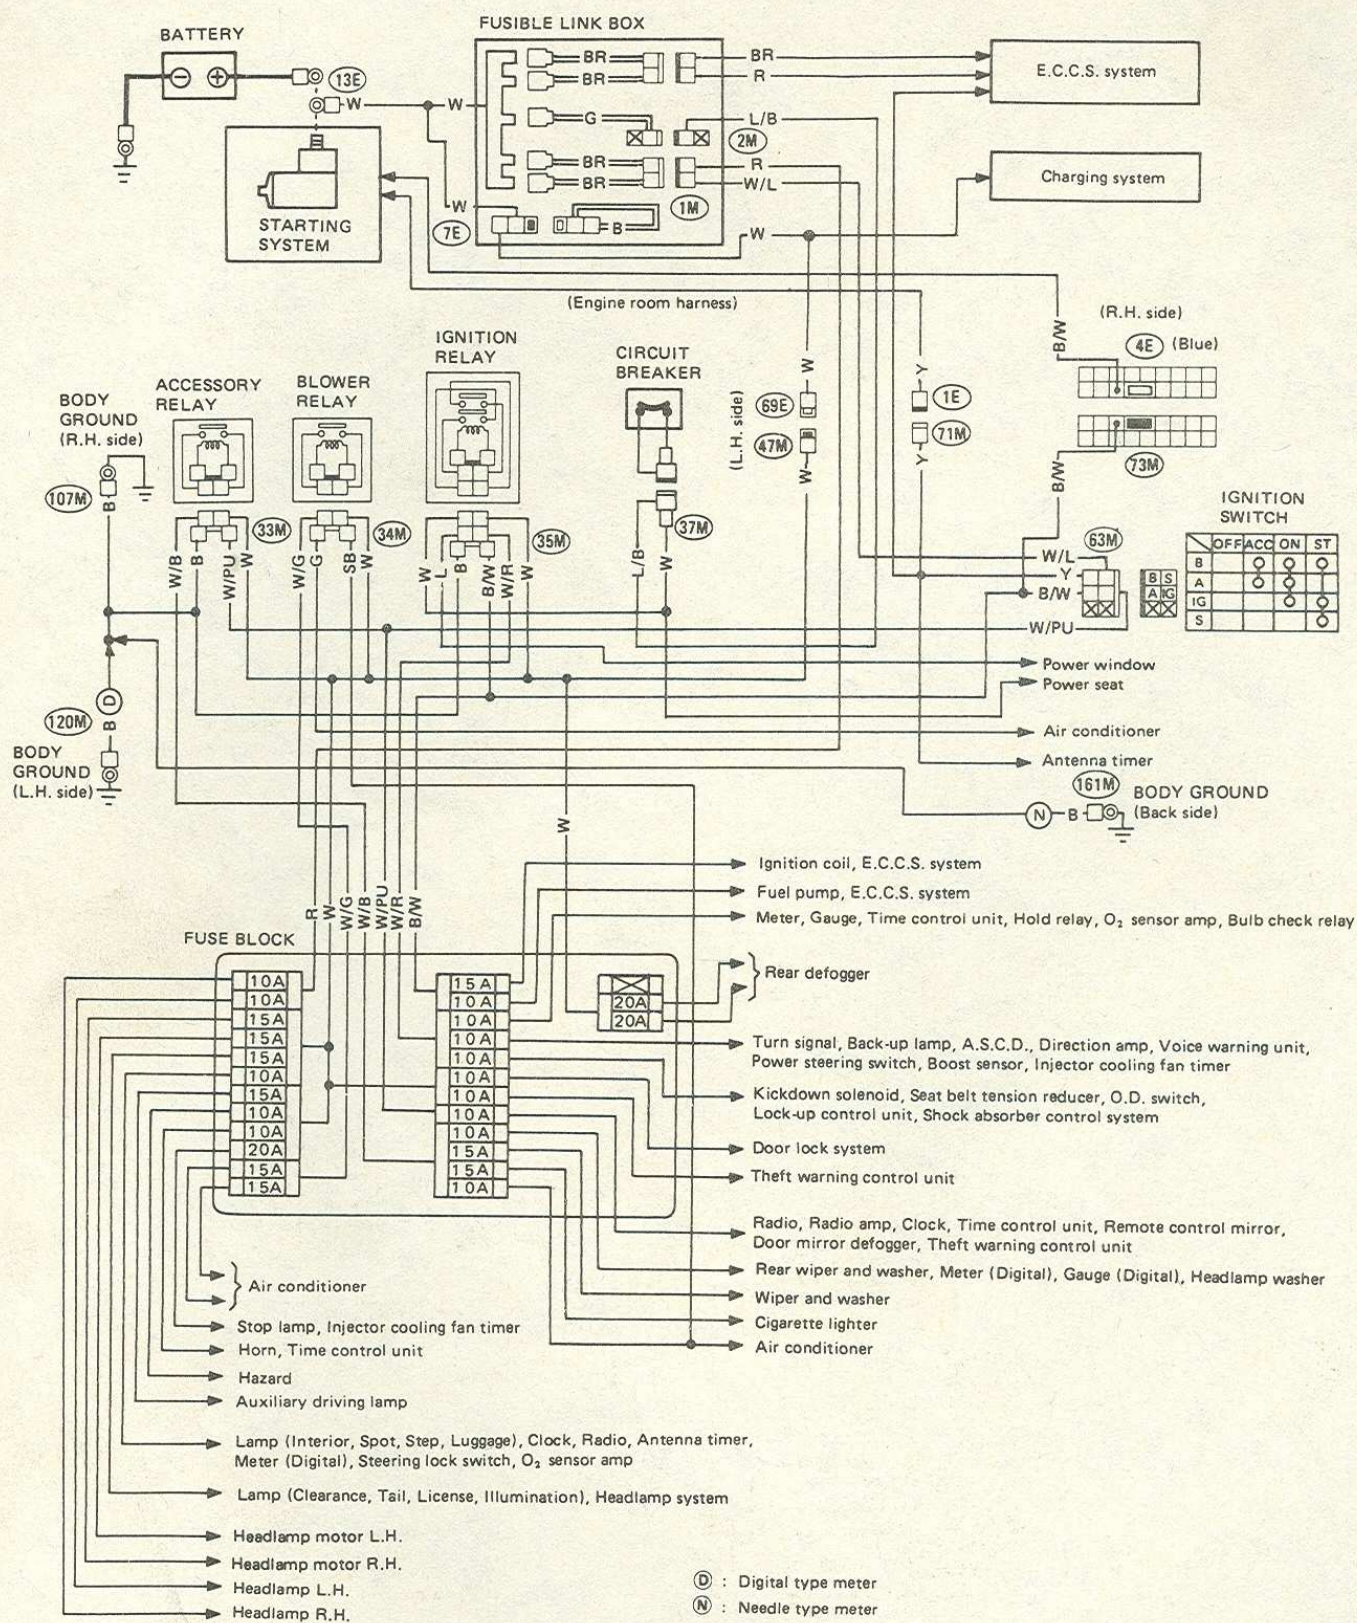


Power supply routing for Non-Turbo models


M/T MODELS

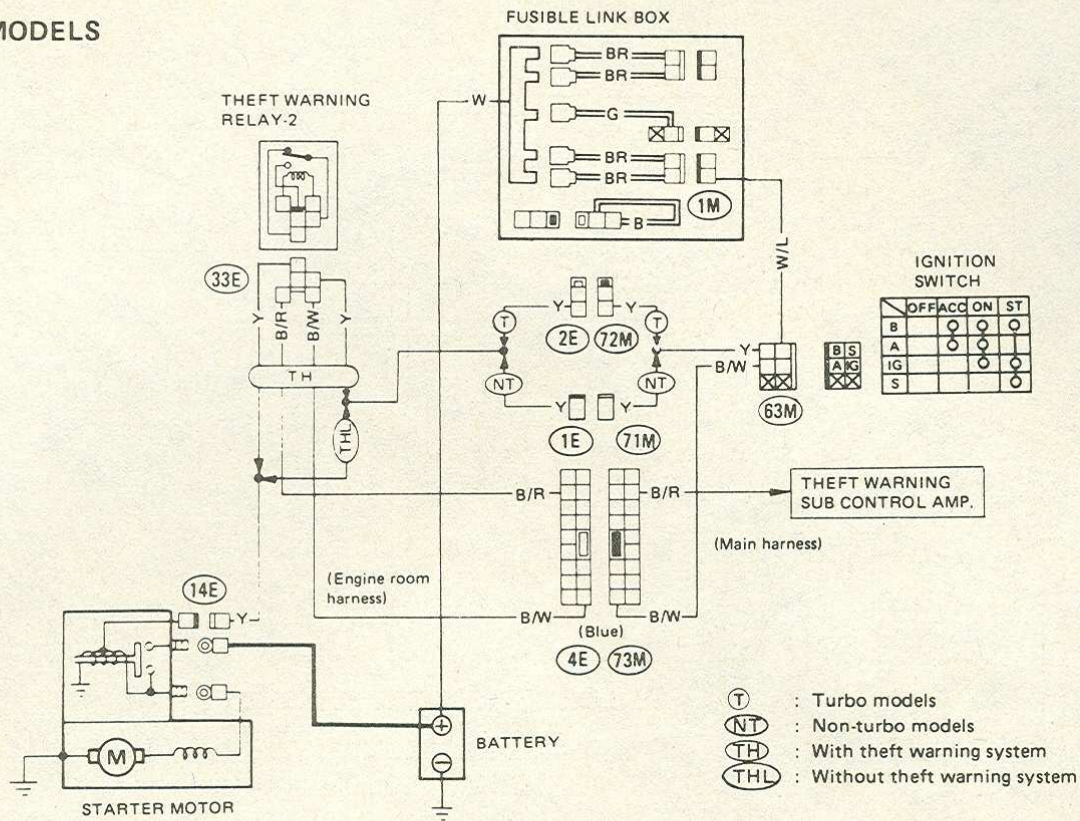


A/T MODELS

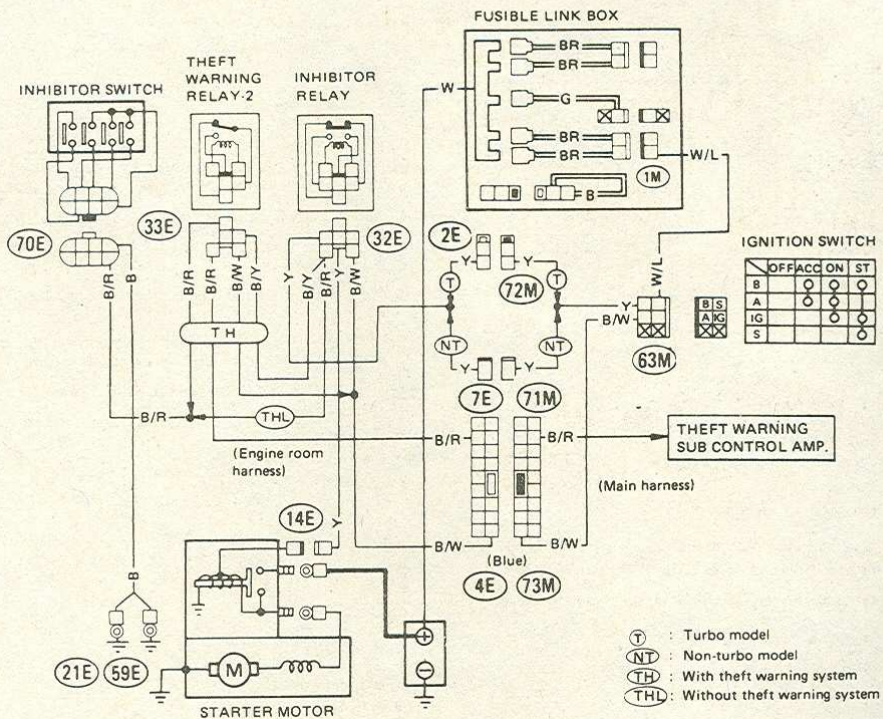


Starting system diagram with automatic and manual transmission models shown

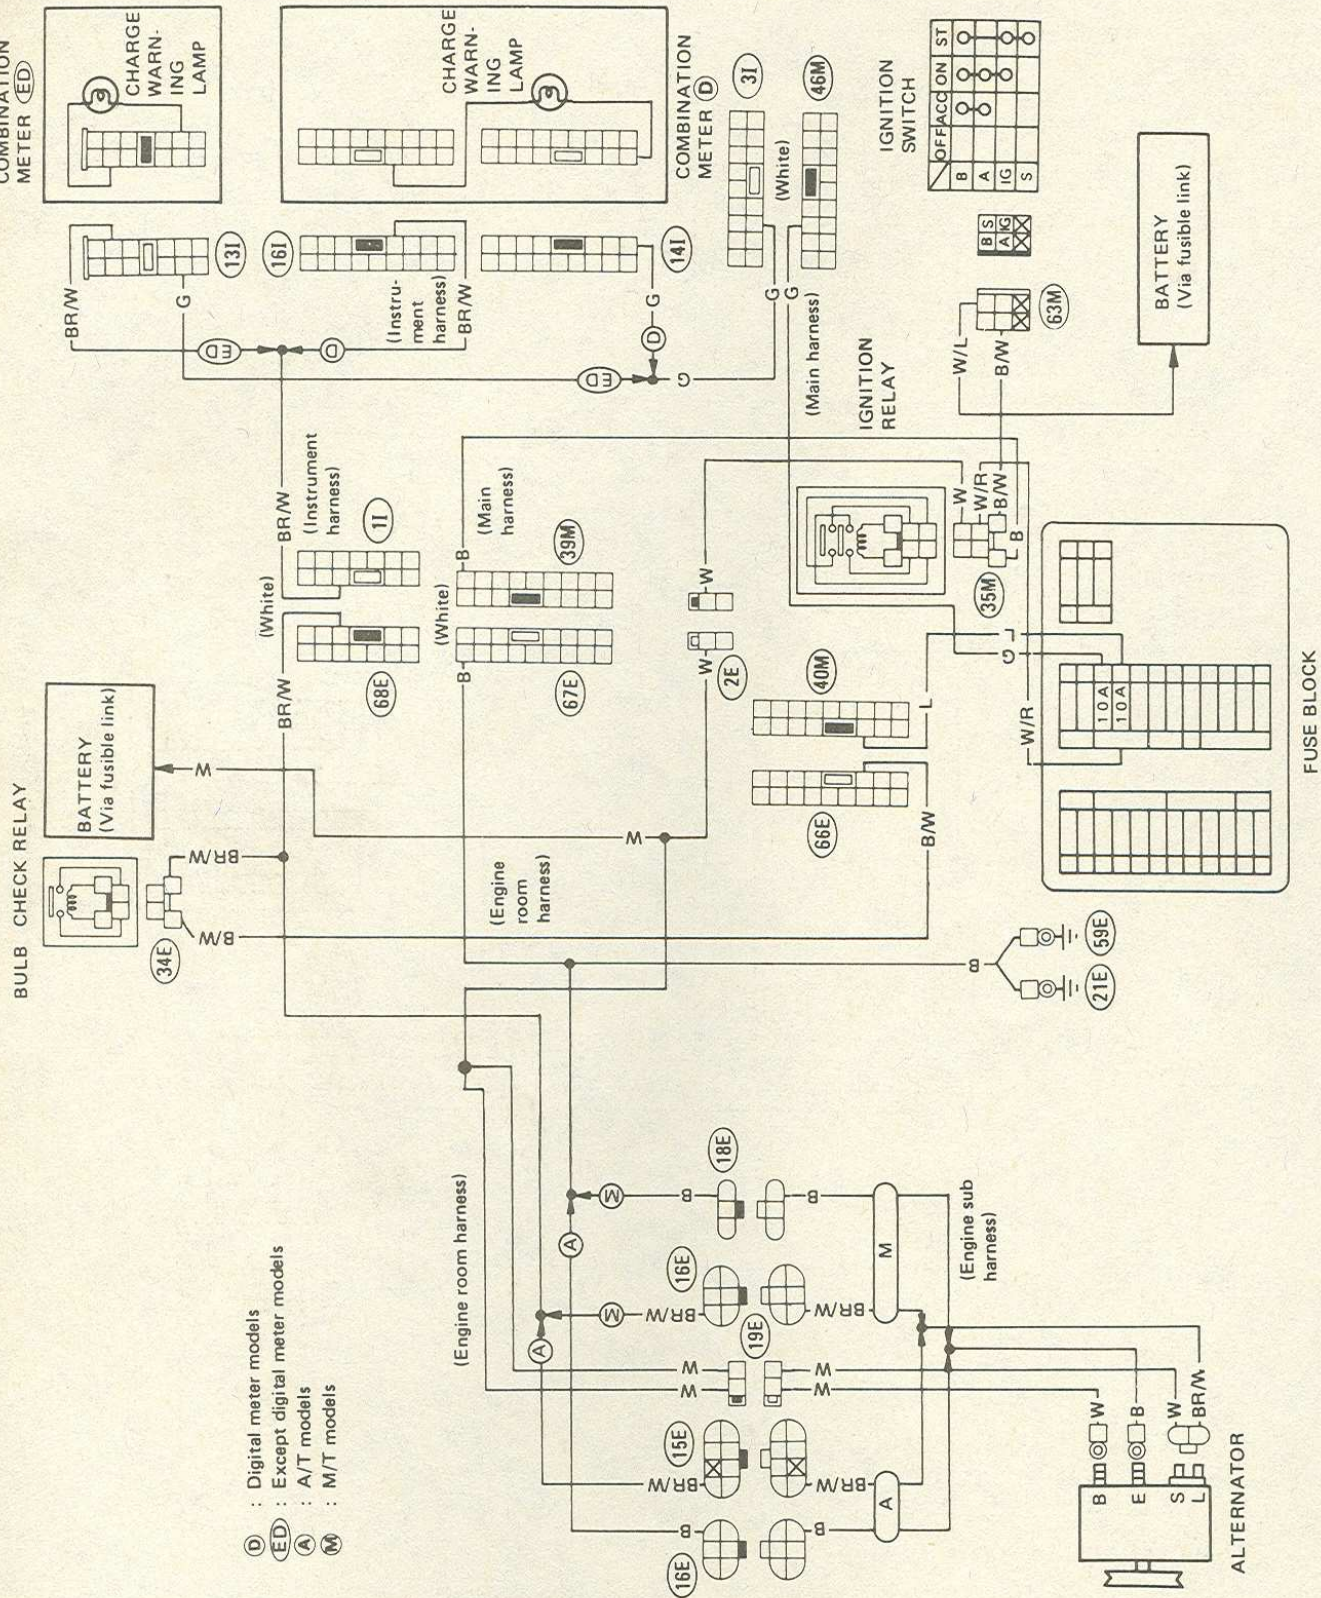


Turbo model charging system

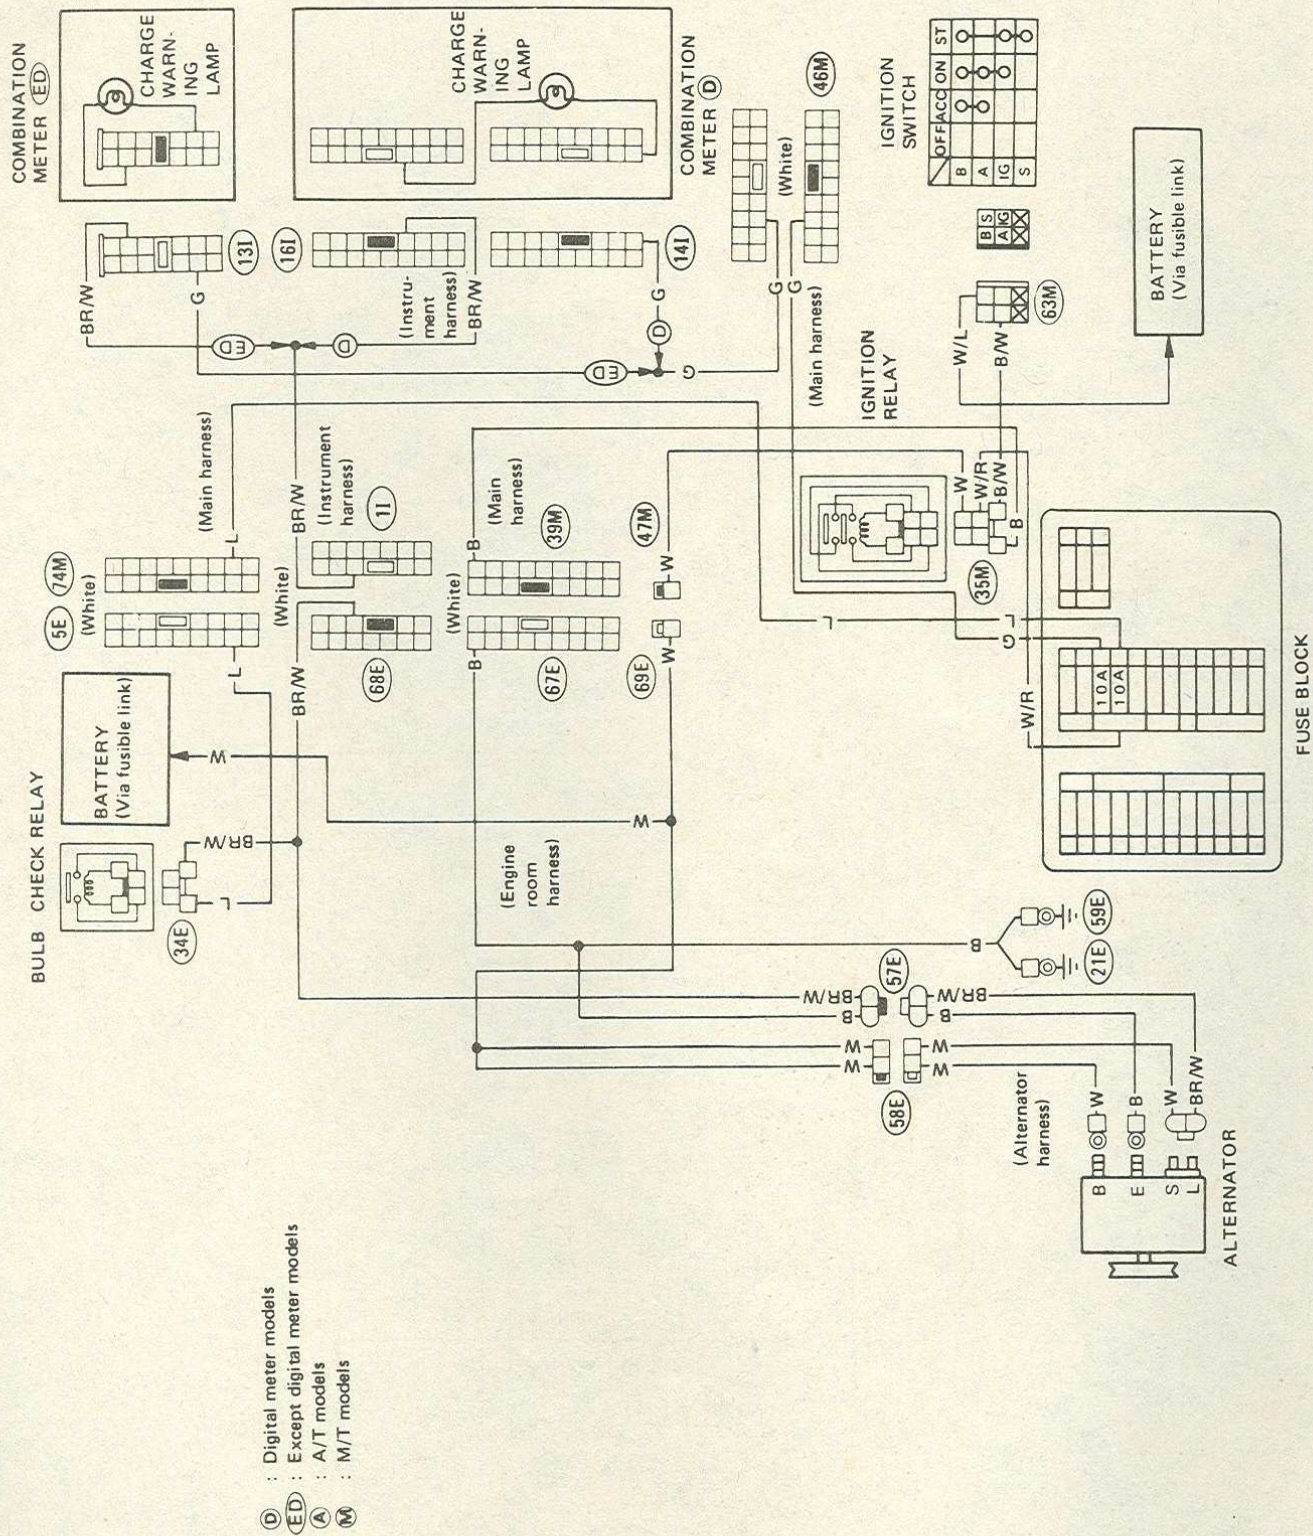


Non-turbo model charging system

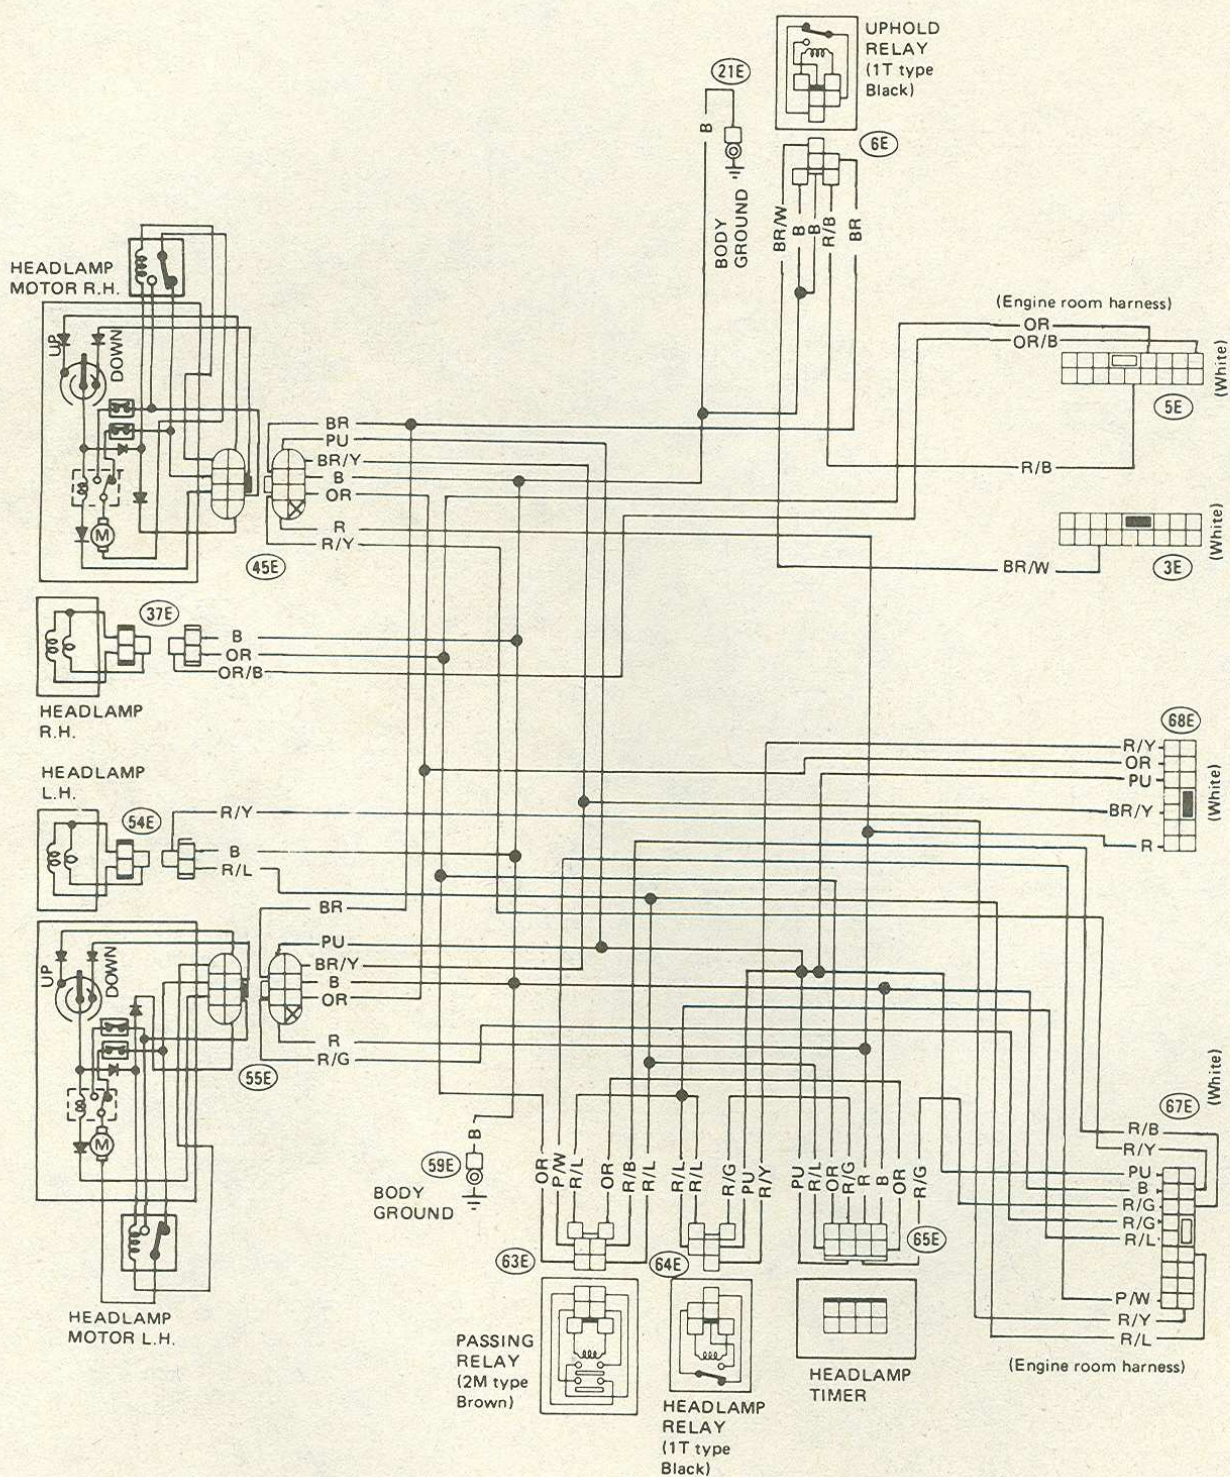


1985-86 Headlight diagram without headlamp sensor — SF model

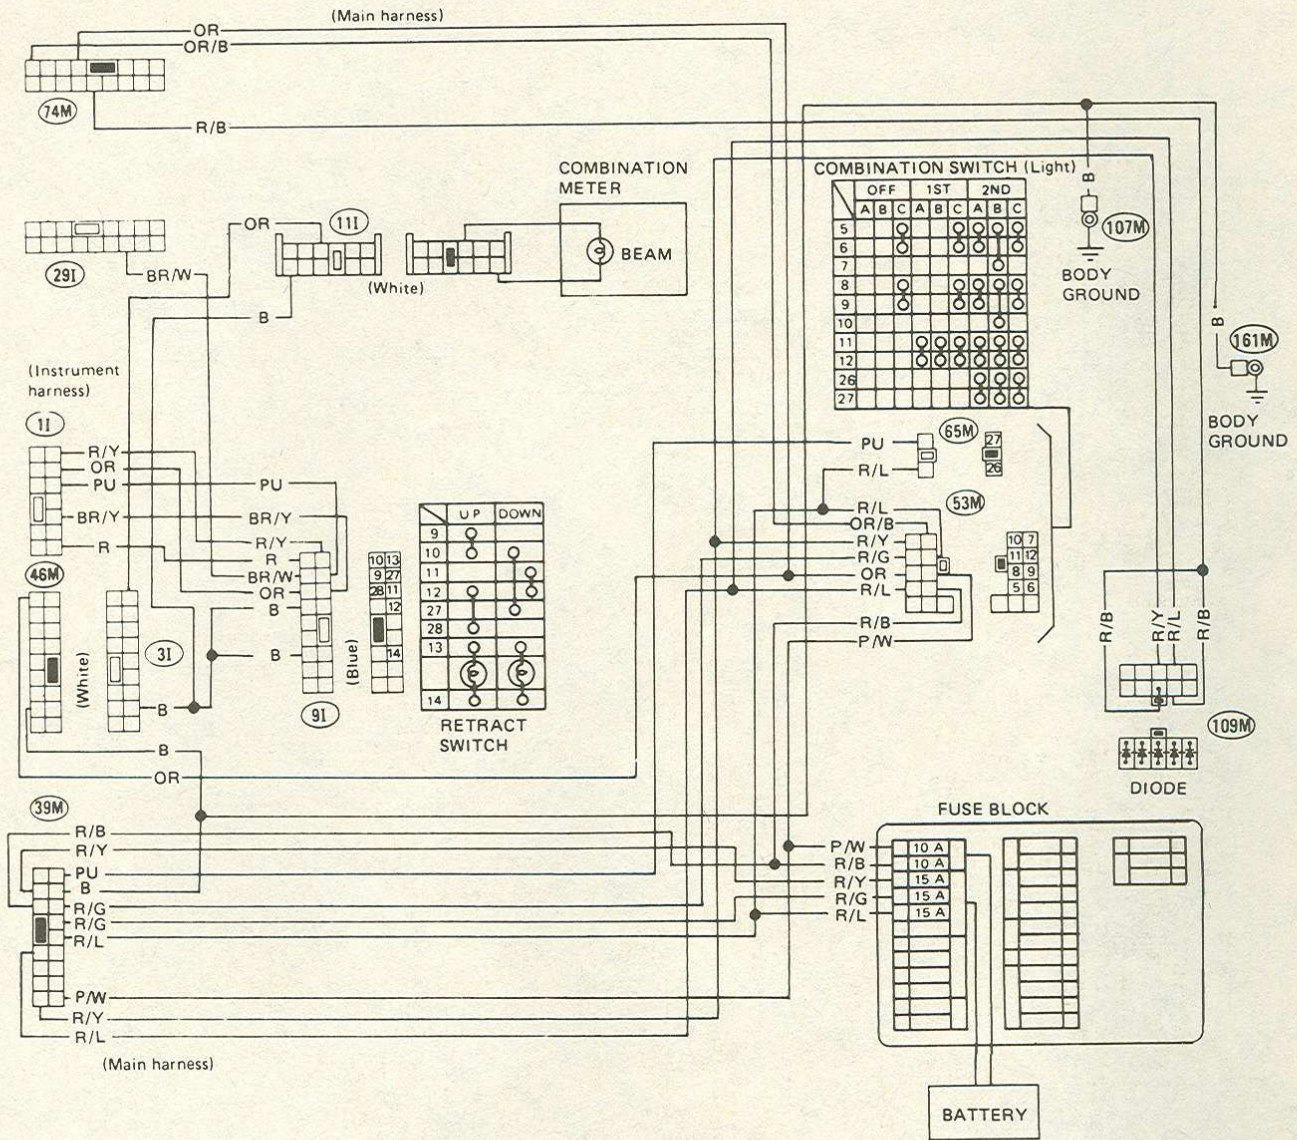


1985-86 Headlight diagram without headlamp sensor — SF model (Cont'd)

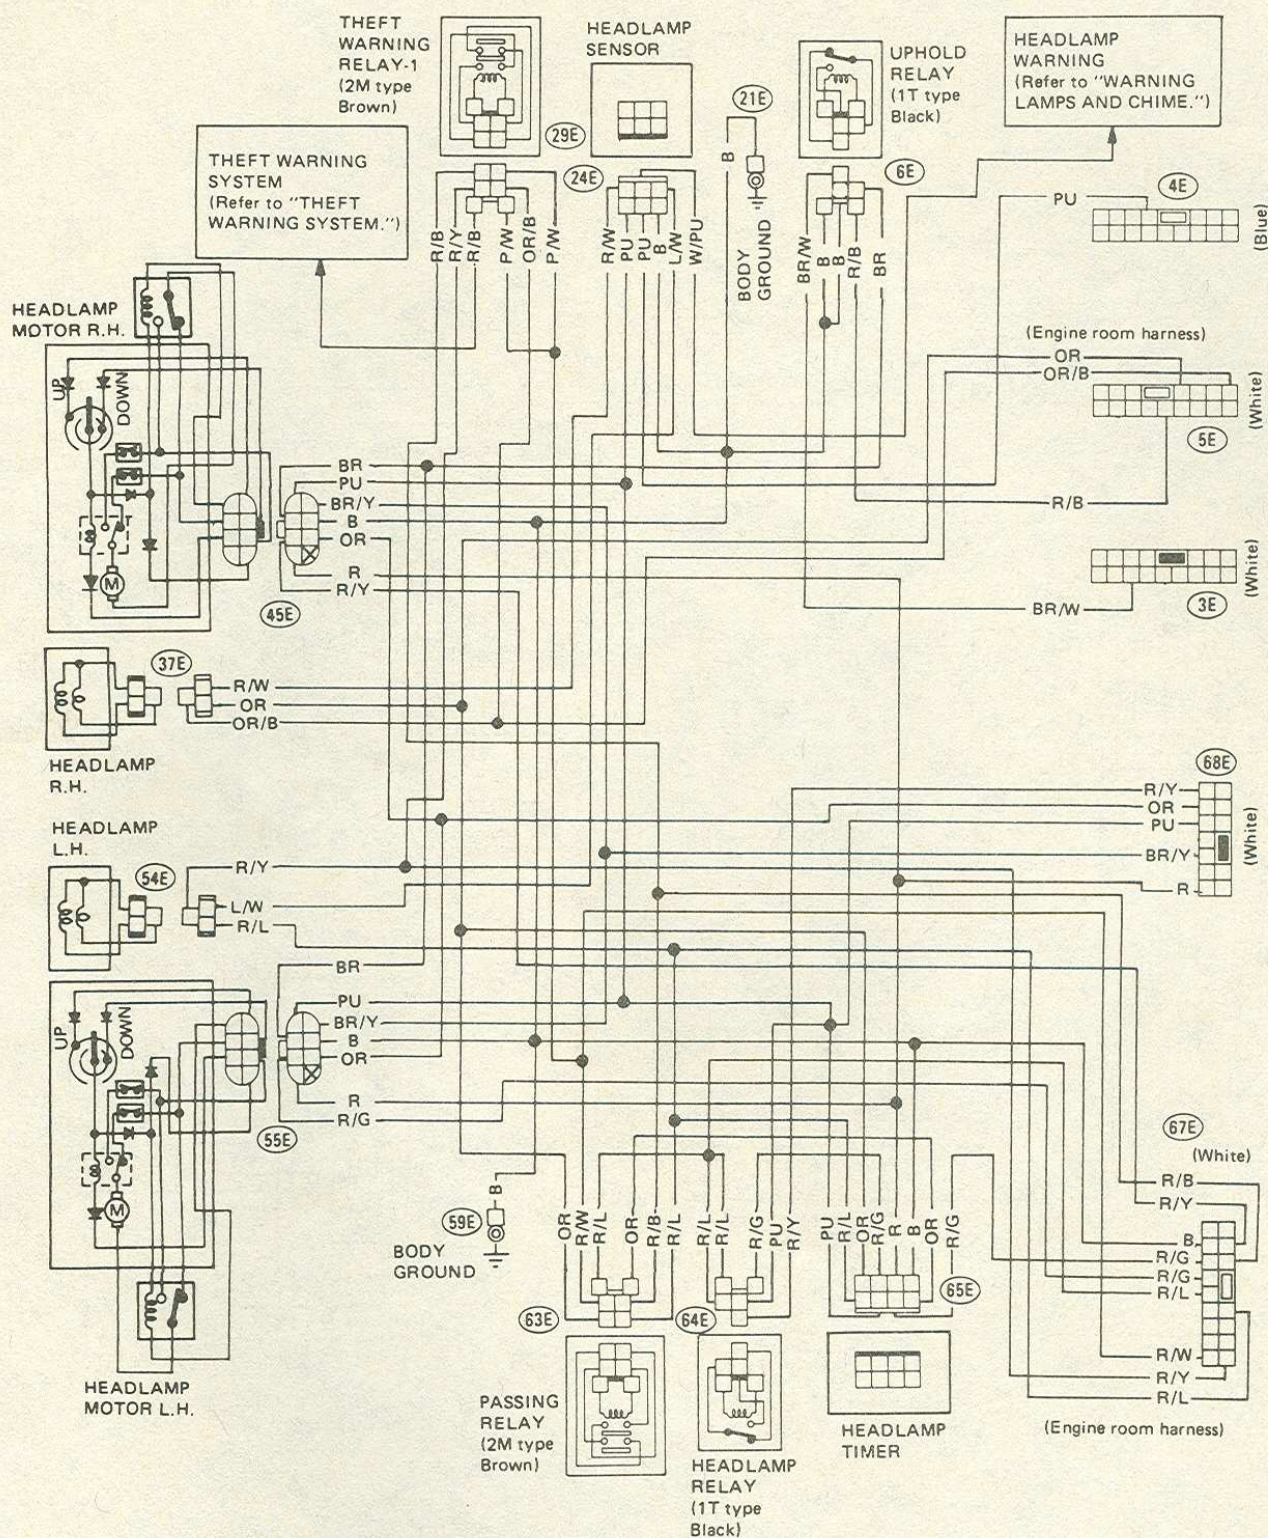


1985-86 Headlight diagram with headlight sensor — GL and GLL models

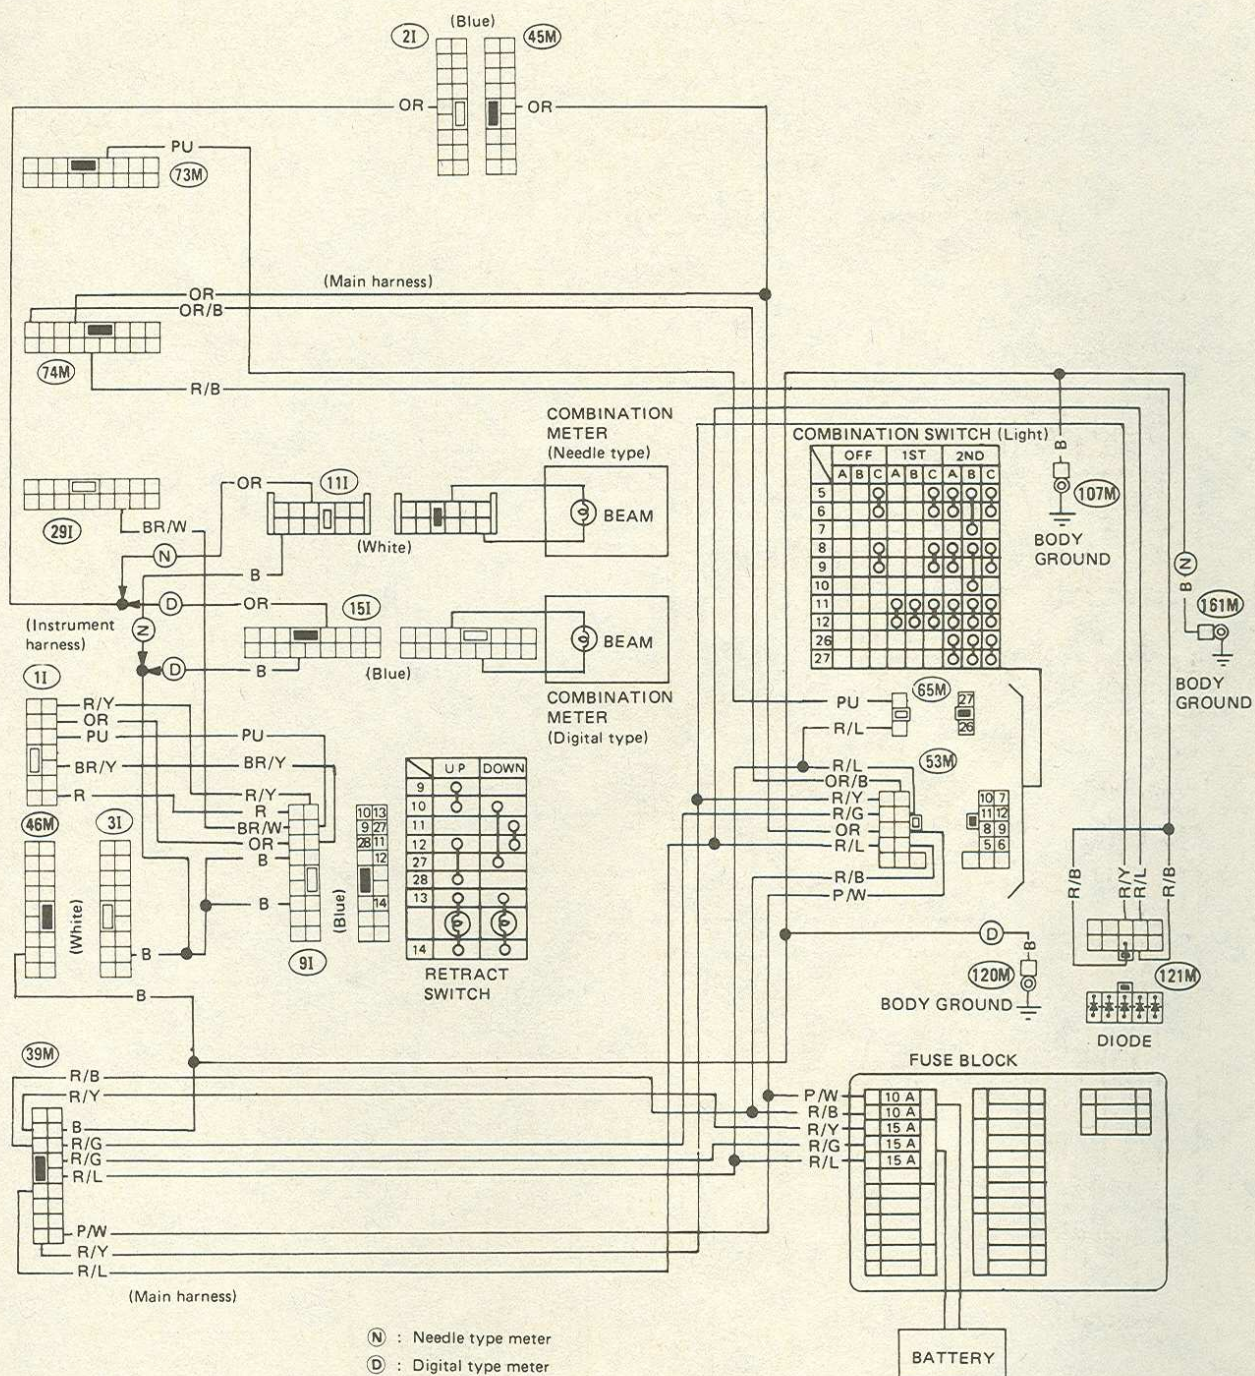


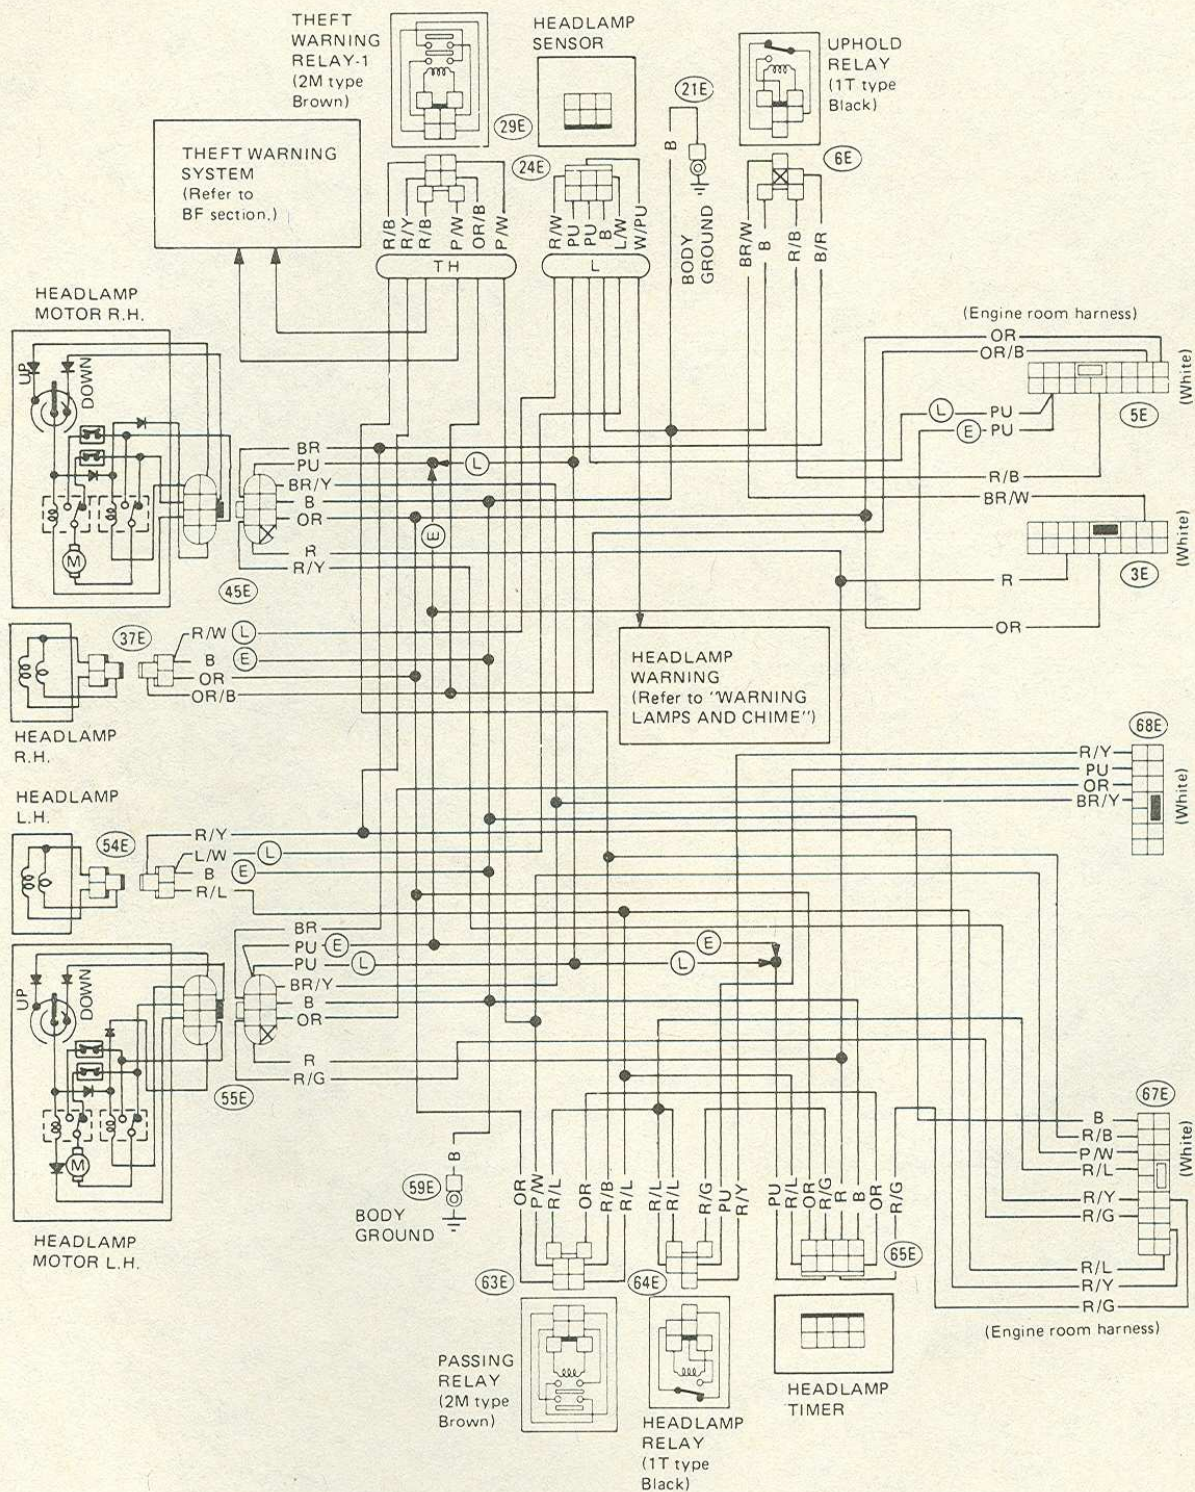


1984 Headlight diagram

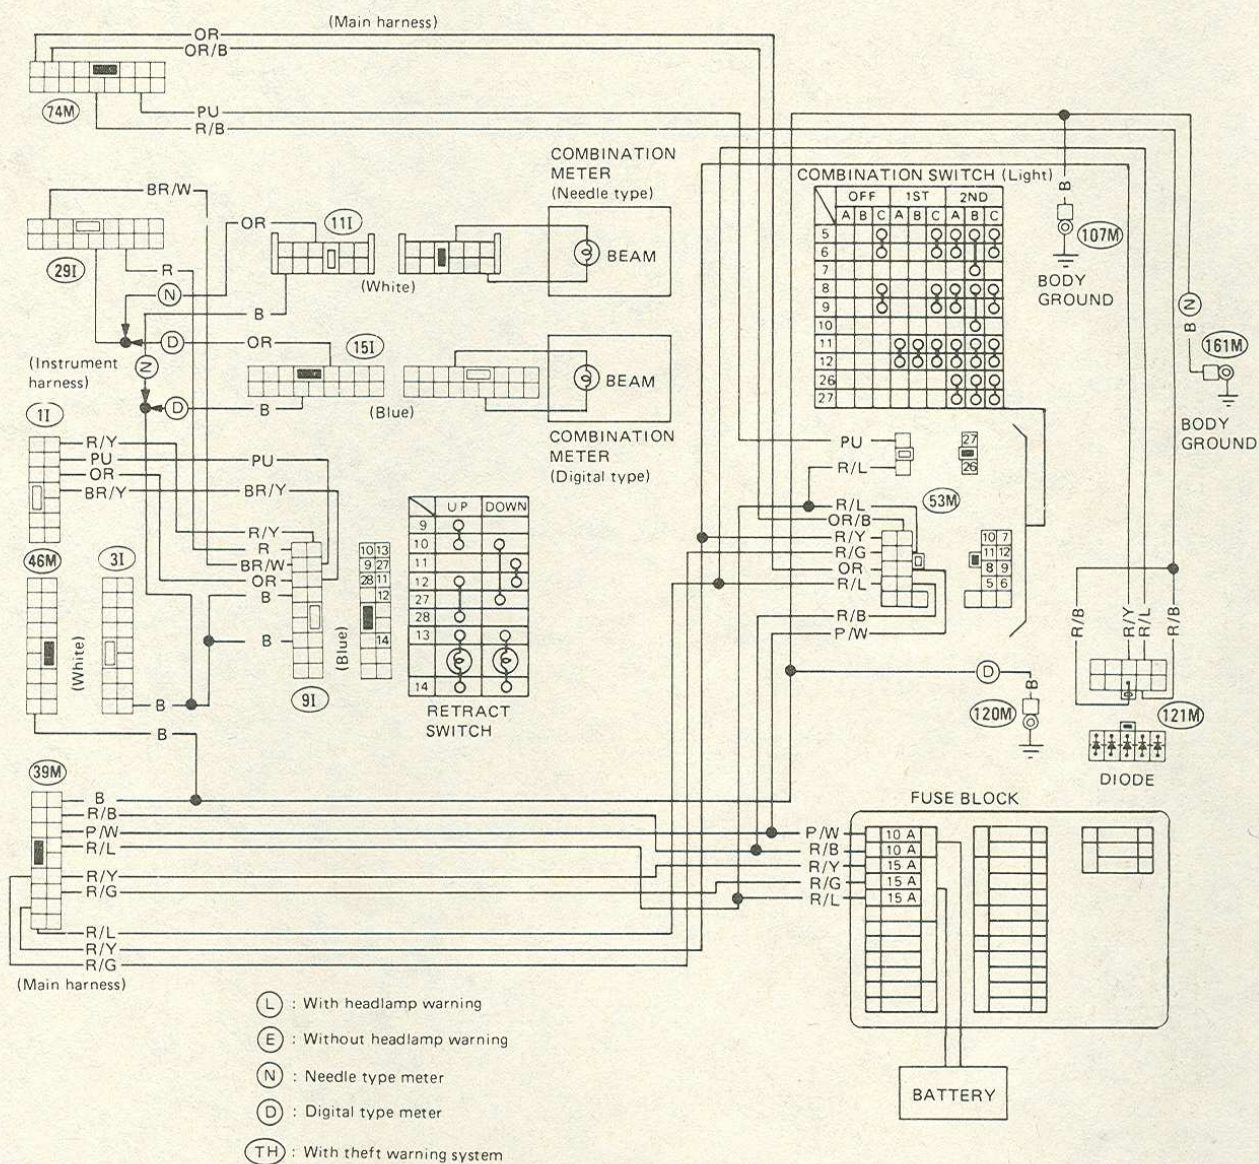



1984 Headlight diagram (Cont'd)

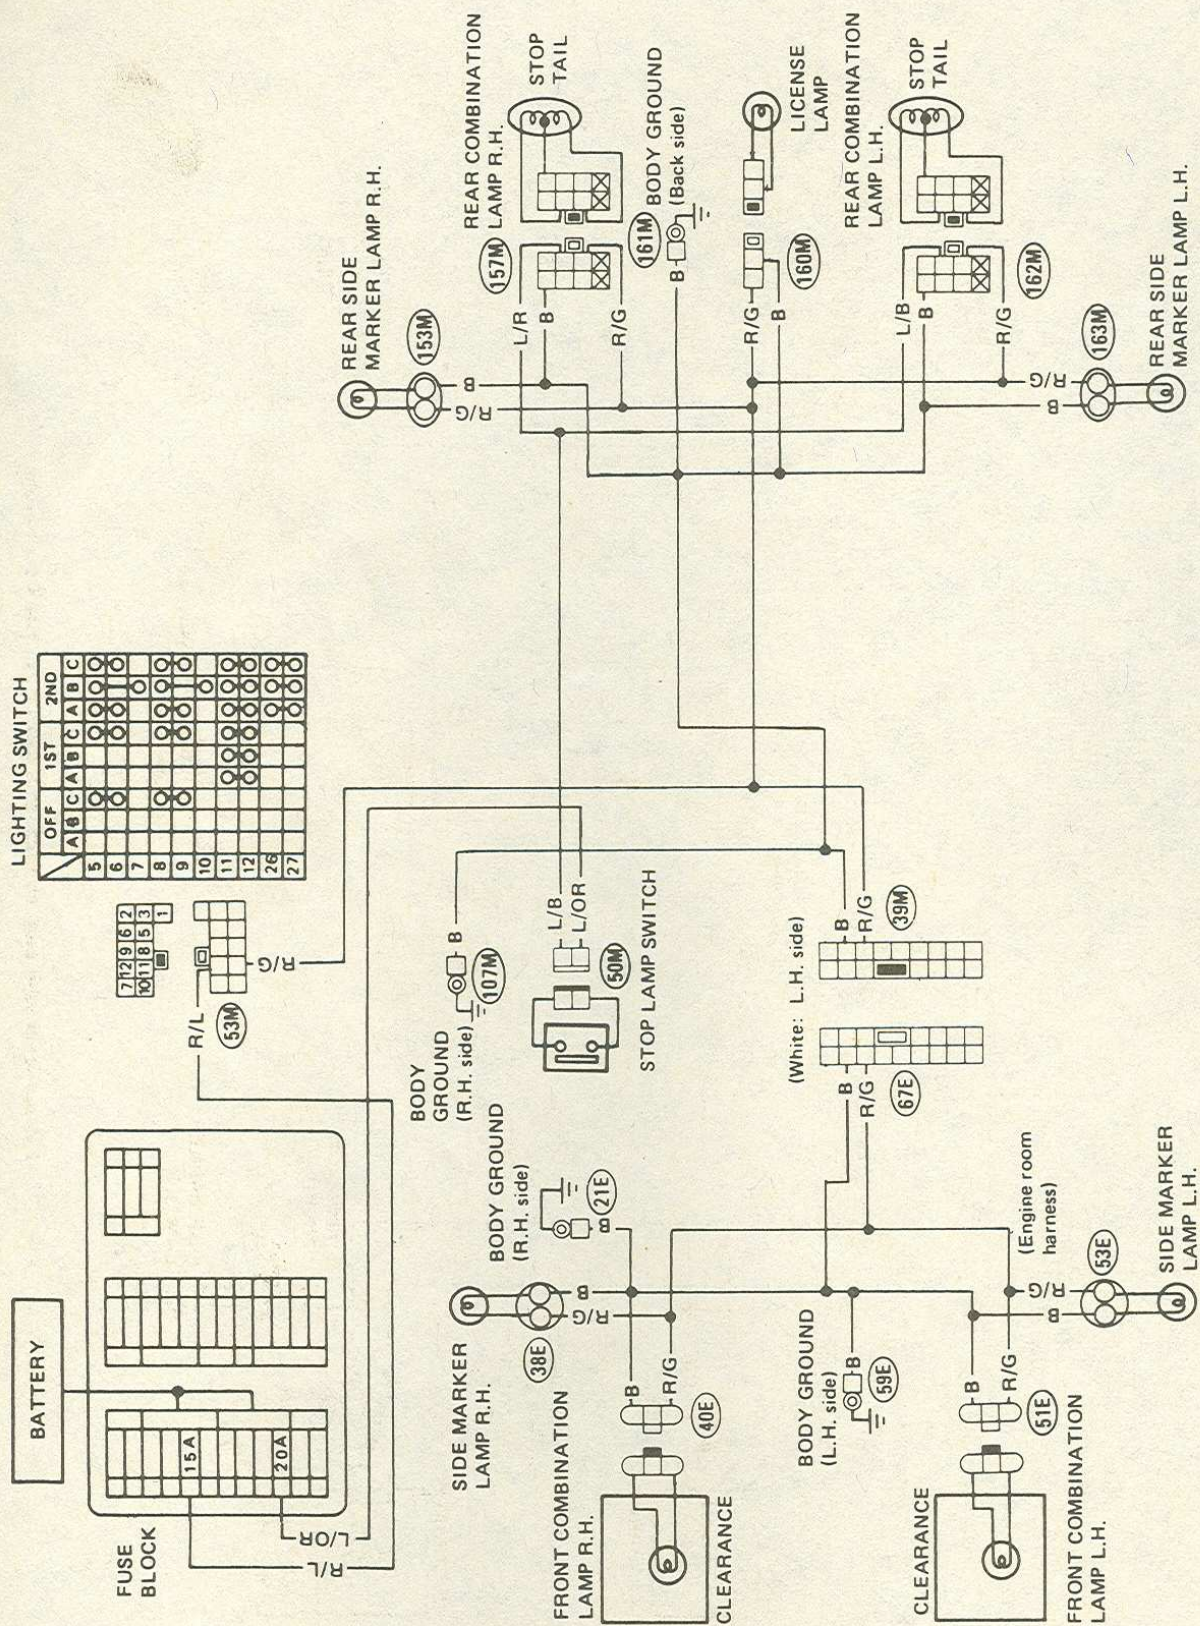


Exterior lamps without stop and tail lamp sensor (SF model) — clearance, license, tail and stop lamps

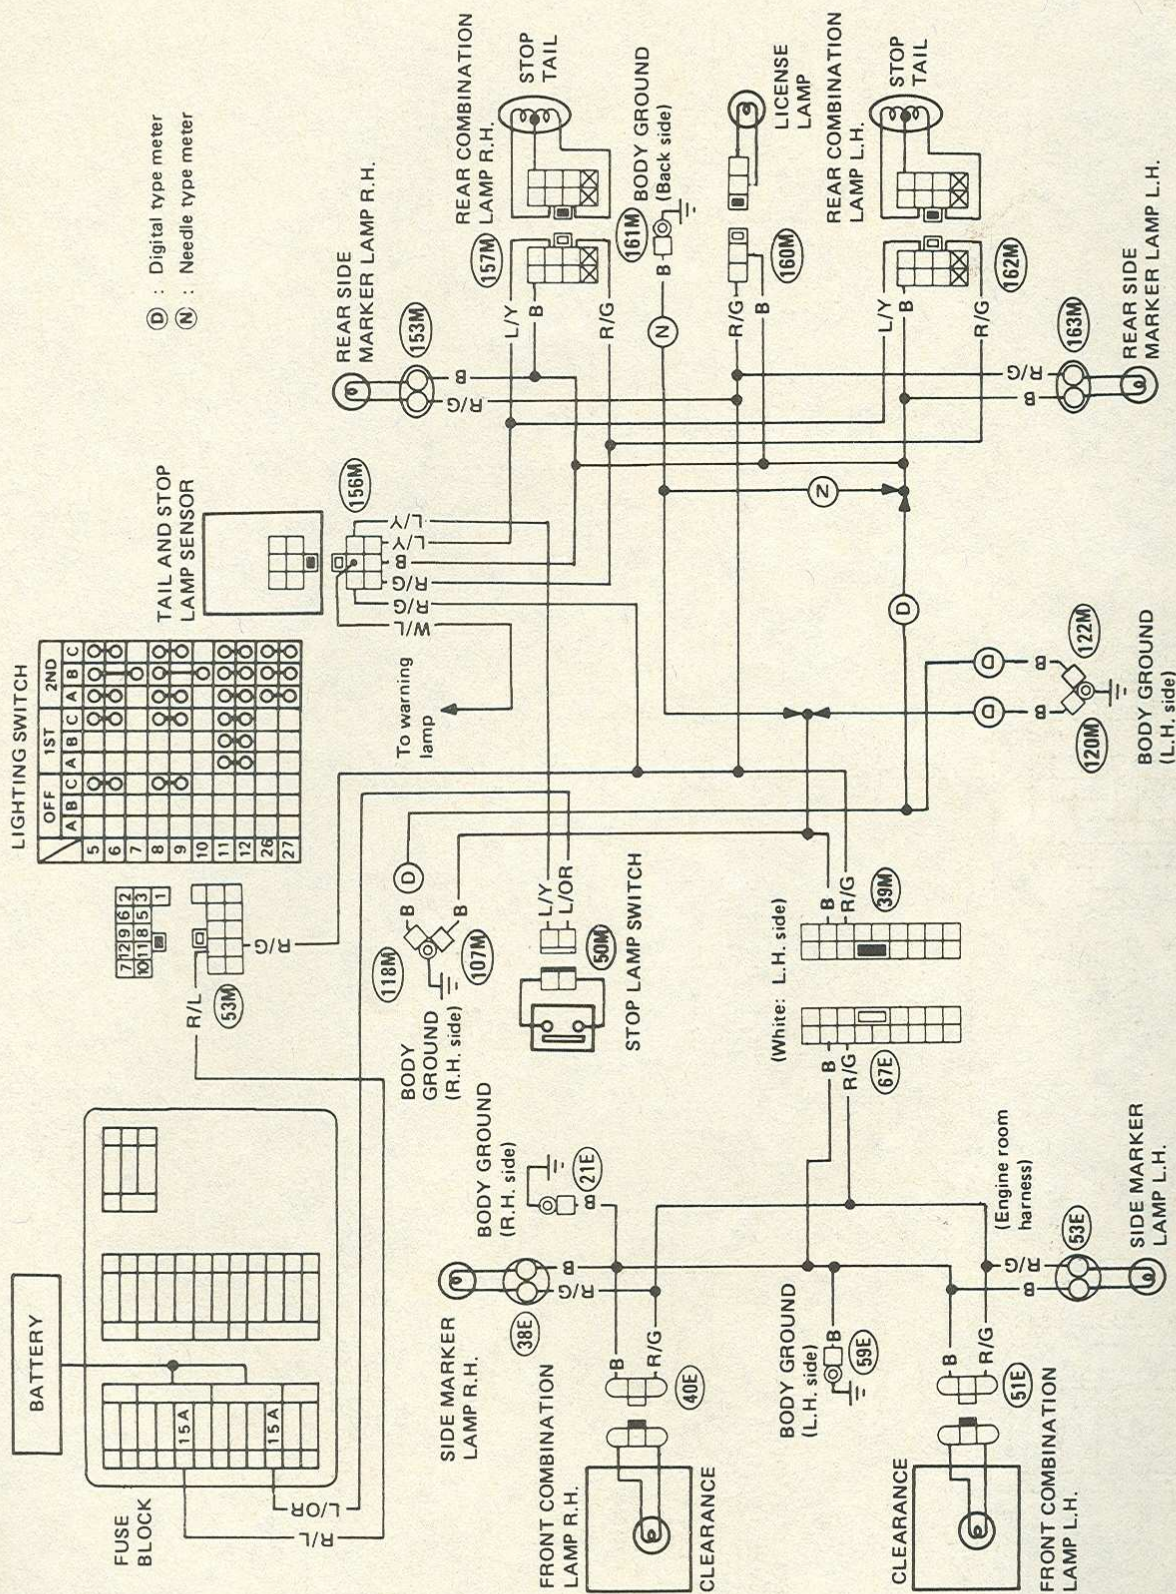

Exterior lamp with stop and tail lamp sensor (GL and GLL models)

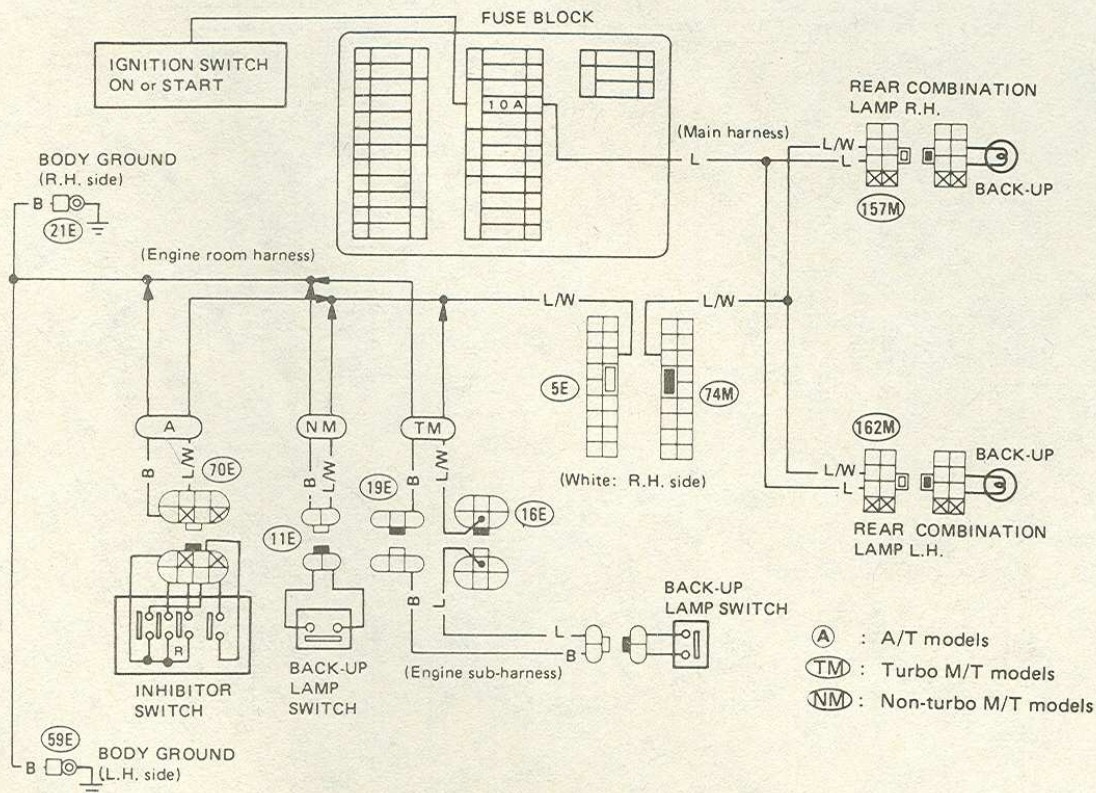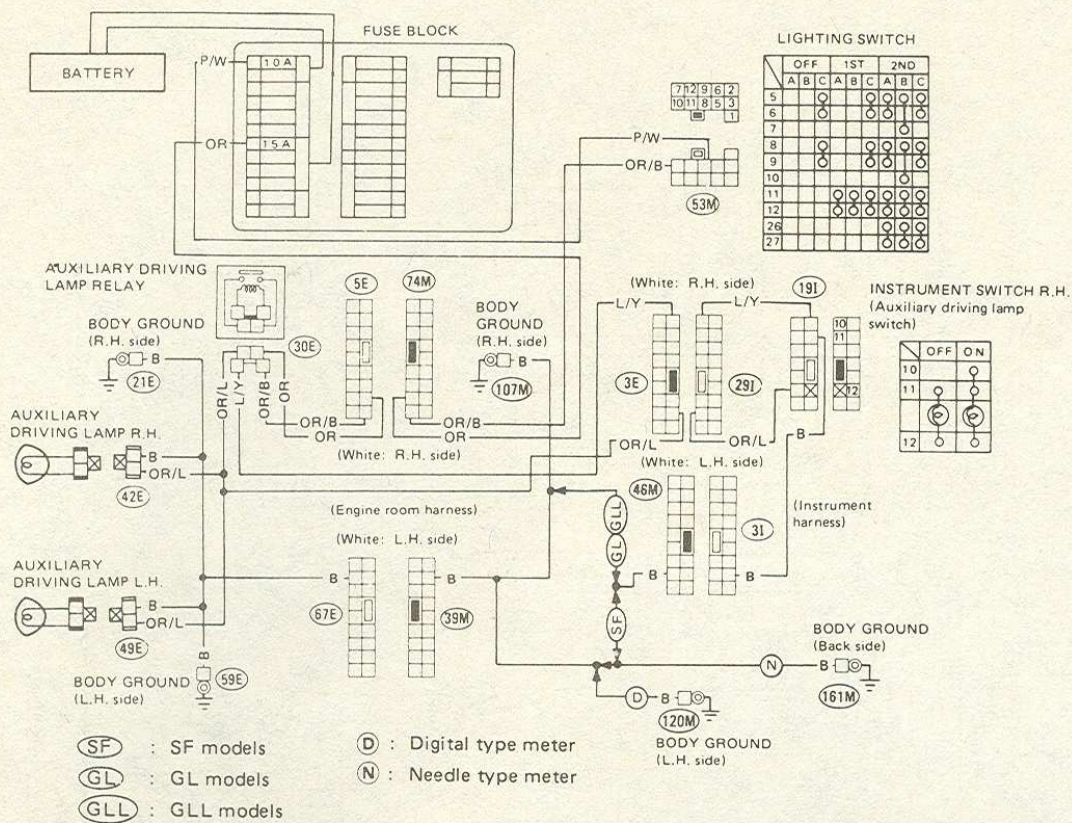


Auxiliary driving lamp (top) and back-up lamp diagram (bottom)

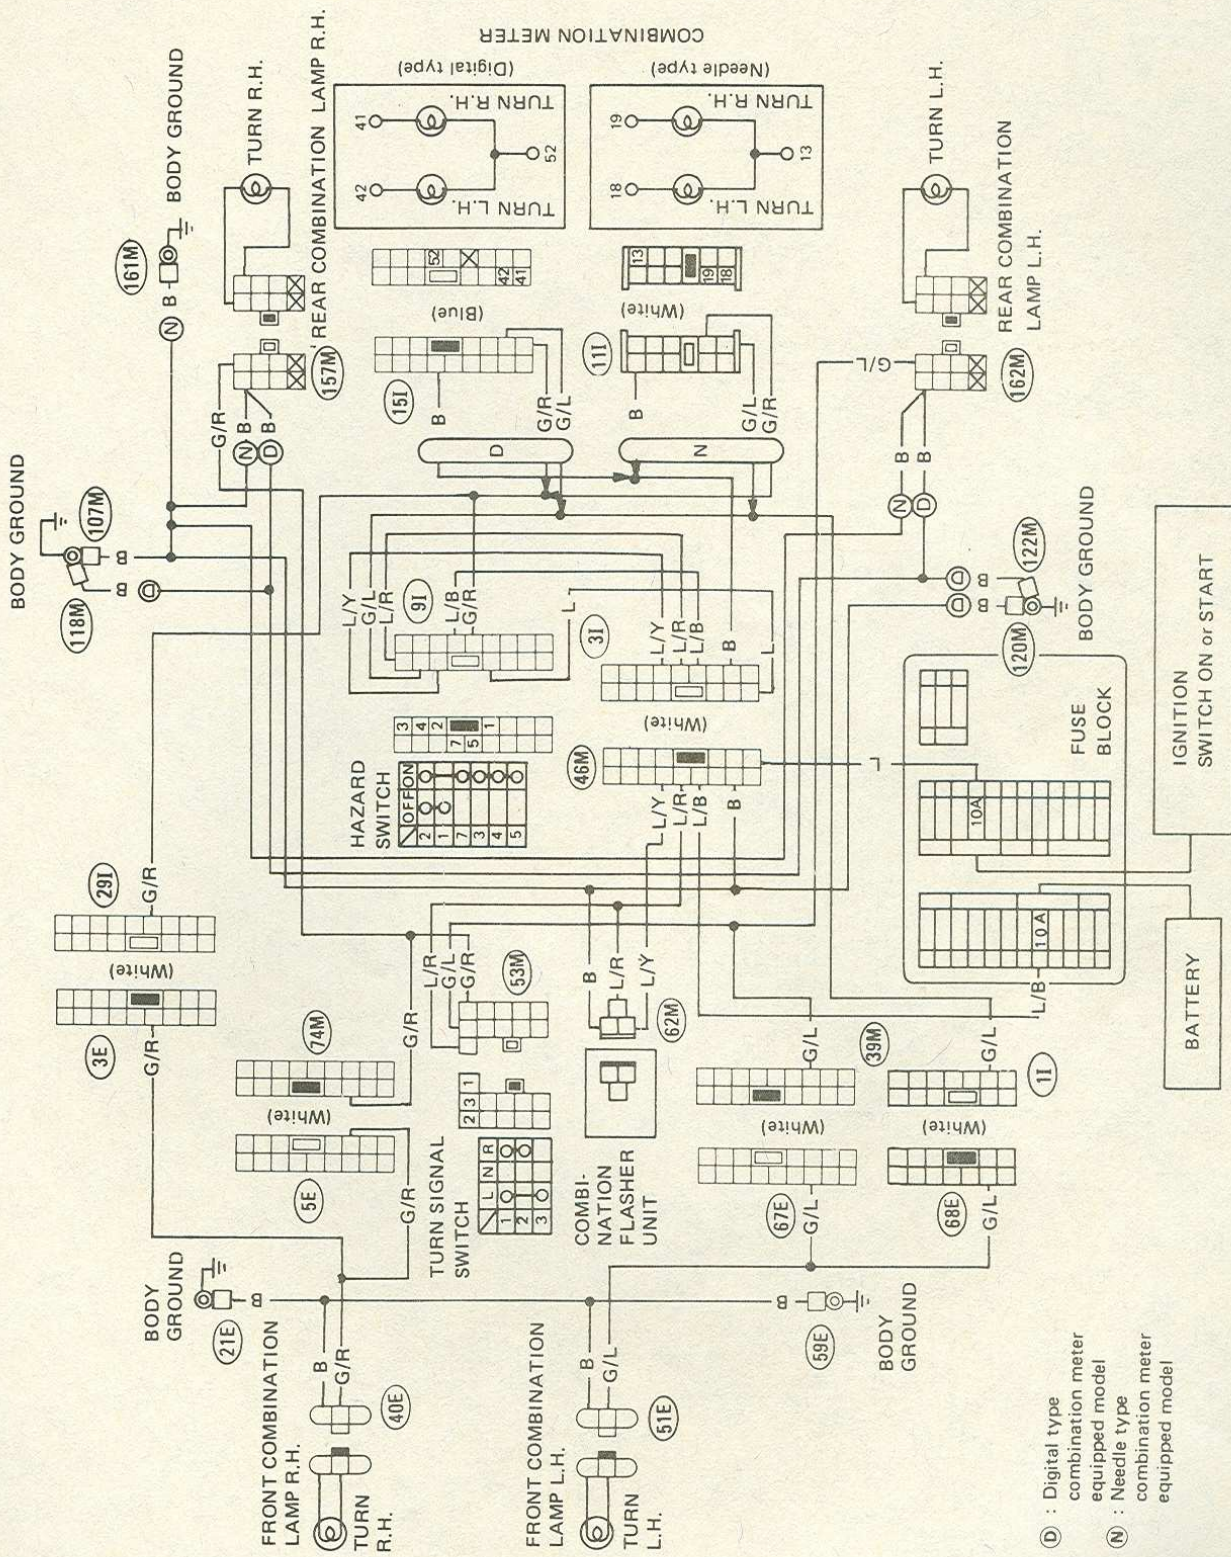


Turn signal and hazard warning lamps




1984 Interior lamp illumination

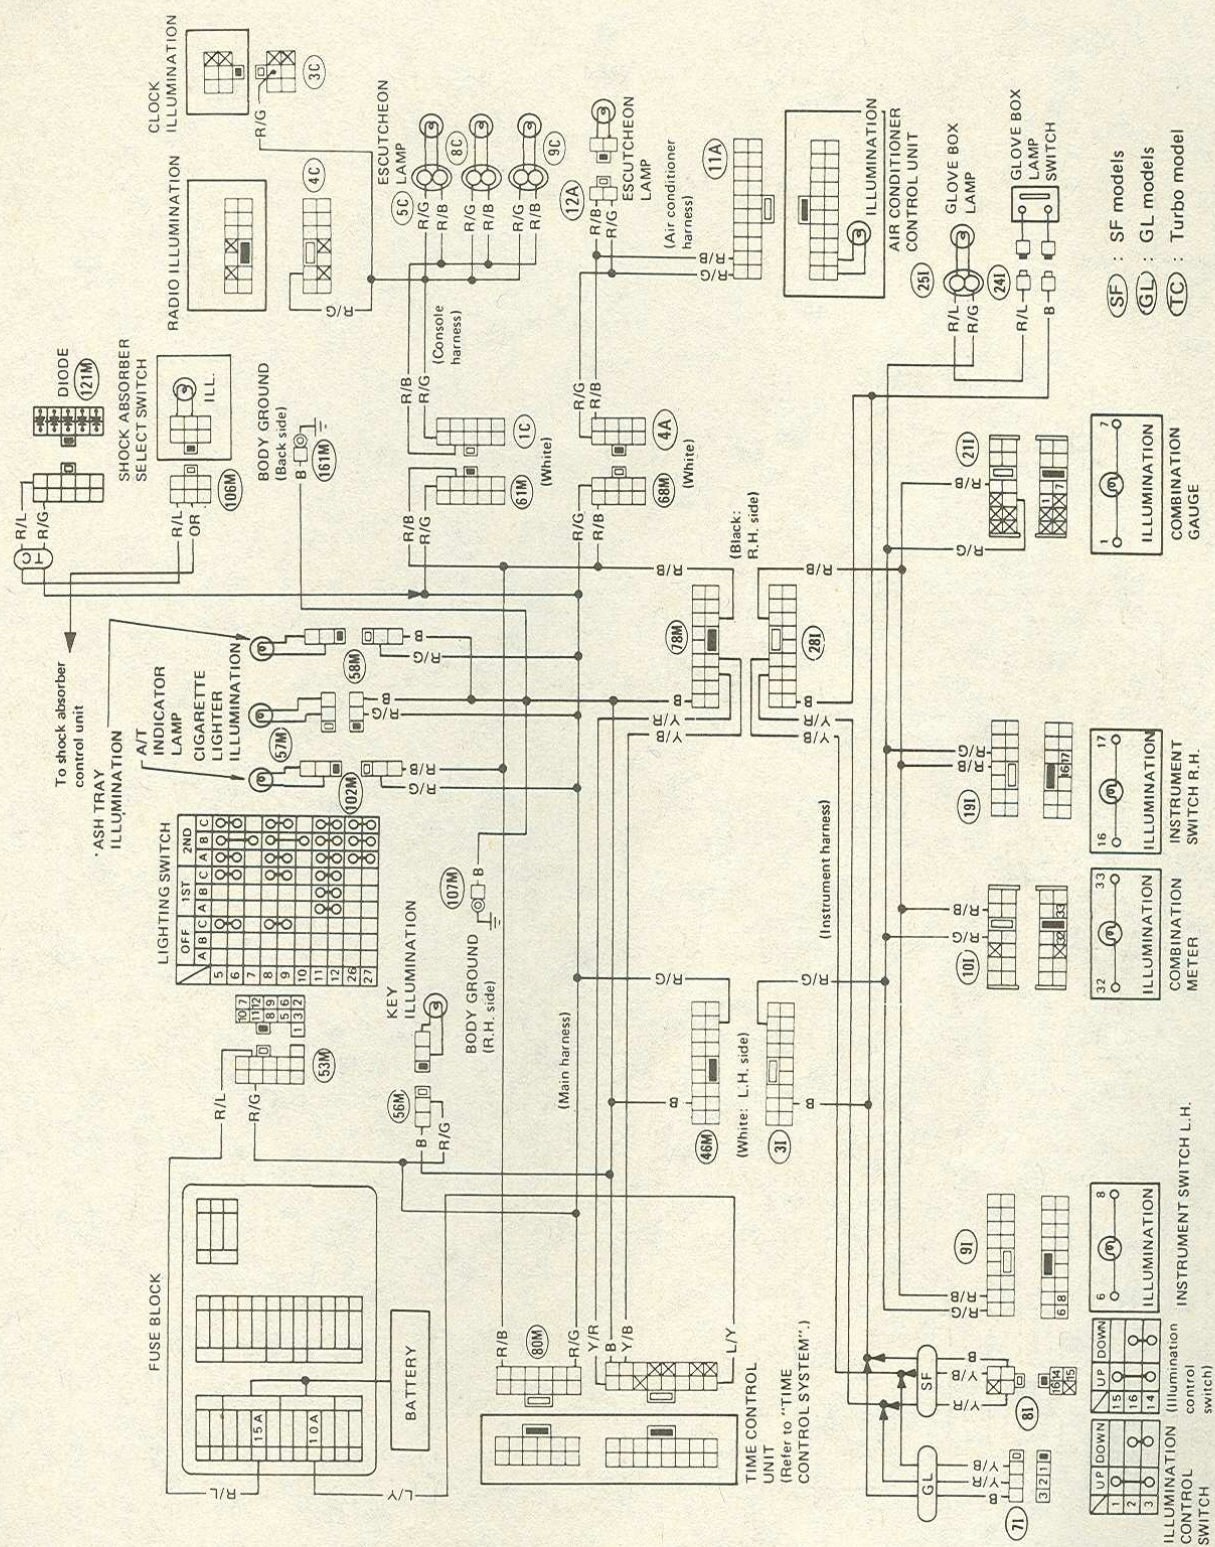


1985-86 Interior lamp illumination




Interior lamp illumination if equipped with digital type combination meter (GLL model)

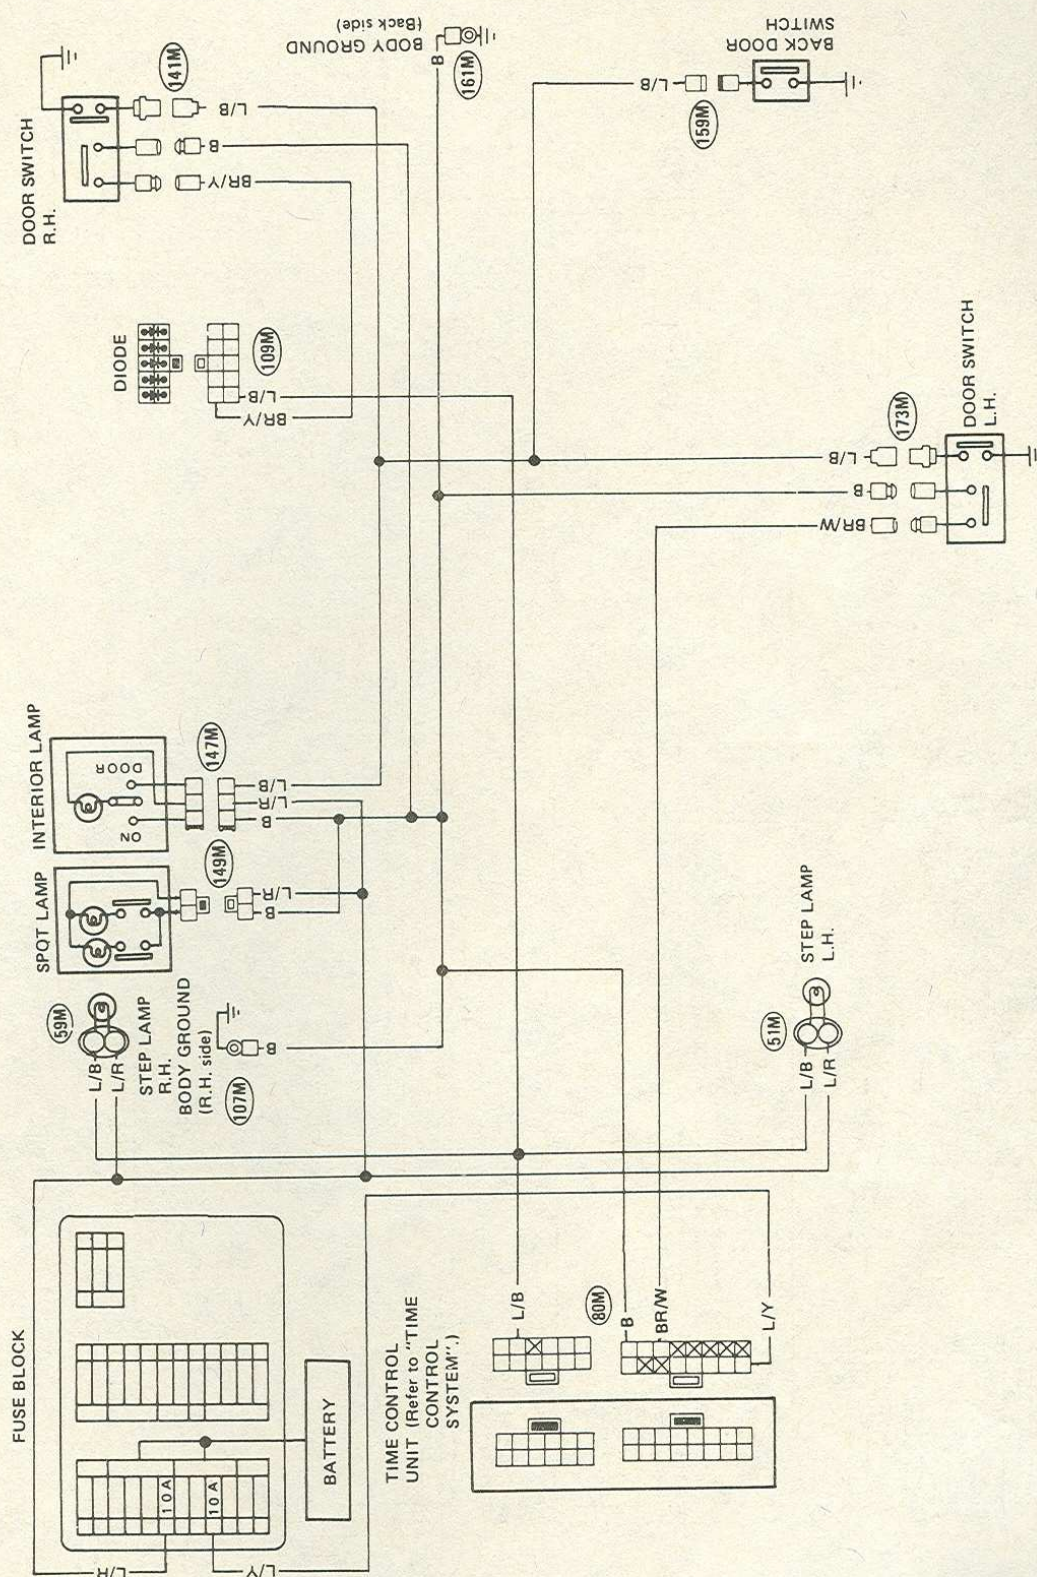


Interior, luggage and step lamps (SF model)




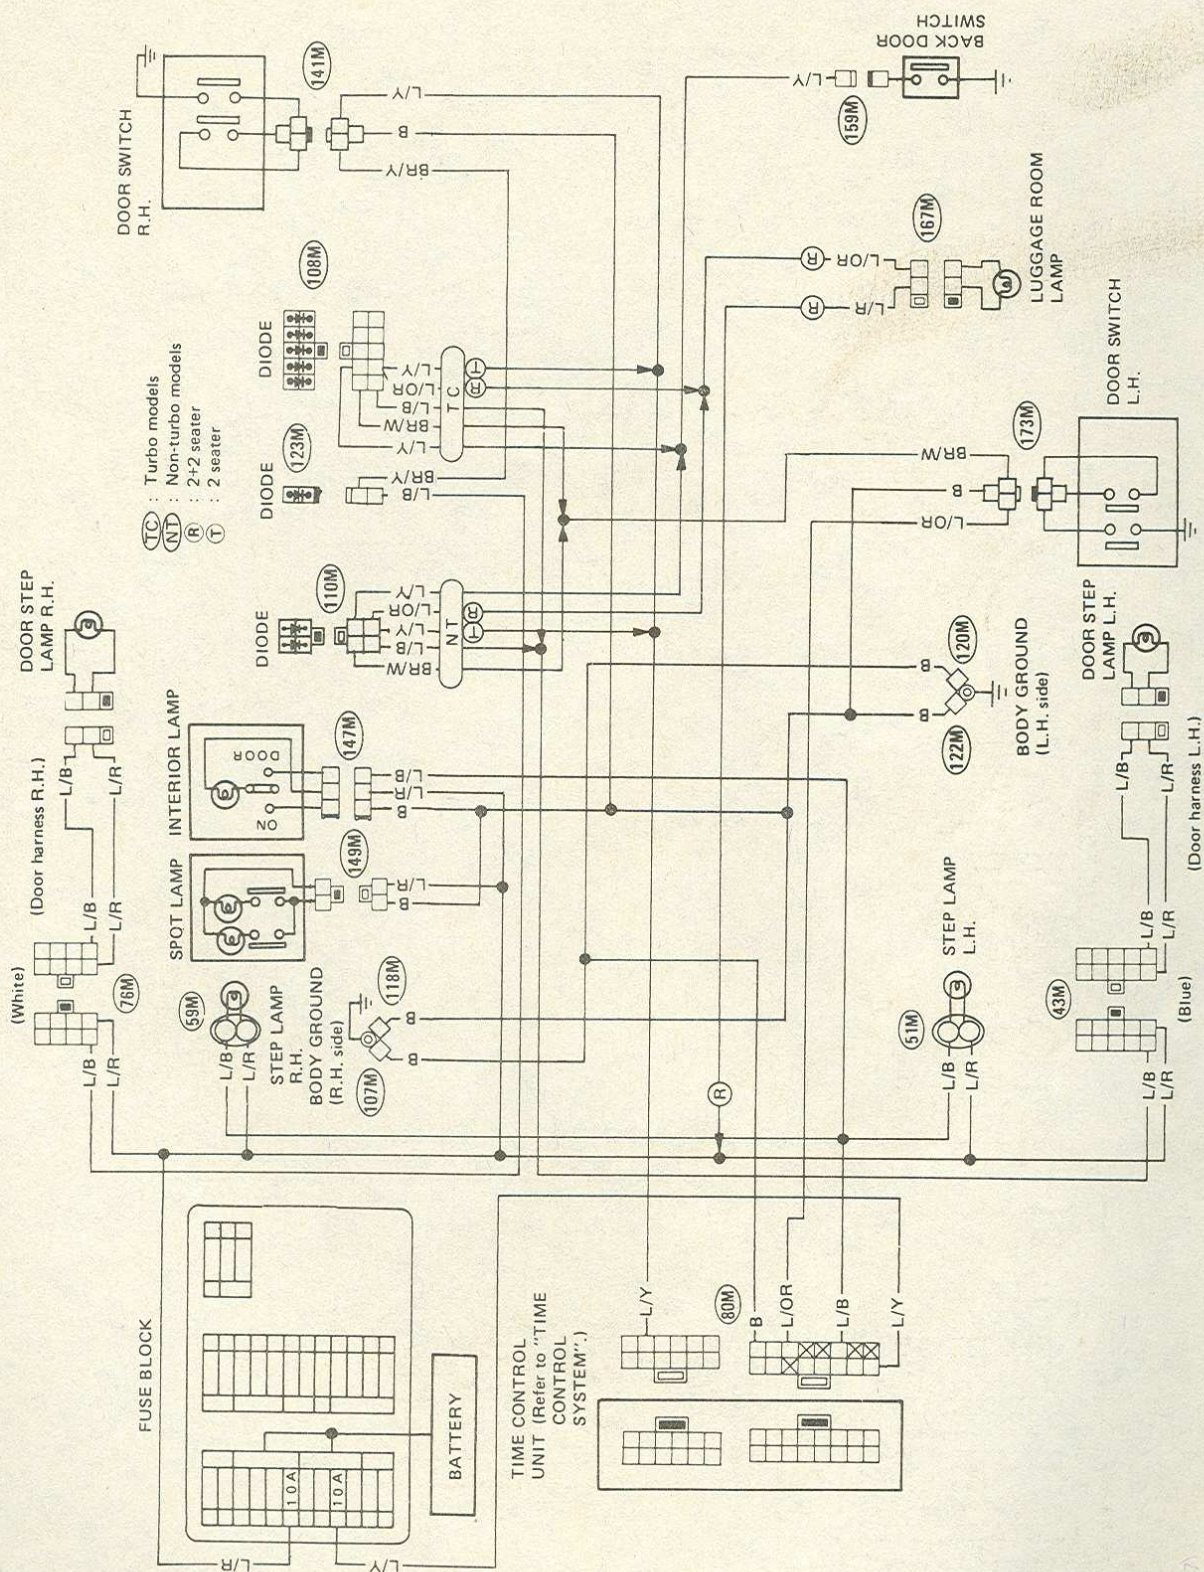


Interior, luggage and step lamps (GLL model)

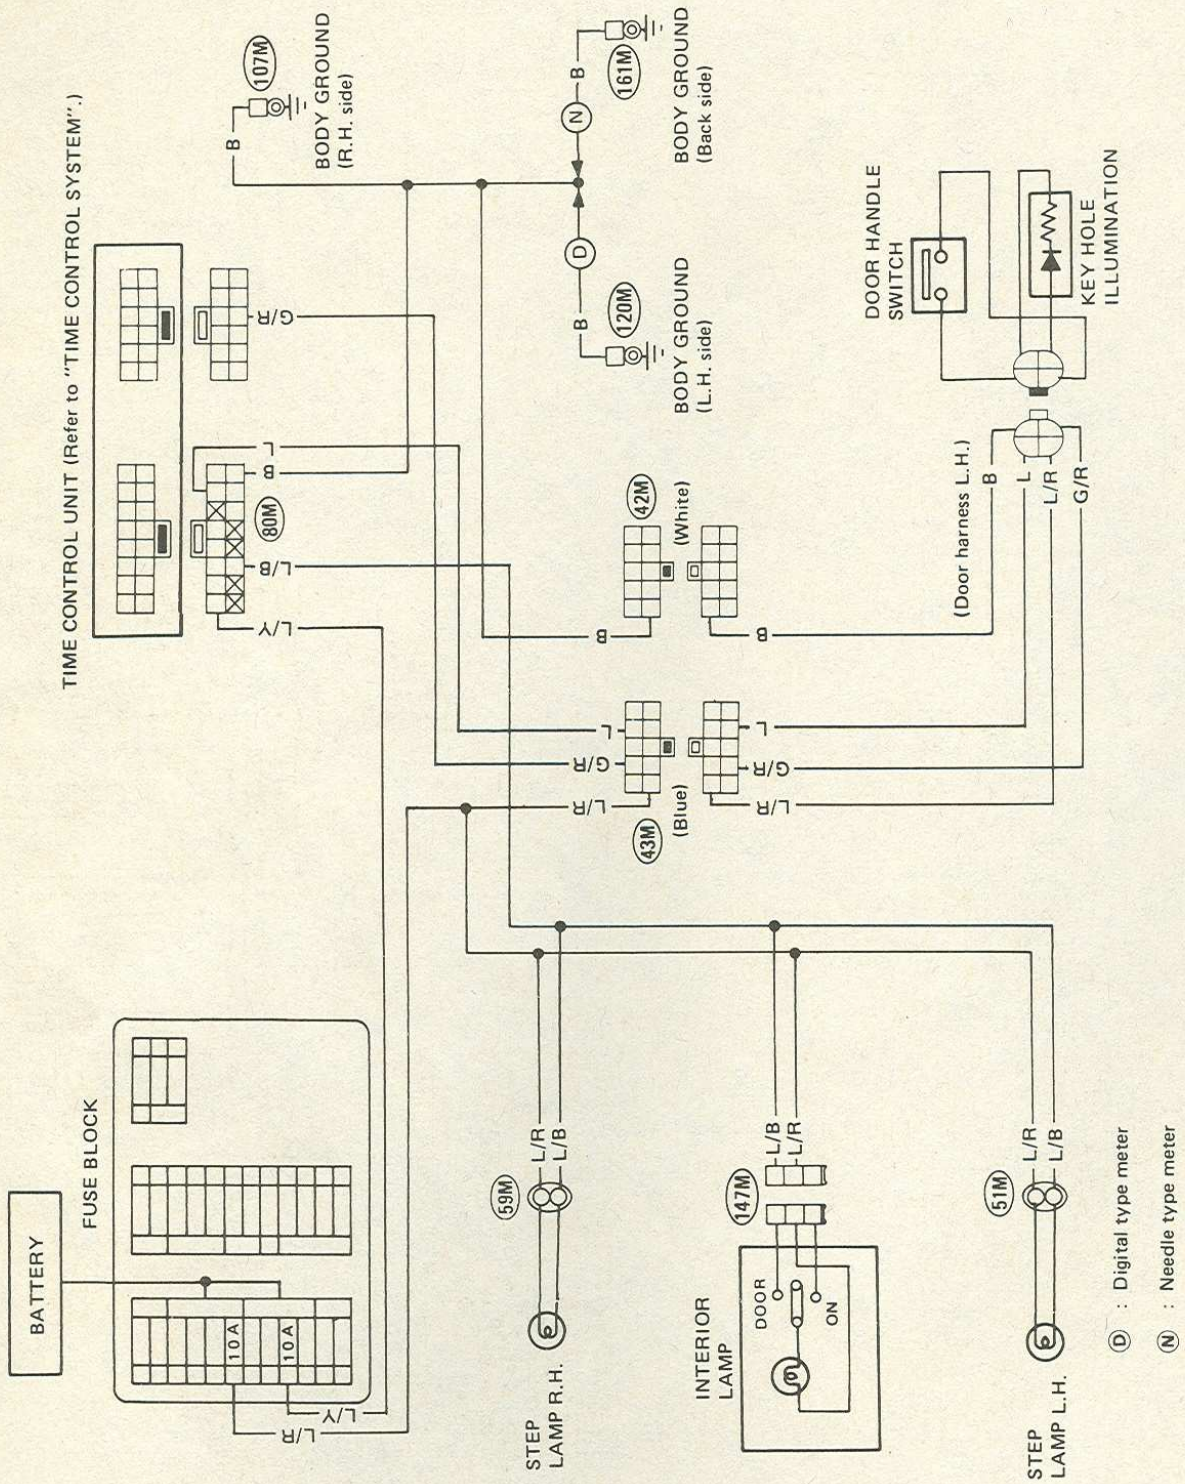


Door key and illuminated entry system

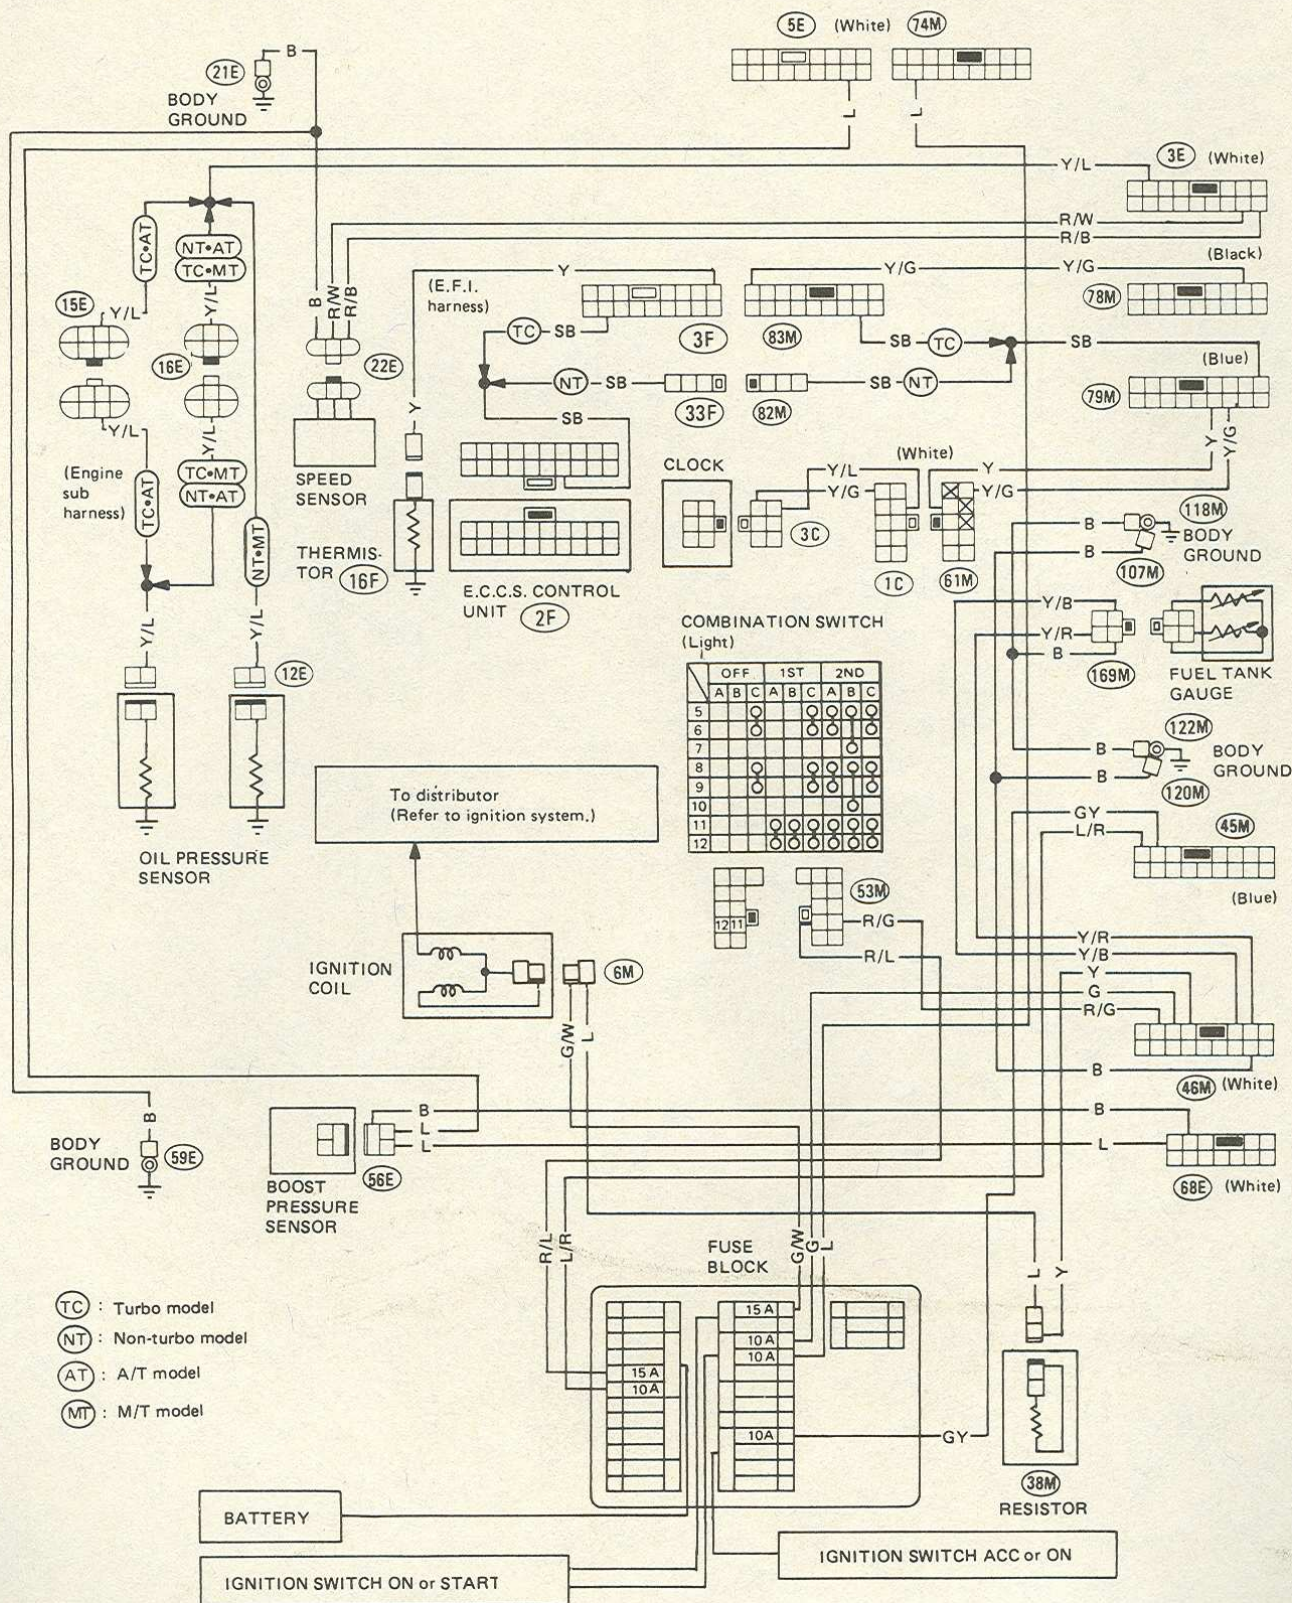

Digital type combination meter

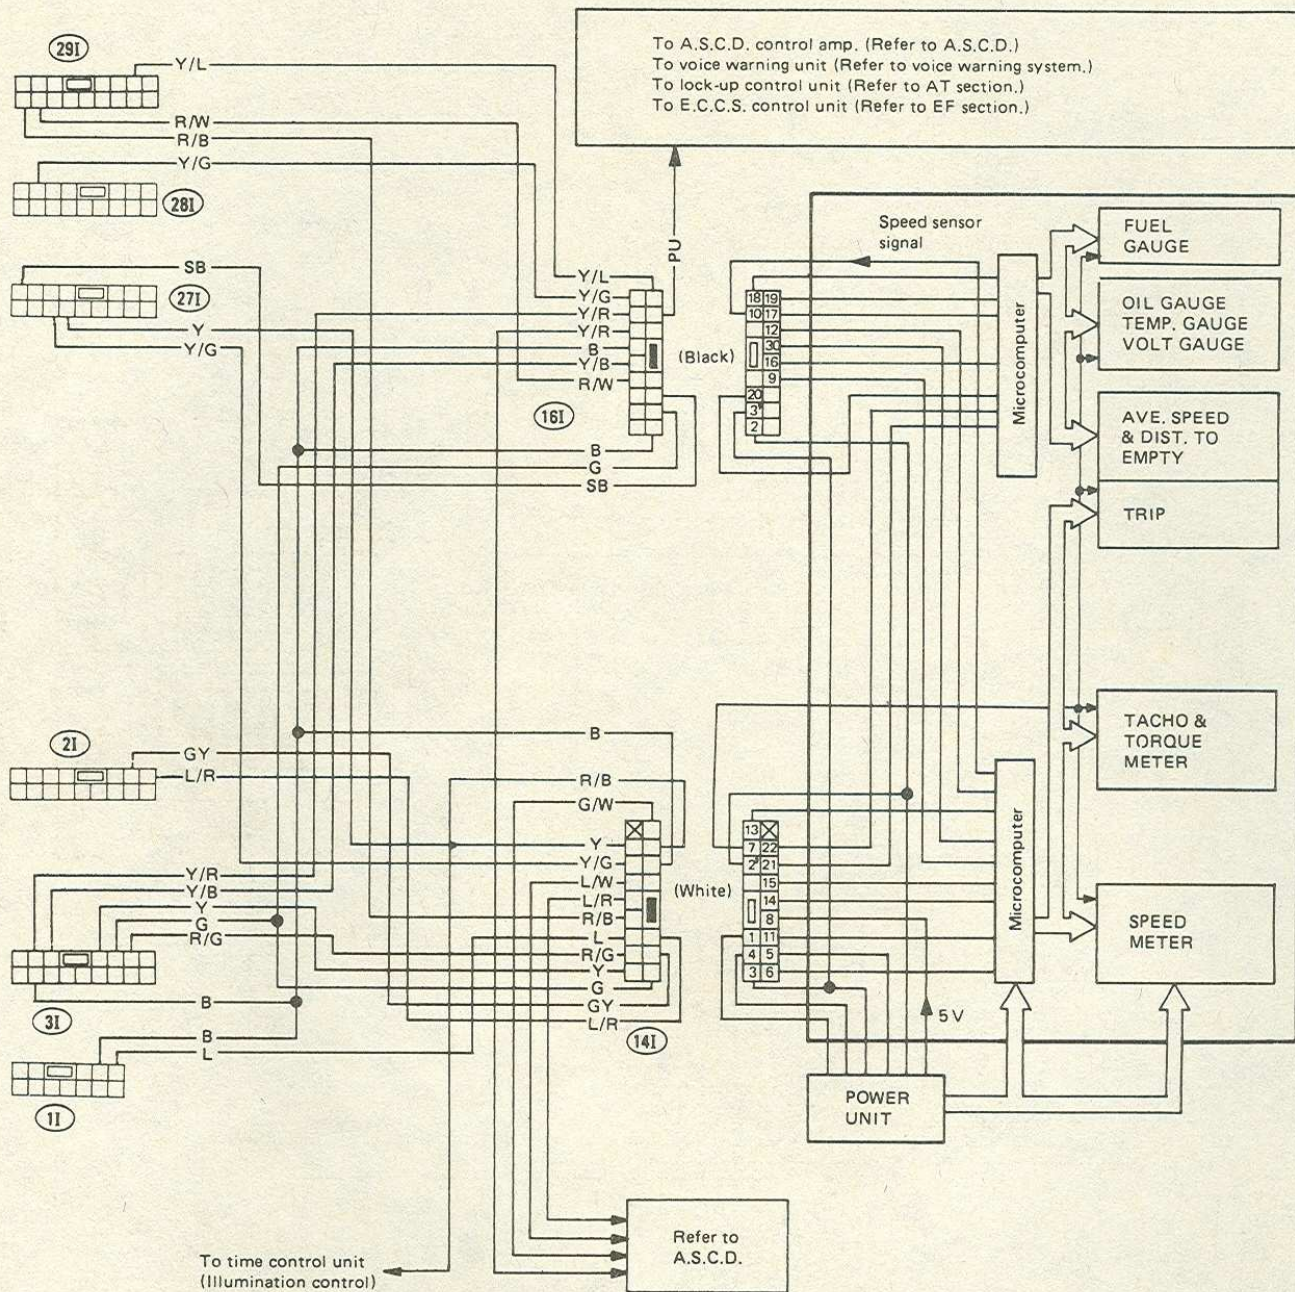


Digital type combination meter (Contd)

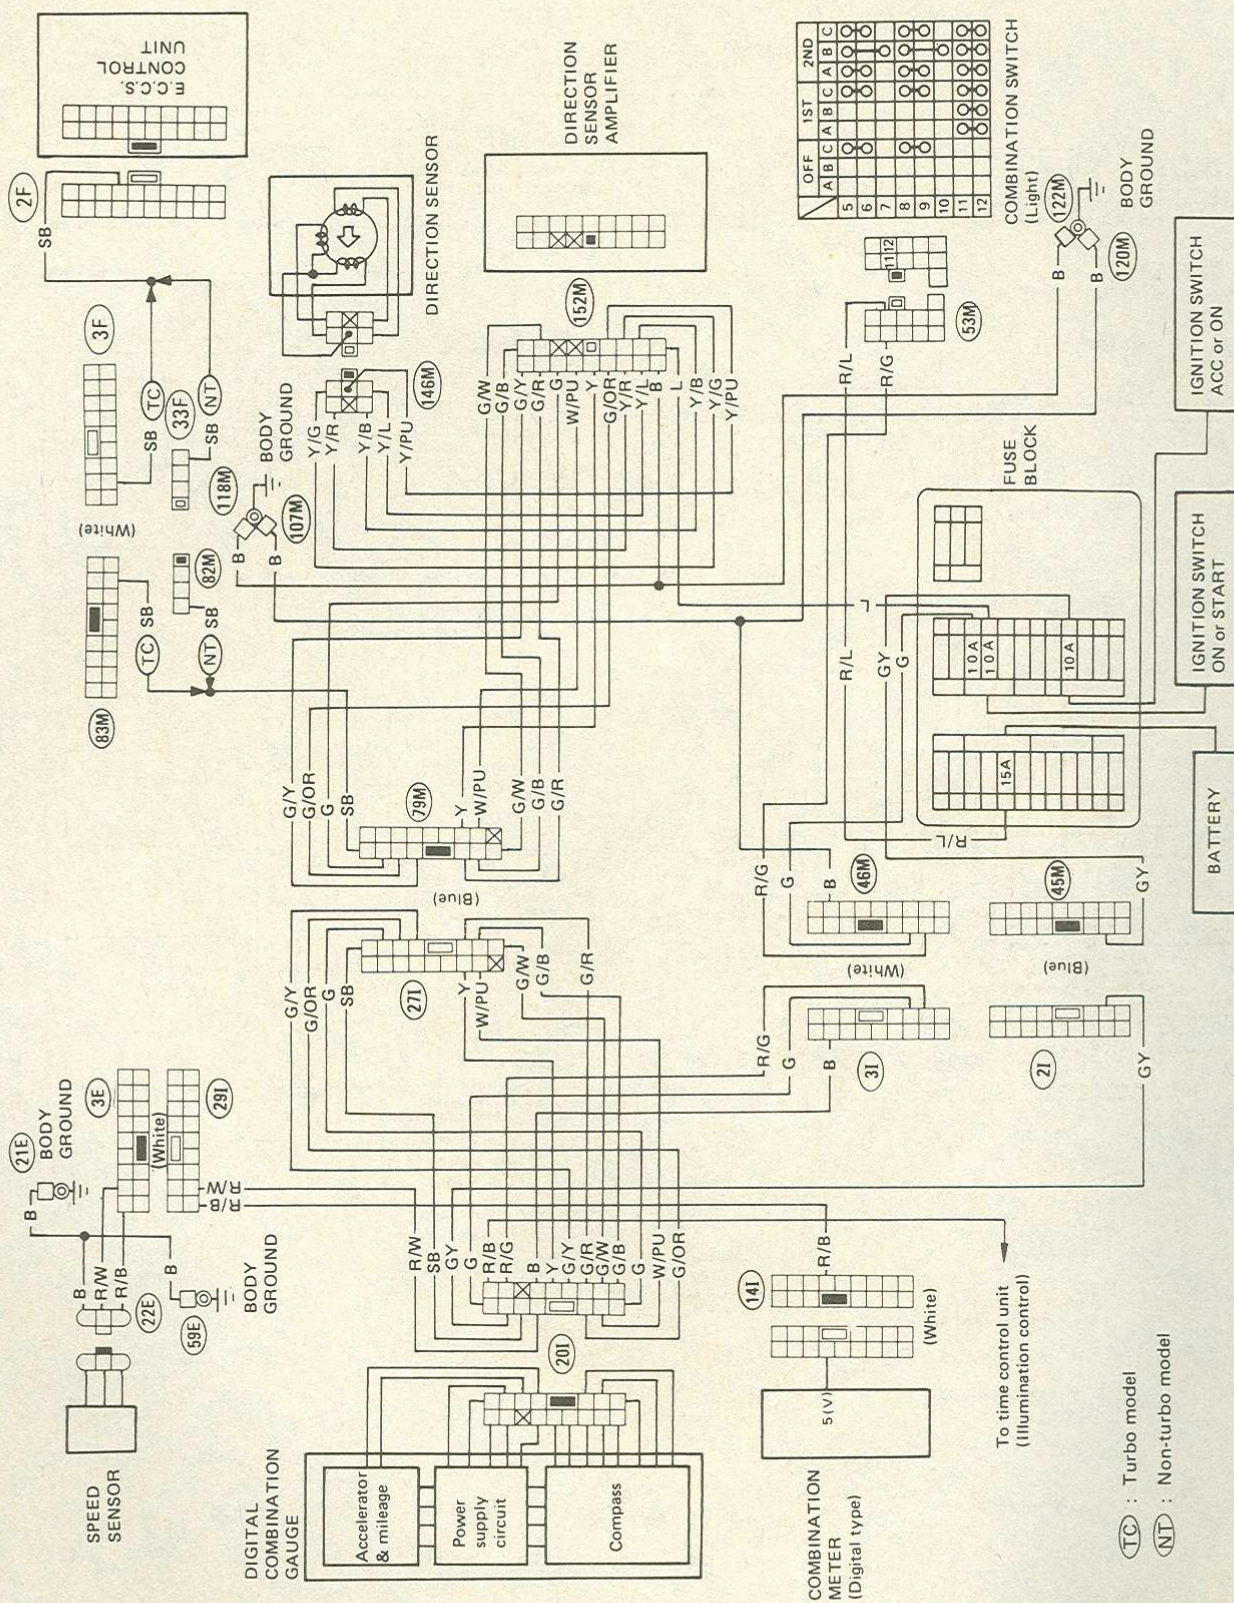


(TC) : Turbo model
(NT) : Non-turbo model

To time control unit
(illumination control)


COMBINATION
METER
(Digital type)

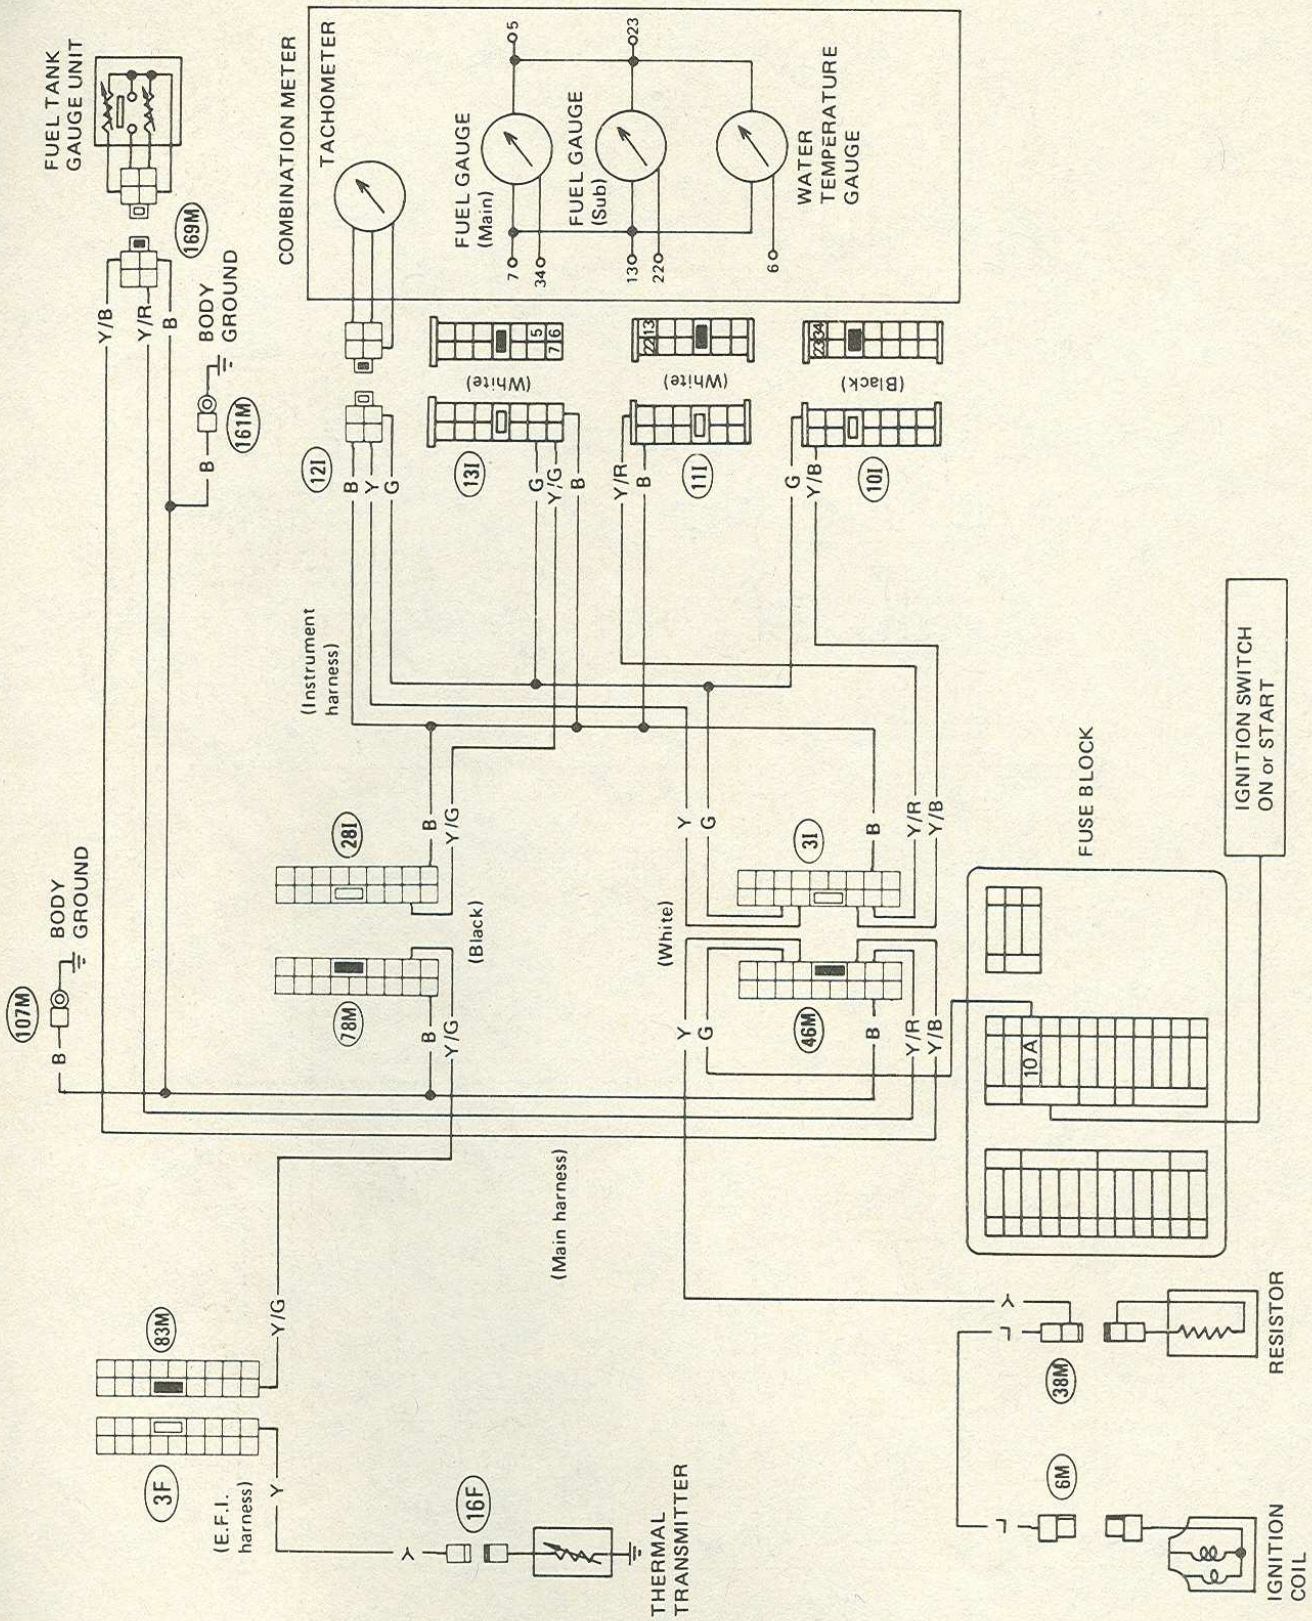


Needle type combination meter wiring diagram showing the tachometer, fuel and water temperature gauges

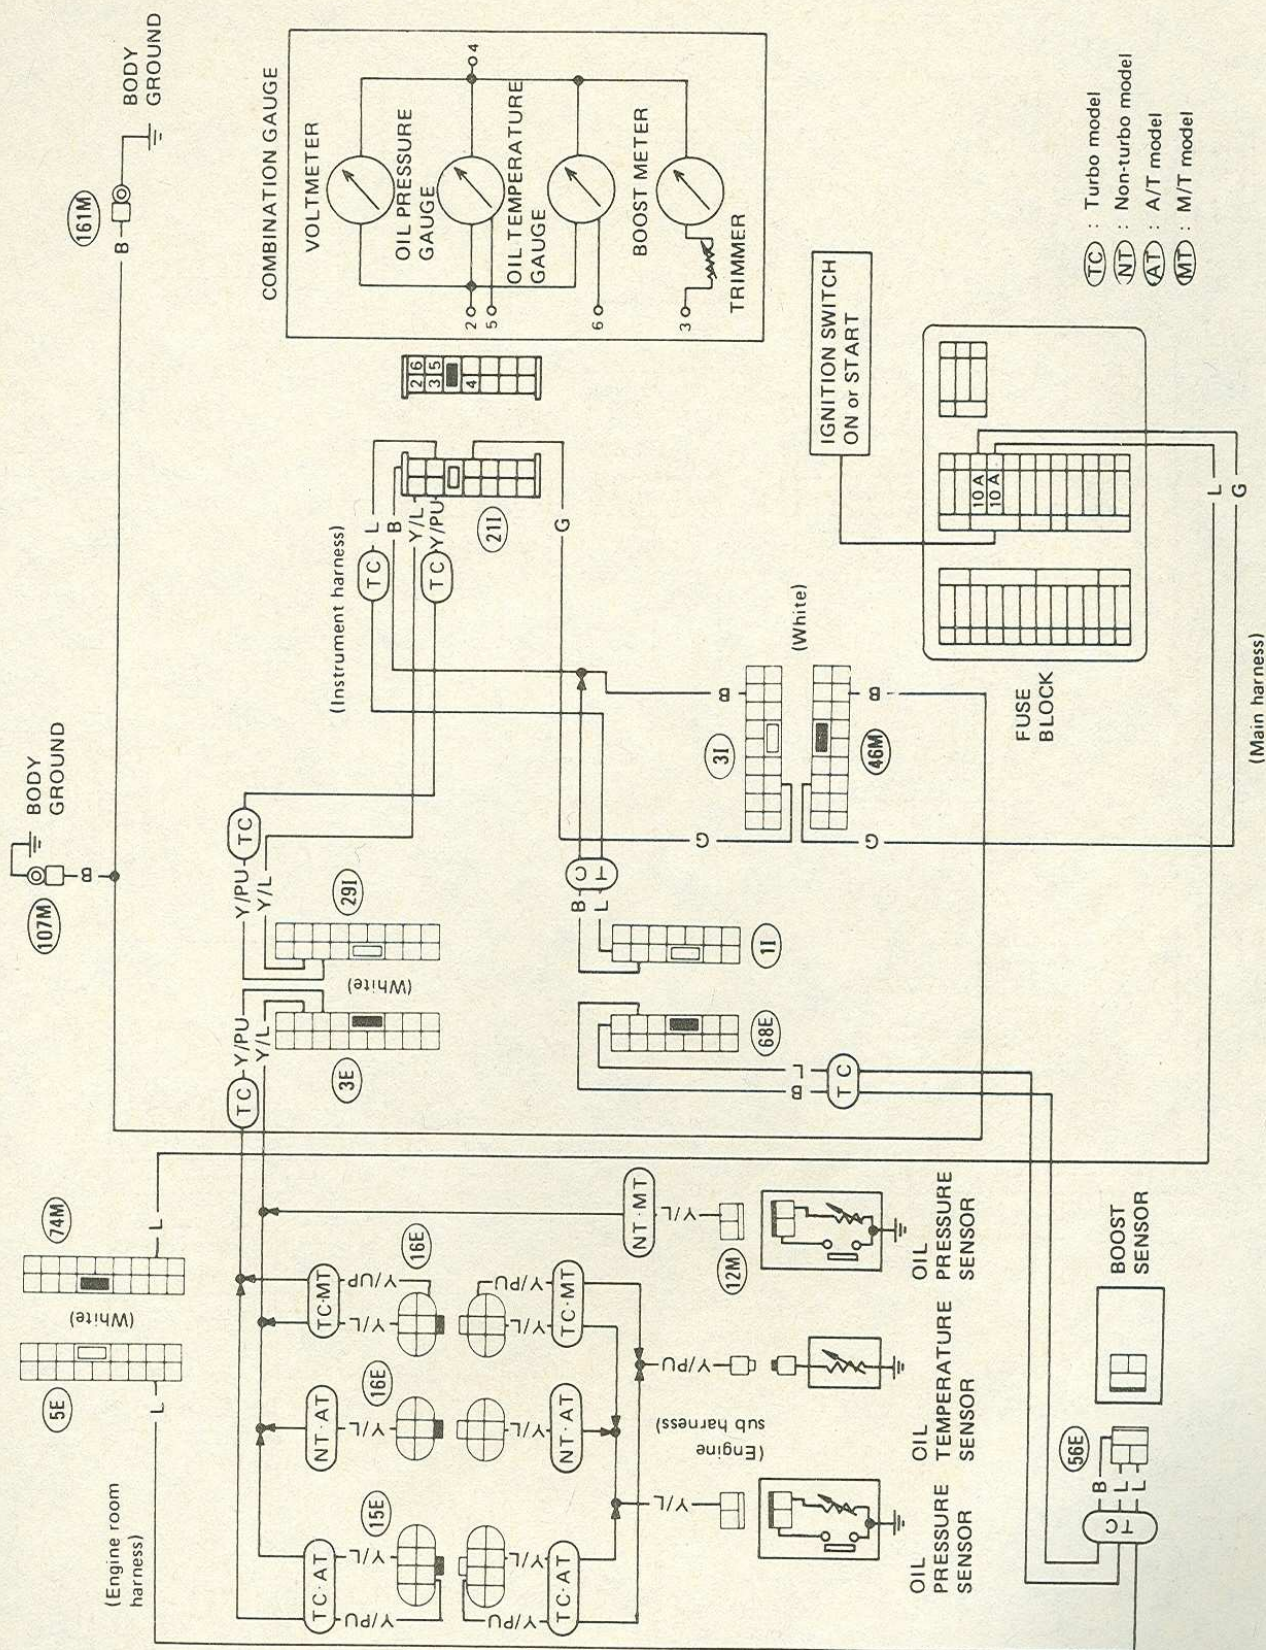


Needle type combination gauge — oil temperature, oil pressure, boost and volt gauges

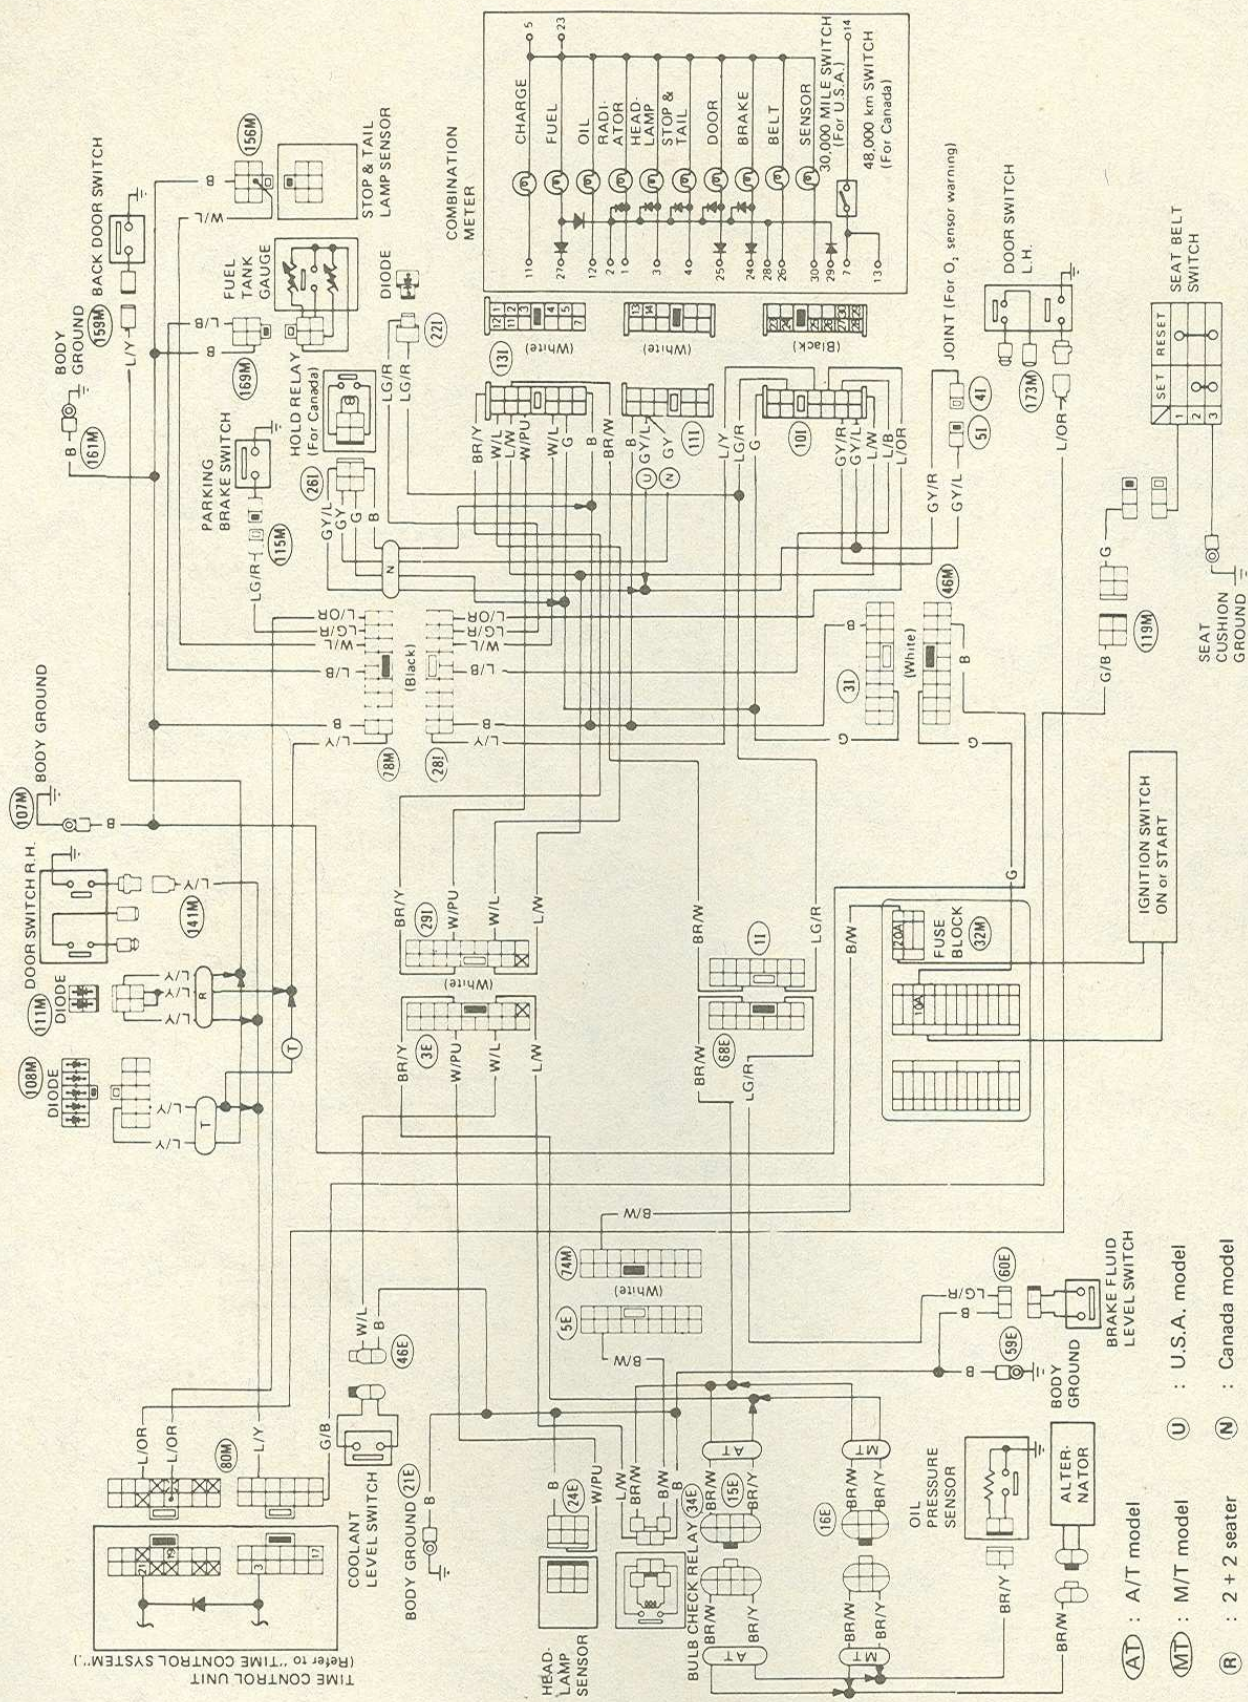

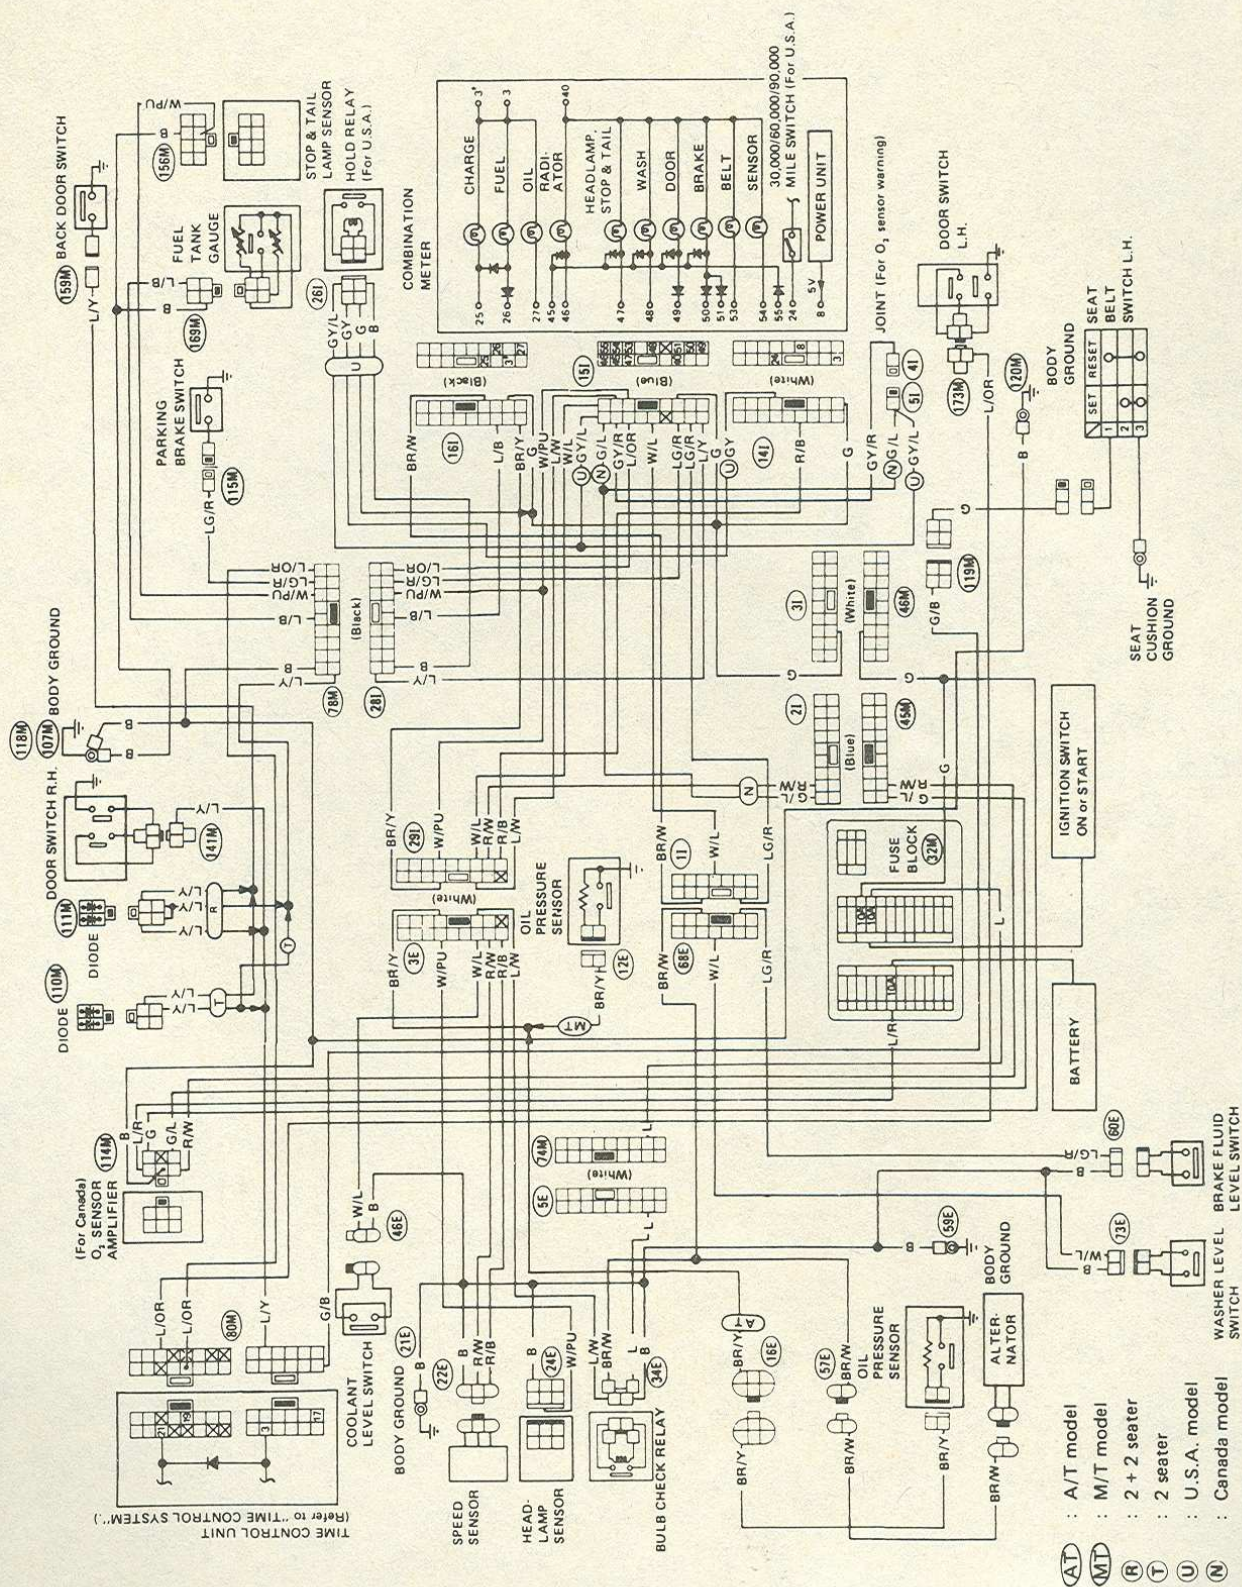


Non-turbo model (GLL) with digital type combination meter warning lamps




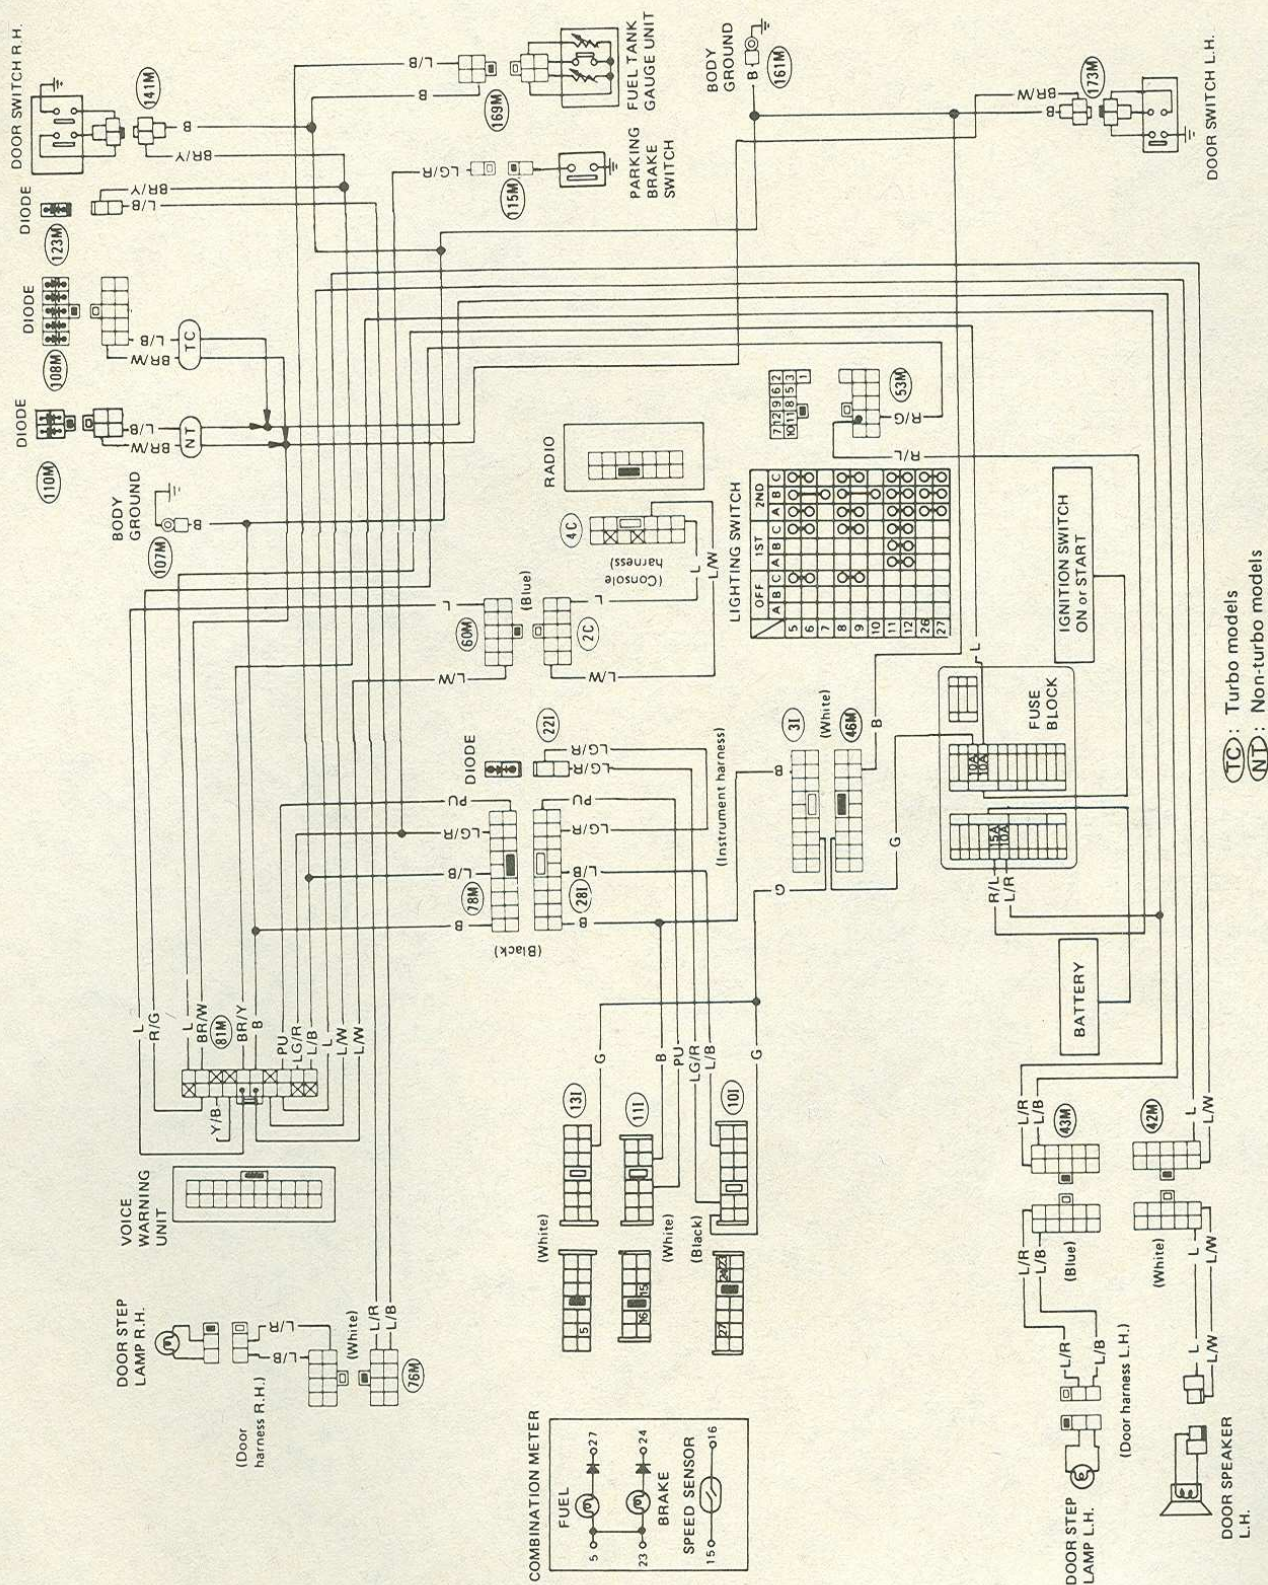


Typical 1985-86 needle type combination meter voice warning system

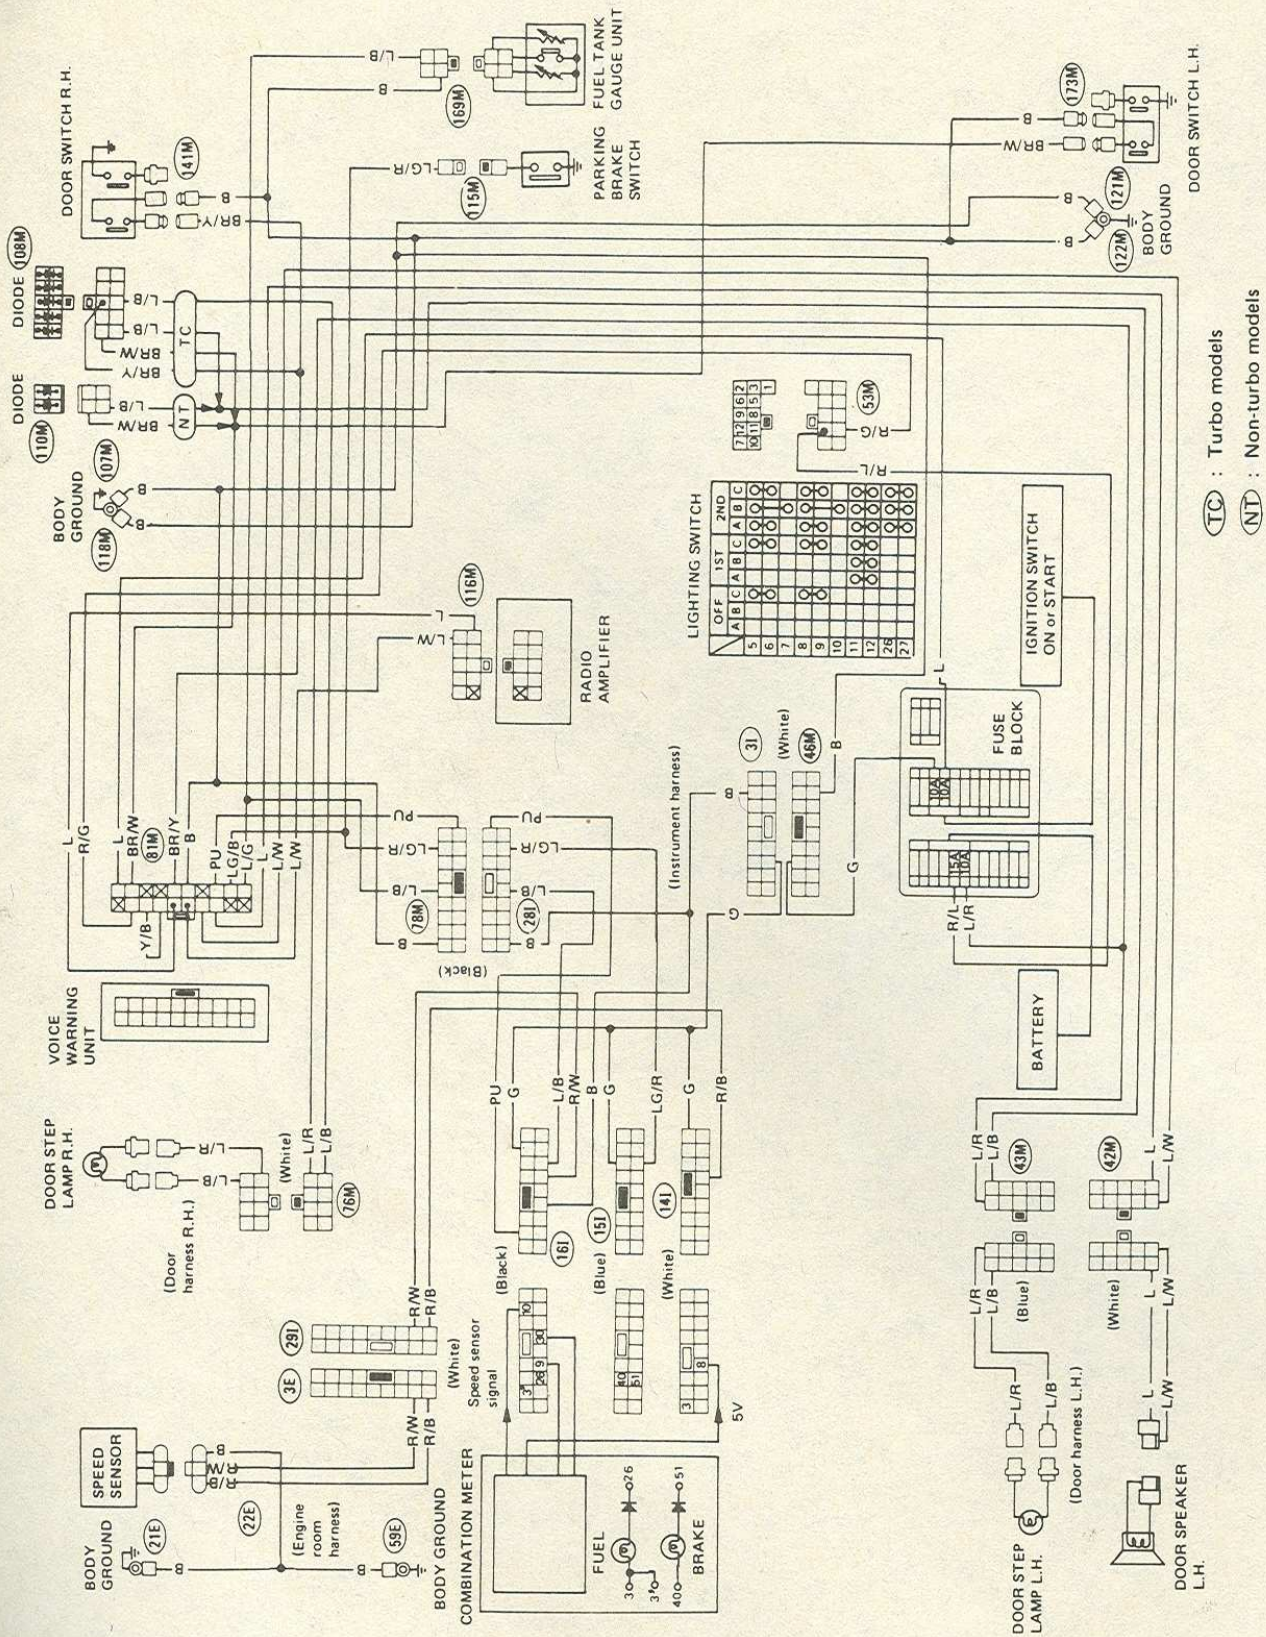

1985-86 Needle type combination meter voice warning system (Cont'd)

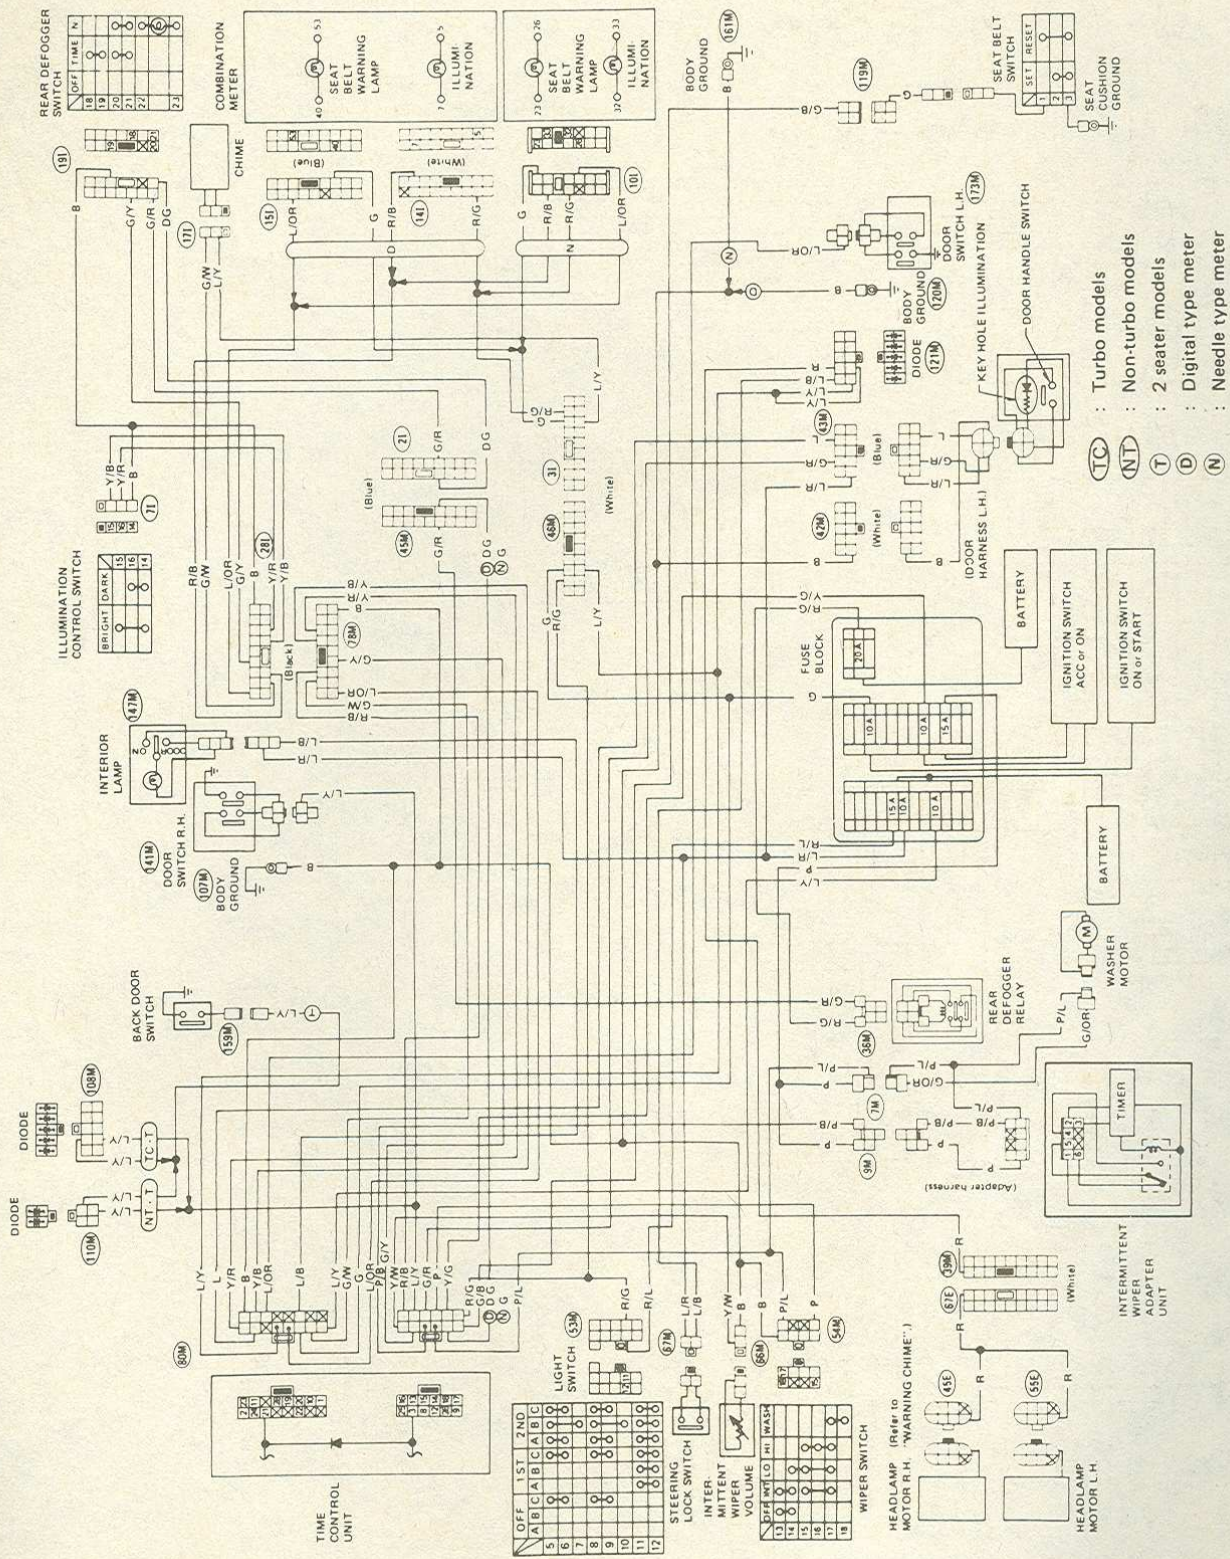


Time control system on GL and GLL models




SF model time control diagram


WITHOUT HEADLAMP SENSOR

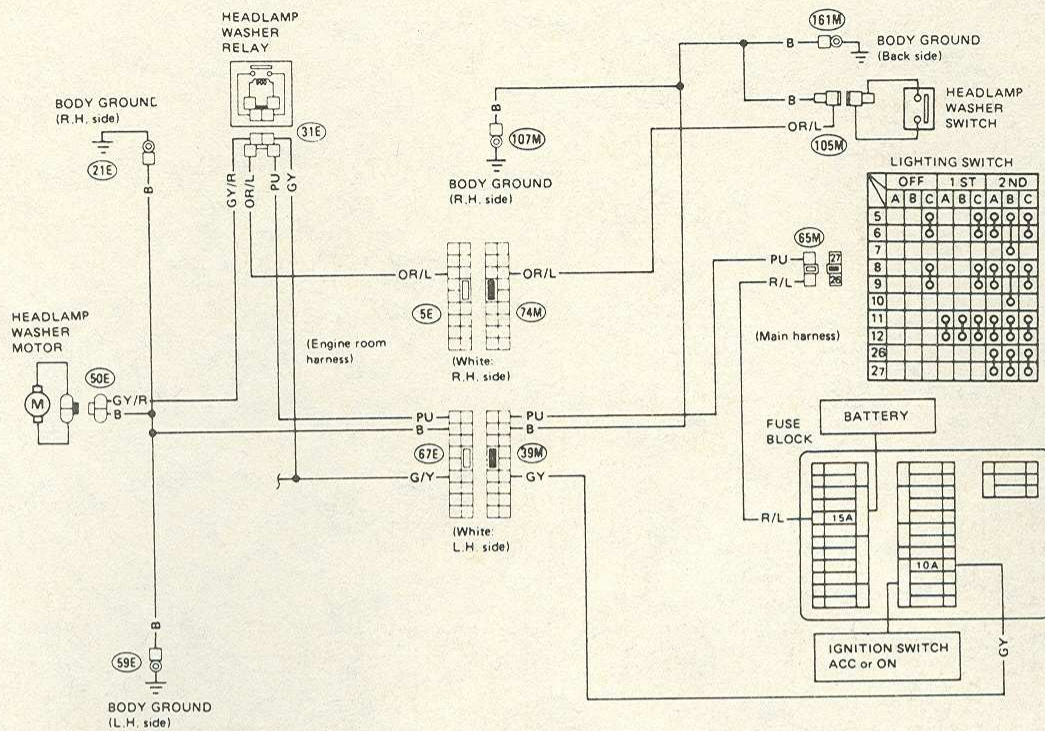


WITH HEADLAMP SENSOR

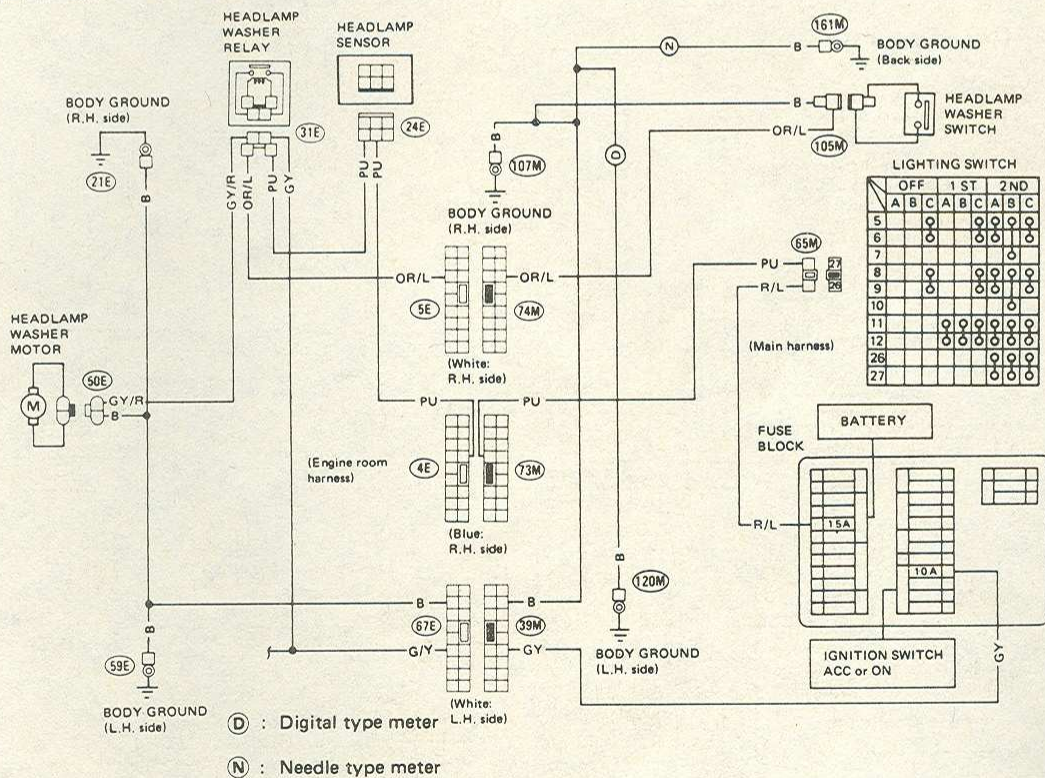

Front headlight washer system with or without a headlamp sensor

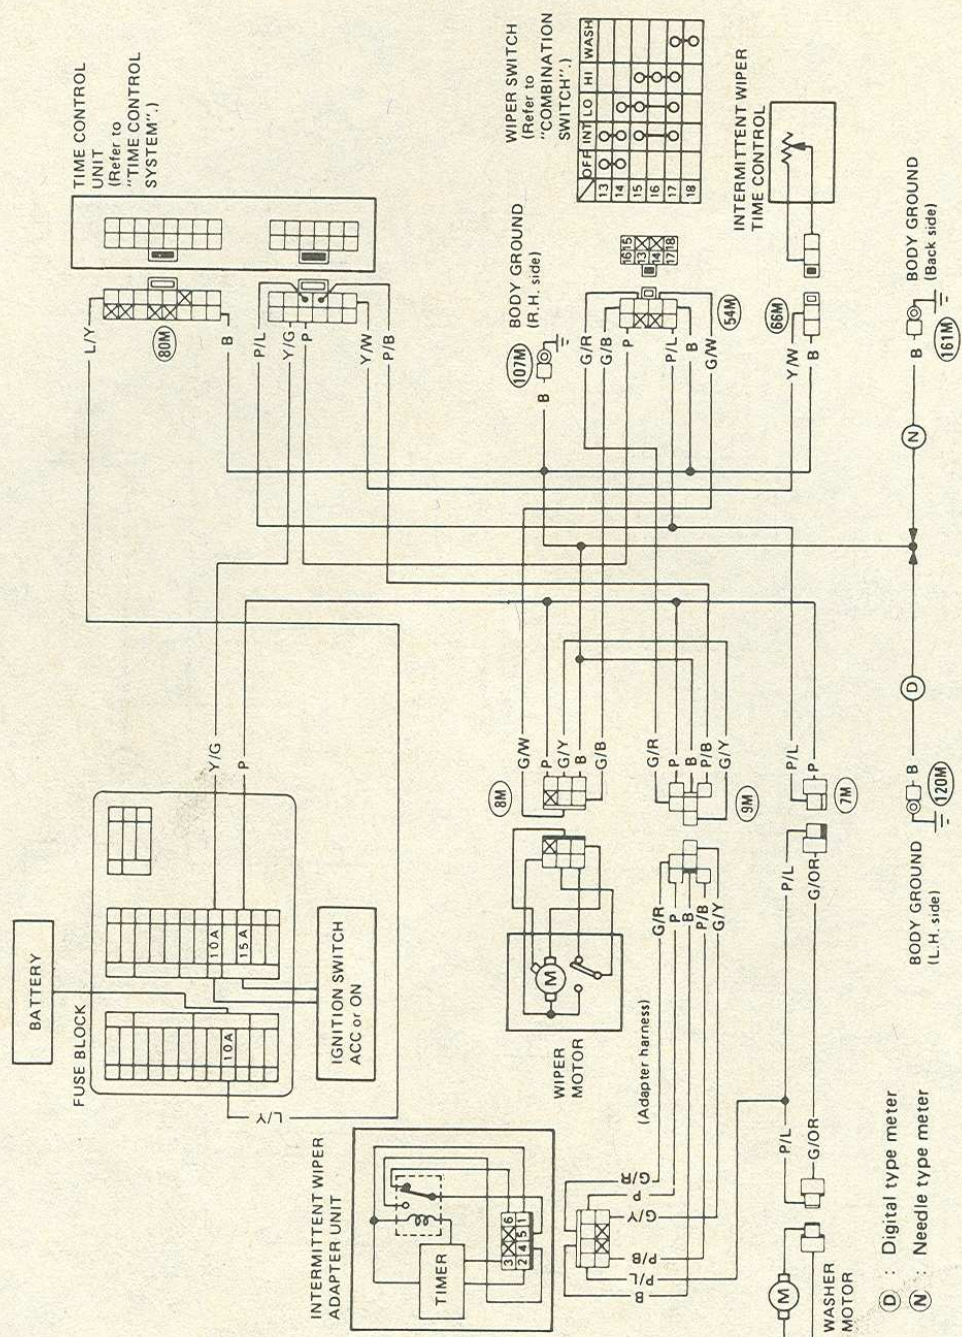


Windshield wiper and washer wiring diagram

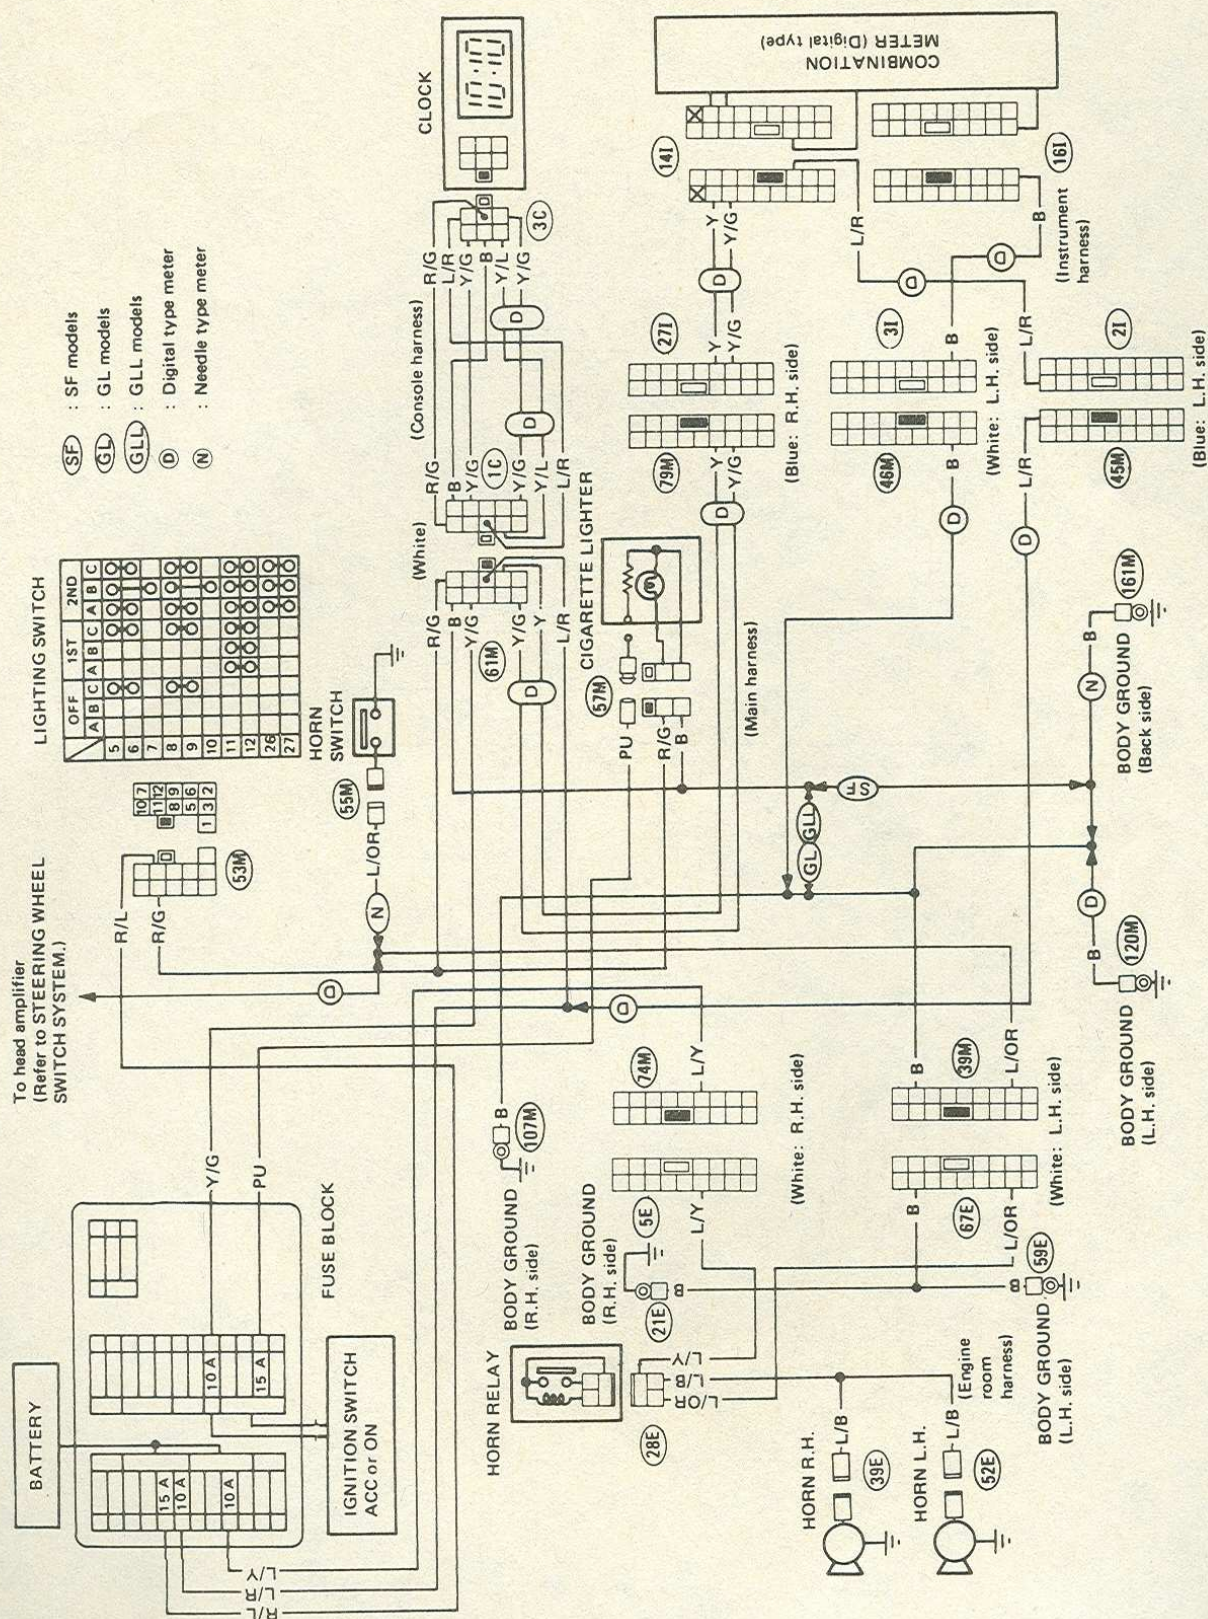


Horn, cigarette lighter and clock diagram


SF AND GL MODELS

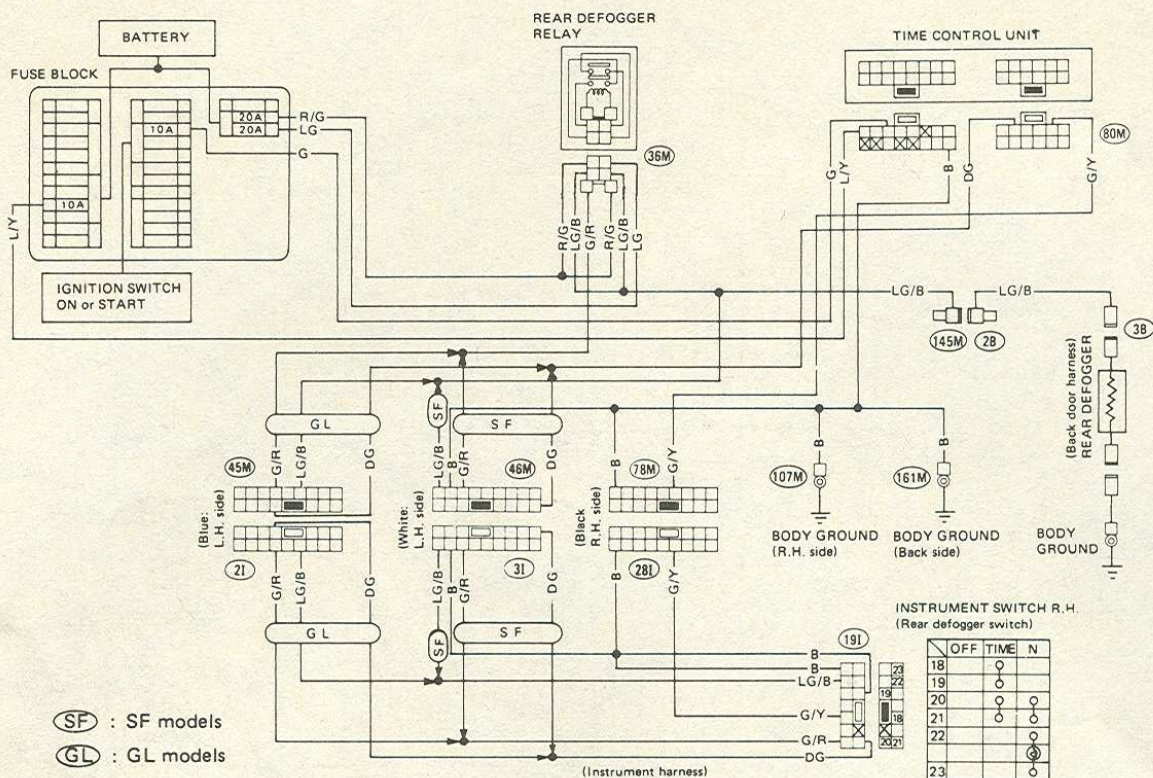


GLL MODEL

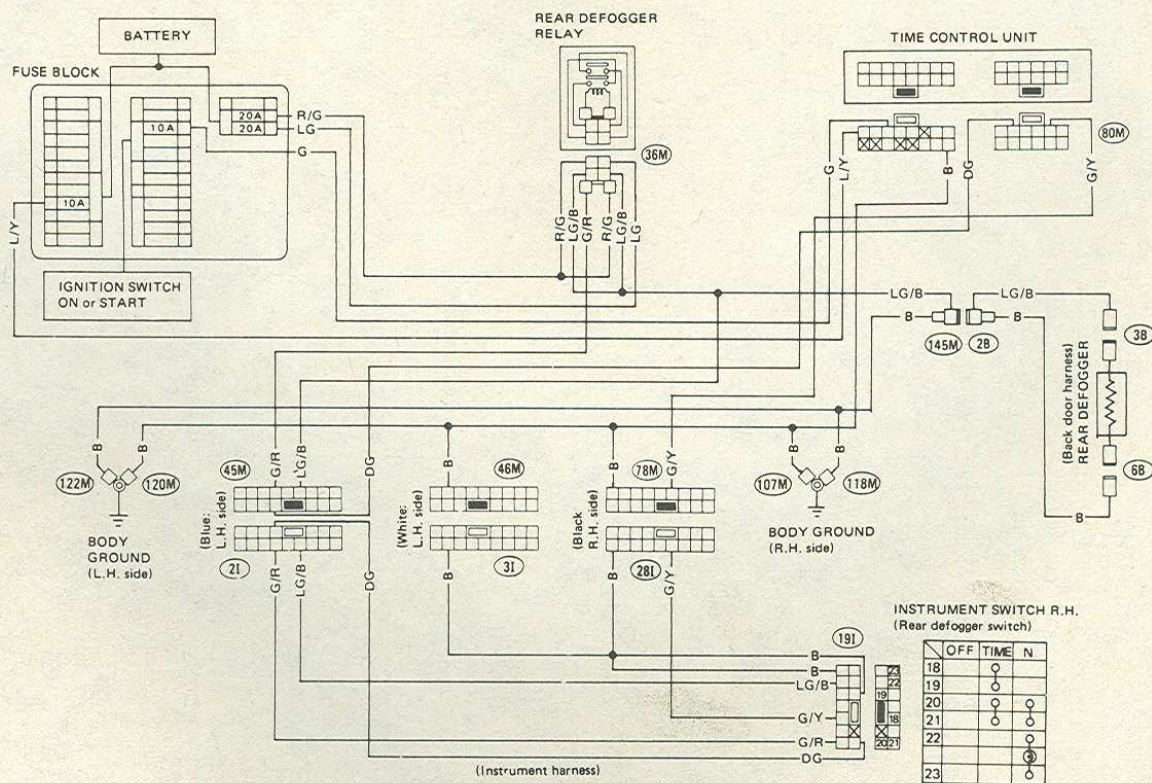


Rear window defogger; SF and GL models are shown together and the GLL model is separate

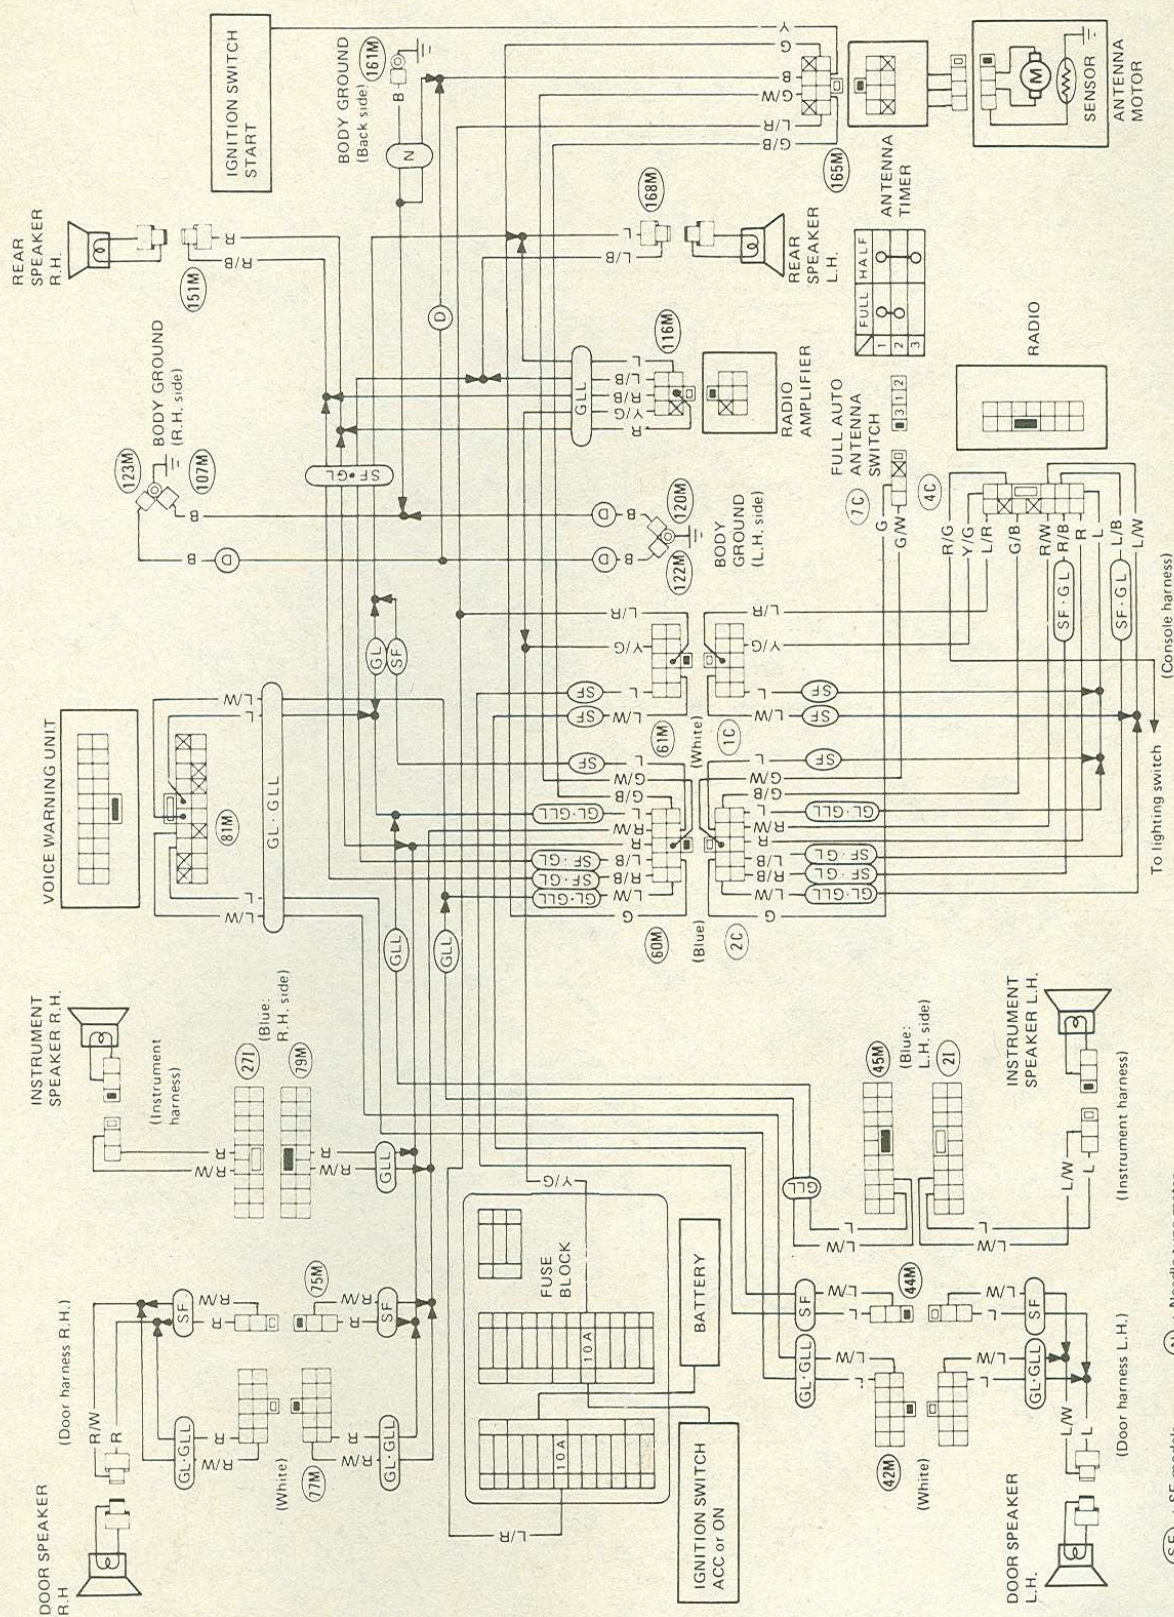


Audio and power antenna diagram

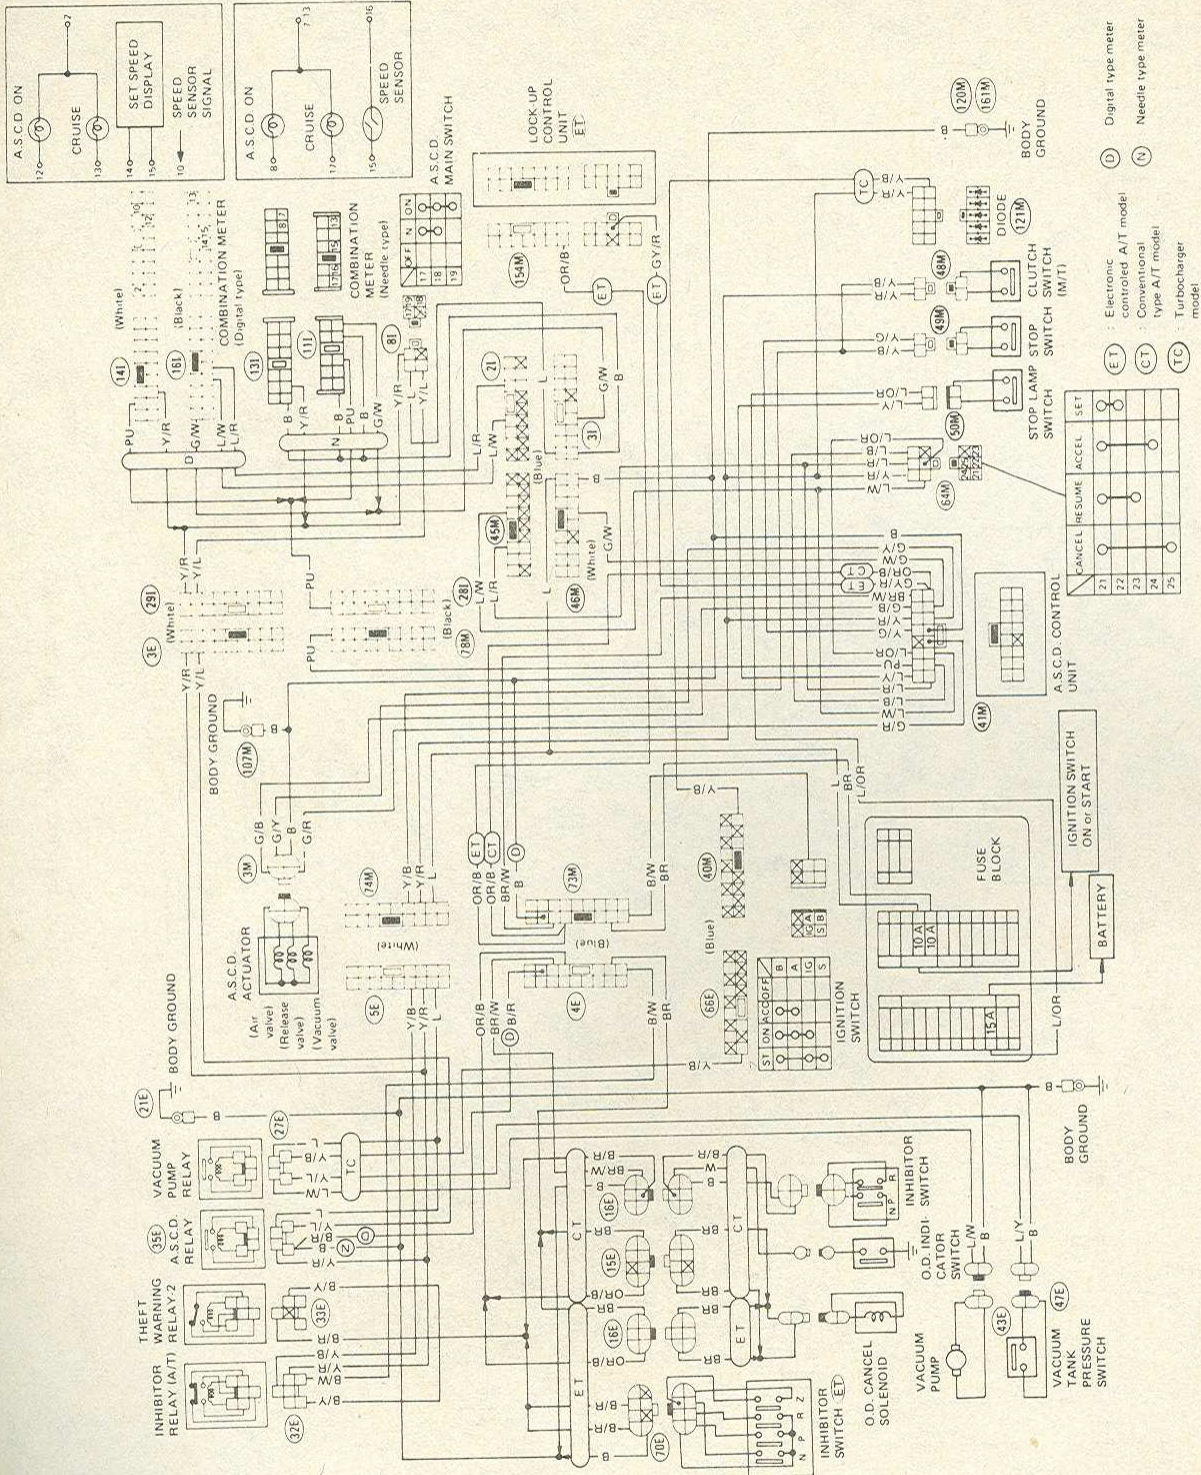


Automatic speed control device (ASCD) typical wiring diagram

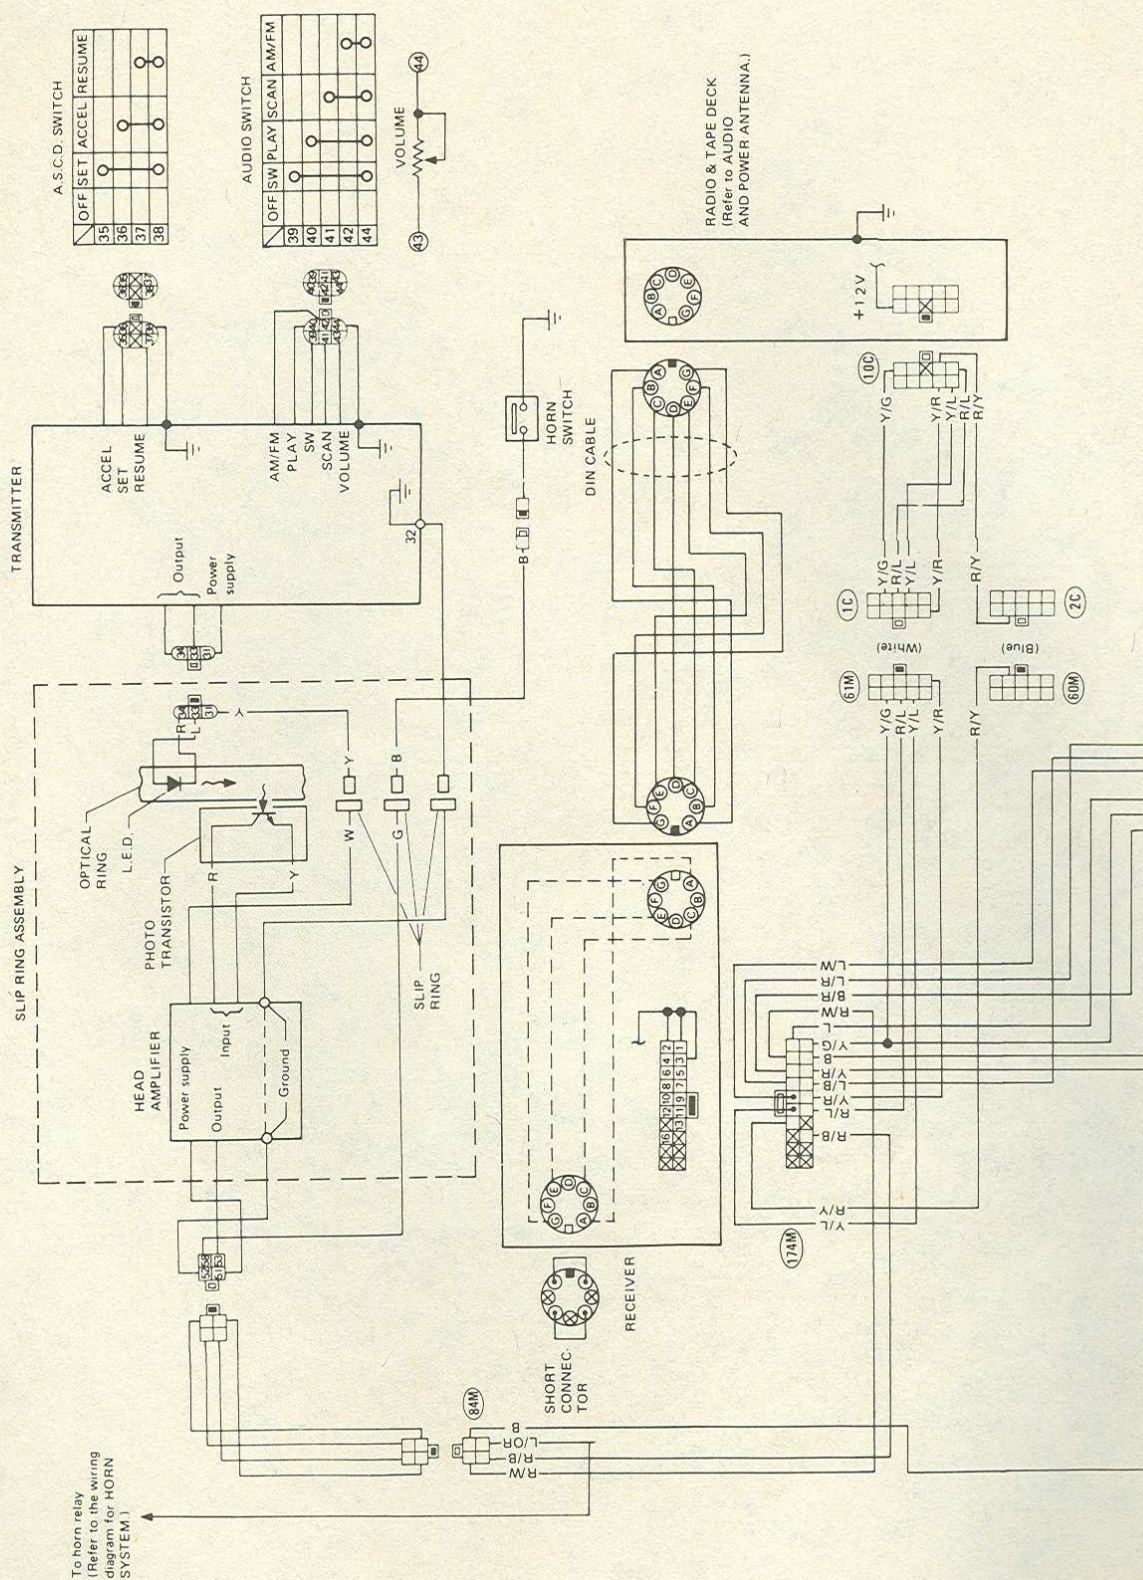


Steering wheel switch assembly



Steering wheel switch assembly (Cont'd)

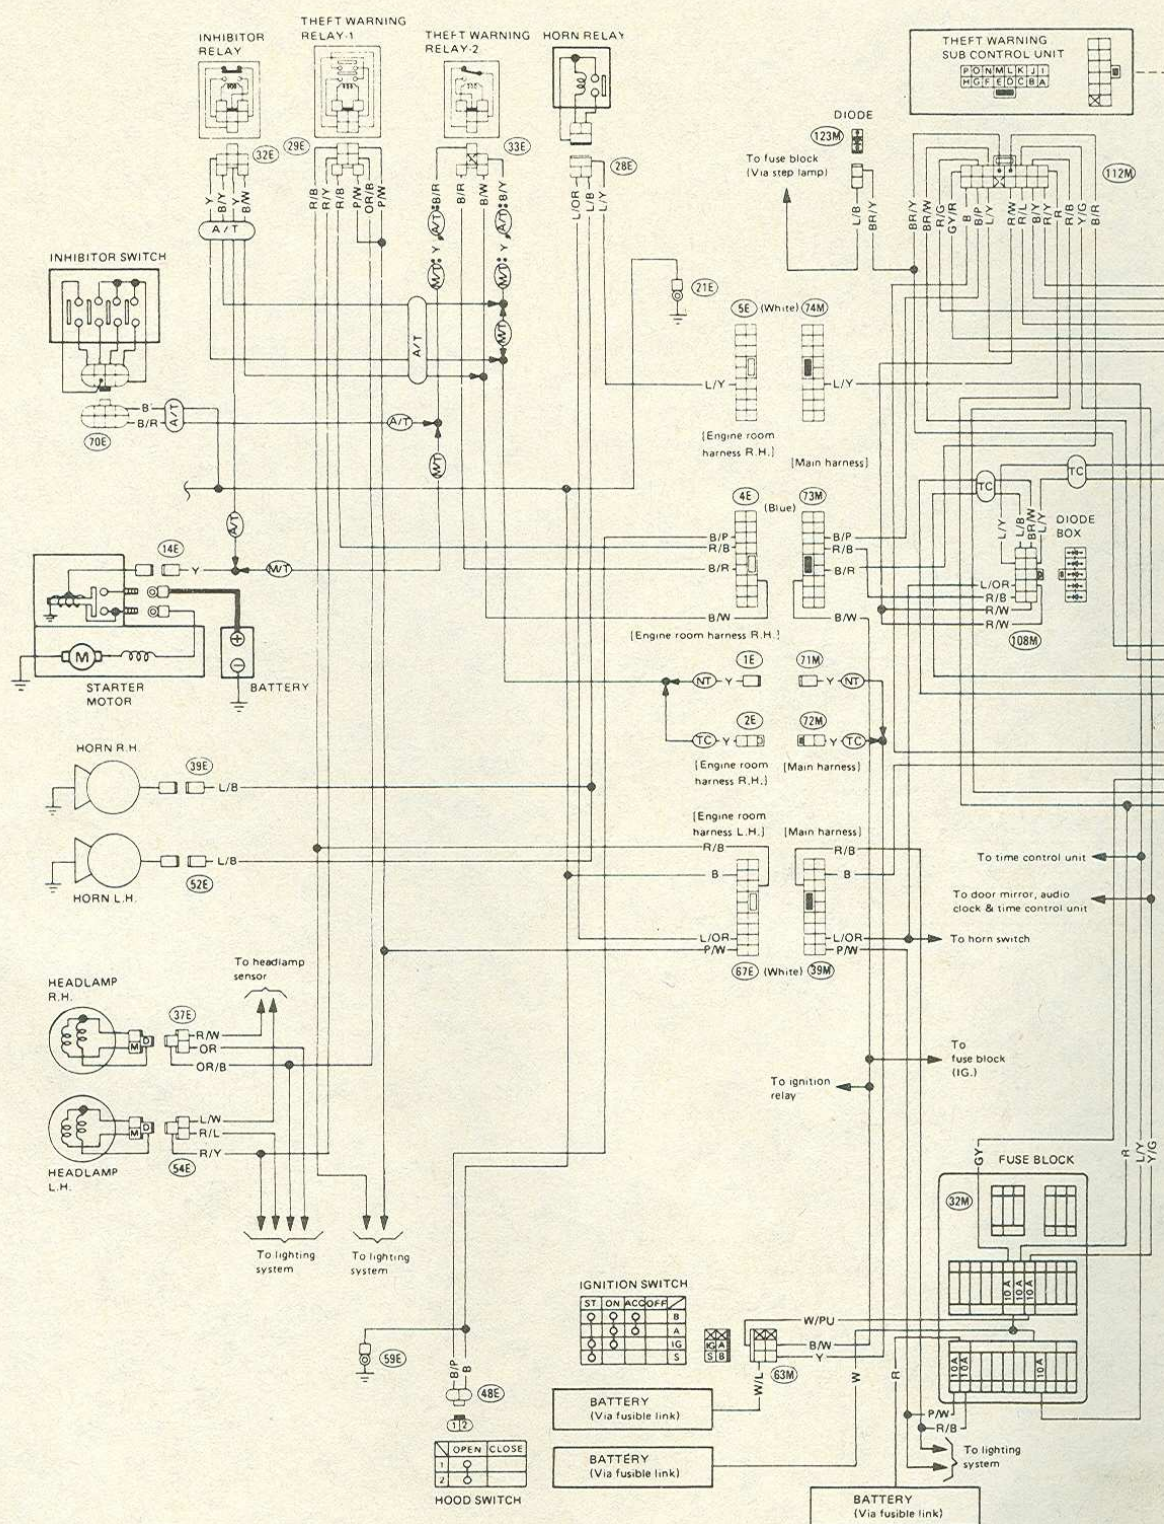

Theft warning system wiring diagram

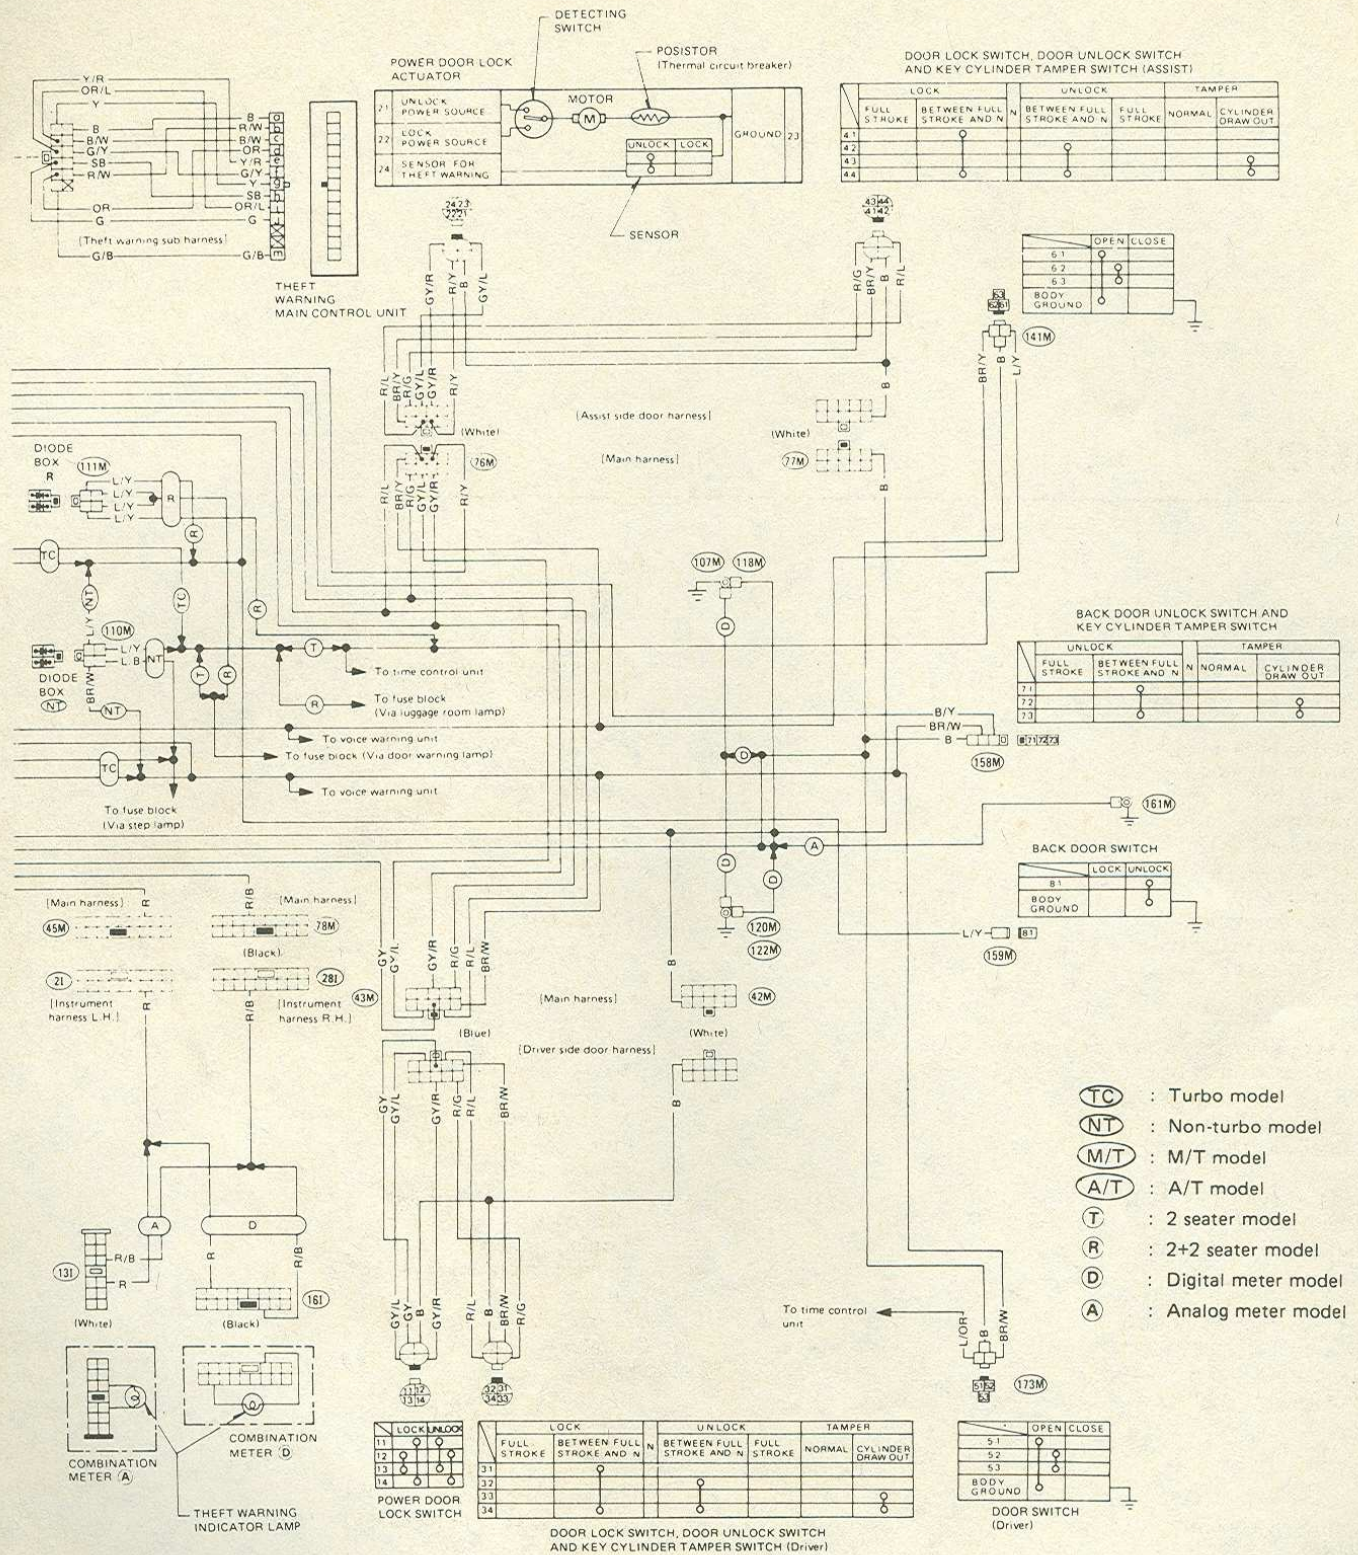

SEL936G

Theft warning system wiring diagram (Cont'd)